


For more Parts Information: https://manitowocfsq.sysonline.com/Default.aspx

TABLE OF CONTENTS

Manitowoc Foodservice [Updated: Sep. 30, 2013]	
Manitowoc - Ice & Related	
Parts Catalog	
Ice Machine	
RFS Series	
RFS Model - QuietQube	
RFS1200C, RCU1075	
RFS1200C Evaporator Assembly	1
RFS1200C Evaporator Compartment	
RFS1200C Panels	5
RCU1075 Remote Condenser	7
DCU1075 Condensing Unit Danals	(



RFS1200C EVAPORATOR ASSEMBLY

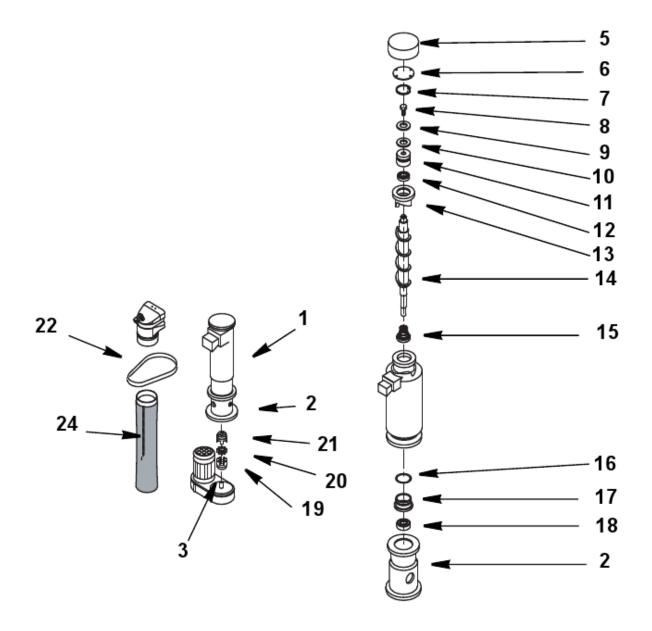



RFS1200C EVAPORATOR ASSEMBLY

#	PART#	DESCRIPTION	QTY	Note
1	000005682	Evaporator Assembly		
2	000005694	Evaporator Foundation		
2a	000012459	Bolt - Evaporator Foundation - M6 x 25mm		
3		Gearmotor Assembly		
3a	000006064	Gearmotor Assembly - 220V/60 Hz/1 Ph		
3b	000005699	Gearmotor Assembly - 230V/50 Hz/1 Ph		
4		Gearmotor Capacitor		
4a	000007822	Gearmotor Capacitor - 230V/50 Hz/1 Ph		
4b	000007823	Gearmotor Capacitor - 220V/60 Hz/1 Ph		
5	000005732	Insulating Cap		
6	000005646	Bearing Cap		
7	000005758	Snap Ring		
8	000005600	Auger Bolt		
9	000005610	Bearing Shim		
10	000005651	Self Lubricating Disc		
11	000005606	Upper Bearing		
12	000005736	Upper O-ring		
13	000005649	Cutter Head		
14	000005597	Auger		
15	000005779	Water Seal		
16	000005582	Lower O-Ring		
17	000005780	Water Seal Retainer		
18	000005604	Lower Bearing		
19	000005643	Flex Jaw Coupling Lower		
20	000005644	Flex Jaw Coupling Spider		
21	000005571	Flex Jaw Coupling Upper		
22	000011624	Ice Chute with Bulb Holder and Bin Thermostat		
22	000011620	Ice Chute with Bulb Holder		
22	000007906	Ice Exhaust with Microswitch		
22	000011623	Bin Thermostat		[1]
22	000007918	Cross Bar		
22	000007907	Locking Strip		
22	000007919	Ice Chute Assembly		[2]
22	000007917	Ice Outlet Pipe Assembly		[2]
23	000008643	Ice Chute Extension		
24	000007916	Bulb Holder		[2]


PART NOTES:

Before Serial Number M05995632012 must order 000011624 (bin thermostat AND ice chute with bulb holder). [1]

[2] - Discontinued



RFS1200C EVAPORATOR COMPARTMENT

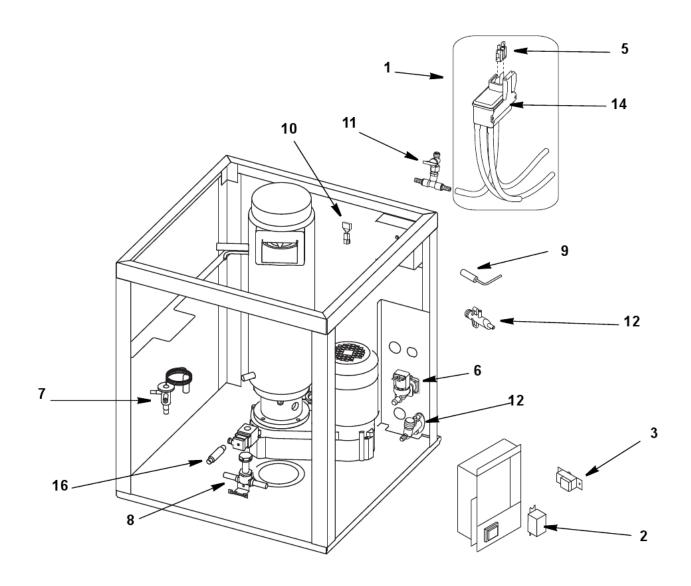



RFS1200C EVAPORATOR COMPARTMENT


1 000012451 Water Reservoir Assembly [1] 1a 000005747 Water Reservoir Only 2 000005745 Compressor Delay Relay - 230V/50-60 Hz/1 Ph 3 000011623 Bin Thermostat [2] 3 000005765 Bin Thermostat [3] 4 000005763 ON/OFF Rocker Switch 5 000005760 Float Microswitch (each) 6 Water Inlet Valve 6a 00000658 Water Inlet Valve - 220V/60 Hz/1 Ph 7 000005770 Water Inlet Valve - 220-230V/50-60 Hz/1 Ph 7 00000668 Expansion Valve 8a 000006244 Solenoid Valve 8b 000008763 Valve Coil - 60 Hz 9 00011863 Rotation Sensor 10 000005678 Electronic Noise Reducer 11 000008572 Evaporator Drain Tap 12 Drain Manifold - 115-230V/60 Hz/1 Ph 13 Access Valve 13a 000006408 Fitting - Access Valve 13b 000006409 Core - Access Valve 13c 000006410 Cap - Access Valve 15a 00000641 Screw - MS x 10TC [4] 15b 00000940 Screw - MS x 10TC [4] 16 00000871 Backflow Preventer 60 Hz - 3/8* 17b 000009972 Backflow Preventer 50 Hz - 3/4*	#	PART#	DESCRIPTION	QTY	Note
1a 000005747 Water Reservoir Only 2 000005745 Compressor Delay Relay - 230V/50-60 Hz/1 Ph 3 000011623 Bin Thermostat [2] 3 000005765 Bin Thermostat [3] 4 000005760 Float Microswitch (each) 6 Water Inlet Valve Water Inlet Valve - 220V/60 Hz/1 Ph 6a 00000658 Water Inlet Valve - 220V/60 Hz/1 Ph 7 000008689 Expansion Valve 8 Harvest Valve 8a 000006244 Solenoid Valve 8b 000008763 Valve Coil - 60 Hz 9 000011883 Rotation Sensor 10 000005678 Electronic Noise Reducer 11 00000852 Evaporator Drain Tap 12a 000006161 Drain Manifold - 115-230V/60 Hz/1 Ph 12b 000006408 Fitting - Access Valve 13a 000006409 Core - Access Valve 13b 00006409 Core - Access Valve 15a 000006410 Cap - Access Valve	1	000012451	Water Reservoir Assembly		[1]
3	1a	000005747	Water Reservoir Only		
3 00005765 4 000005763 5 000005760 Float Microswitch (each) 6 Water Inlet Valve 6a 00000658 Water Inlet Valve - 220V/60 Hz/1 Ph 7 000008689 Expansion Valve 8a 000006244 Solenoid Valve 8b 000008763 Valve Coil - 60 Hz 9 00011883 Rotation Sensor 10 00008678 Electronic Noise Reducer 11 00000852 Expansion Valve 12 Drain Manifold - 115-230V/60 Hz/1 Ph 12b 00000569 Drain Manifold - 208-230V/50-60 Hz/1 Ph 13 Access Valve 13a 000006408 Fitting - Access Valve 13b 000006410 Cap - Access Valve 14 000005754 Reservoir Bracket 15 Screws 15 Screws 15 Backflow Preventer 60 Hz - 3/8*	2	000005745	Compressor Delay Relay - 230V/50-60 Hz/1 Ph		
4 000005763 ON/OFF Rocker Switch 5 000005760 Float Microswitch (each) 6a 000006058 Water Inlet Valve - 220V/60 Hz/1 Ph 6b 000005770 Water Inlet Valve - 220-230V/50-60 Hz/1 Ph 7 000008689 Expansion Valve 8a 000006244 Solenoid Valve 8b 000008763 Valve Coil - 60 Hz 9 000011883 Rotation Sensor 10 00005678 Electronic Noise Reducer 11 000008562 Evaporator Drain Tap 12a Drain Manifold Drain Manifold - 115-230V/60 Hz/1 Ph 12b 000005669 Drain Manifold - 208-230V/50-60 Hz/1 Ph 13 Access Valve 13a 00006408 Fitting - Access Valve 13c 000006409 Core - Access Valve 15 Screws 15a 00000940 Screw - M5 x 10TC [4] 15b 000009641 Screw - 3.9 x 13TC [4] 16 00000971 Backflow Preventer Backflow Preventer 60 Hz - 3/8"	3	000011623	Bin Thermostat		[2]
Float Microswitch (each) Water Inlet Valve	3	000005765	Bin Thermostat		[3]
6a 000006058 Water Inlet Valve - 220V/60 Hz/1 Ph 6b 000005770 Water Inlet Valve - 220-230V/50-60 Hz/1 Ph 7 000008689 Expansion Valve 8a 000006244 Solenoid Valve 8b 000008763 Valve Coil - 60 Hz 9 000011883 Rotation Sensor 10 000005678 Electronic Noise Reducer 11 000008552 Evaporator Drain Tap 12 Drain Manifold Drain Manifold - 115-230V/60 Hz/1 Ph 13a 000005699 Drain Manifold - 208-230V/50-60 Hz/1 Ph 13a 000006408 Fitting - Access Valve 13b 000006409 Core - Access Valve 13c 000006410 Cap - Access Valve 15 Screws 15a 000009040 Screw - M5 x 10TC [4] 15b 000009040 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17a Backflow Preventer Backflow Preventer 60 Hz - 3/8"	4	000005763	ON/OFF Rocker Switch		
6a 000006058 Water Inlet Valve - 220V/60 Hz/1 Ph 6b 000005770 Water Inlet Valve - 220-230V/50-60 Hz/1 Ph 7 000008689 Expansion Valve 8a 000006244 Solenoid Valve 8b 000008763 Valve Coil - 60 Hz 9 000011883 Rotation Sensor 10 000005678 Electronic Noise Reducer 11 000008552 Evaporator Drain Tap 12 Drain Manifold 12a 000006161 Drain Manifold - 115-230V/60 Hz/1 Ph 12b 000005669 Drain Manifold - 208-230V/50-60 Hz/1 Ph 13 Access Valve 13a 000006408 Fitting - Access Valve 13b 000006409 Core - Access Valve 13c 000006410 Cap - Access Valve 14 000005754 Reservoir Bracket 15 Screws 15a 000009040 Screw - M5 x 10TC [4] 15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17 Backflow Preventer 17a 000009971	5	000005760	Float Microswitch (each)		
6b 000005770 Water Inlet Valve - 220-230V/50-60 Hz/1 Ph 7 000008689 Expansion Valve 8 Harvest Valve 8a 000006244 Solenoid Valve 8b 000008763 Valve Coil - 60 Hz 9 00011883 Rotation Sensor 10 00005678 Electronic Noise Reducer 11 00000852 Evaporator Drain Tap 12a Drain Manifold Drain Manifold 12a 000006161 Drain Manifold - 208-230V/50-60 Hz/1 Ph 13 Access Valve 13a 00006408 Fitting - Access Valve 13b 00006409 Core - Access Valve 14 00005754 Reservoir Bracket 15 Screws 15a 00009040 Screw - M5 x 10TC [4] 15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17 Backflow Preventer 17 Backflow Preventer	6		Water Inlet Valve		
7 000008689 Expansion Valve 8 Harvest Valve 8a 000006244 Solenoid Valve 8b 000008763 Valve Coil - 60 Hz 9 000011883 Rotation Sensor 10 000005678 Electronic Noise Reducer 11 000008552 Evaporator Drain Tap 12 Drain Manifold 115-230V/60 Hz/1 Ph 12b 000005669 Drain Manifold - 208-230V/50-60 Hz/1 Ph 13 Access Valve 13a 00006408 Fitting - Access Valve 13b 000006409 Core - Access Valve 14 00005754 Reservoir Bracket 15 Screws 15a 000009040 Screw - M5 x 10TC [4] 15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17 Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	6a	000006058	Water Inlet Valve - 220V/60 Hz/1 Ph		
8a 000006244 8b 000008763 Valve Coil - 60 Hz 9 000011883 Rotation Sensor 10 0000085678 Electronic Noise Reducer 11 000008552 Evaporator Drain Tap 12 Drain Manifold 12a 000006161 Drain Manifold - 115-230V/60 Hz/1 Ph 12b 000005669 Drain Manifold - 208-230V/50-60 Hz/1 Ph 13 Access Valve 13a 000006408 Fitting - Access Valve 13b 000006409 Core - Access Valve 13c 000006410 Cap - Access Valve 14 000005754 Reservoir Bracket 15 Screws 15a 000009040 Screw - M5 x 10TC [4] 15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17 Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	6b	000005770	Water Inlet Valve - 220-230V/50-60 Hz/1 Ph		
8a 000006244 Solenoid Valve 8b 000008763 Valve Coil - 60 Hz 9 000011883 Rotation Sensor 10 000005678 Electronic Noise Reducer 11 000008552 Evaporator Drain Tap 12 Drain Manifold 115-230V/60 Hz/1 Ph 12a 000005669 Drain Manifold - 208-230V/50-60 Hz/1 Ph 13 Access Valve 13a 00006408 Fitting - Access Valve 13b 000006409 Core - Access Valve 13c 000006410 Cap - Access Valve 14 000005754 Reservoir Bracket 15 Screws 15a 000009040 Screw - M5 x 10TC [4] 15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17 Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	7	000008689	Expansion Valve		
8b 000008763 Valve Coil - 60 Hz 9 000011883 Rotation Sensor 10 000005678 Electronic Noise Reducer 11 000008552 Evaporator Drain Tap 12 Drain Manifold Drain Manifold - 115-230V/60 Hz/1 Ph 12b 000005669 Drain Manifold - 208-230V/50-60 Hz/1 Ph 13 Access Valve 13a 00006408 Fitting - Access Valve 13b 00006409 Core - Access Valve 13c 00006410 Cap - Access Valve 14 00005754 Reservoir Bracket 15 Screws 15a 000009040 Screw - M5 x 10TC [4] 15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17 Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	8		Harvest Valve		
9 000011883 Rotation Sensor 10 000005678 Electronic Noise Reducer 11 000008552 Evaporator Drain Tap 12 Drain Manifold Drain Manifold - 115-230V/60 Hz/1 Ph 12b 000005669 Drain Manifold - 208-230V/50-60 Hz/1 Ph 13 Access Valve 13a 000006408 Fitting - Access Valve 13b 000006409 Core - Access Valve 13c 000006410 Cap - Access Valve 14 00005754 Reservoir Bracket 15a Screws M5 x 10TC [4] 15b 000009040 Screw - M5 x 10TC [4] 15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17 Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	8a	000006244	Solenoid Valve		
Electronic Noise Reducer	8b	000008763	Valve Coil - 60 Hz		
11 000008552 Evaporator Drain Tap 12 Drain Manifold 12a 000006161 Drain Manifold - 115-230V/60 Hz/1 Ph 12b 000005669 Drain Manifold - 208-230V/50-60 Hz/1 Ph 13 Access Valve 13a 000006408 Fitting - Access Valve 13b 000006409 Core - Access Valve 13c 000006410 Cap - Access Valve 14 00005754 Reservoir Bracket 15 Screws 15a 000009040 Screw - M5 x 10TC [4] 15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17 Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	9	000011883	Rotation Sensor		
12 Drain Manifold 12a 000006161 Drain Manifold - 115-230V/60 Hz/1 Ph 12b 000005669 Drain Manifold - 208-230V/50-60 Hz/1 Ph 13 Access Valve 13a 000006408 Fitting - Access Valve 13b 000006409 Core - Access Valve 13c 000006410 Cap - Access Valve 14 000005754 Reservoir Bracket 15 Screws 15a 000009040 Screw - M5 x 10TC [4] 15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17 Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	10	000005678	Electronic Noise Reducer		
12a 000006161 Drain Manifold - 115-230V/60 Hz/1 Ph 12b 000005669 Drain Manifold - 208-230V/50-60 Hz/1 Ph 13 Access Valve 13a 000006408 Fitting - Access Valve 13b 000006409 Core - Access Valve 13c 000006410 Cap - Access Valve 14 000005754 Reservoir Bracket 15 Screws 15a 000009040 Screw - M5 x 10TC [4] 15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17 Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	11	000008552	Evaporator Drain Tap		
12b 000005669 Drain Manifold - 208-230V/50-60 Hz/1 Ph 13 Access Valve 13a 000006408 Fitting - Access Valve 13b 000006409 Core - Access Valve 13c 000006410 Cap - Access Valve 14 000005754 Reservoir Bracket 15 Screws 15a 000009040 Screw - M5 x 10TC [4] 15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17 Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	12		Drain Manifold		
13 Access Valve 13a 000006408 Fitting - Access Valve 13b 000006409 Core - Access Valve 13c 000006410 Cap - Access Valve 14 000005754 Reservoir Bracket 15 Screws 15a 000009040 Screw - M5 x 10TC [4] 15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17a Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	12a	000006161	Drain Manifold - 115-230V/60 Hz/1 Ph		
13a 000006408 Fitting - Access Valve 13b 000006409 Core - Access Valve 13c 000006410 Cap - Access Valve 14 000005754 Reservoir Bracket 15 Screws 15a 000009040 Screw - M5 x 10TC [4] 15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17 Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	12b	000005669	Drain Manifold - 208-230V/50-60 Hz/1 Ph		
13b 000006409 Core - Access Valve 13c 000006410 Cap - Access Valve 14 000005754 Reservoir Bracket 15 Screws 15a 000009040 Screw - M5 x 10TC [4] 15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17 Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	13		Access Valve		
13c 000006410 Cap - Access Valve 14 000005754 Reservoir Bracket 15 Screws 15a 000009040 Screw - M5 x 10TC [4] 15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17 Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	13a	000006408	Fitting - Access Valve		
14 000005754 Reservoir Bracket 15 Screws 15a 000009040 Screw - M5 x 10TC [4] 15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17 Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	13b	000006409	Core - Access Valve		
15 Screws 15a 000009040 Screw - M5 x 10TC [4] 15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17 Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	13c	000006410	Cap - Access Valve		
15a 000009040 Screw - M5 x 10TC [4] 15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17 Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	14	000005754	Reservoir Bracket		
15b 000009041 Screw - 3.9 x 13TC [4] 16 000008761 Filter 17 Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	15		Screws		
16 000008761 Filter 17 Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	15a	000009040	Screw - M5 x 10TC		[4]
17 Backflow Preventer 17a 000009971 Backflow Preventer 60 Hz - 3/8"	15b	000009041	Screw - 3.9 x 13TC		[4]
17a 000009971 Backflow Preventer 60 Hz - 3/8"	16	000008761	Filter		
	17		Backflow Preventer		
17b 000009972 Backflow Preventer 50 Hz - 3/4"	17a	000009971	Backflow Preventer 60 Hz - 3/8"		
	17b	000009972	Backflow Preventer 50 Hz - 3/4"		

PART NOTES:

- Includes Reservoir, Hoses, Clamps, Drain Tap & Two Microswitches [1]
- Before Serial Number M05995632012 must order 000011624 (bin thermostat AND ice chute with bulb holder). [2]
- [3] Discontinued
- [4] No Longer Available



RFS1200C PANELS

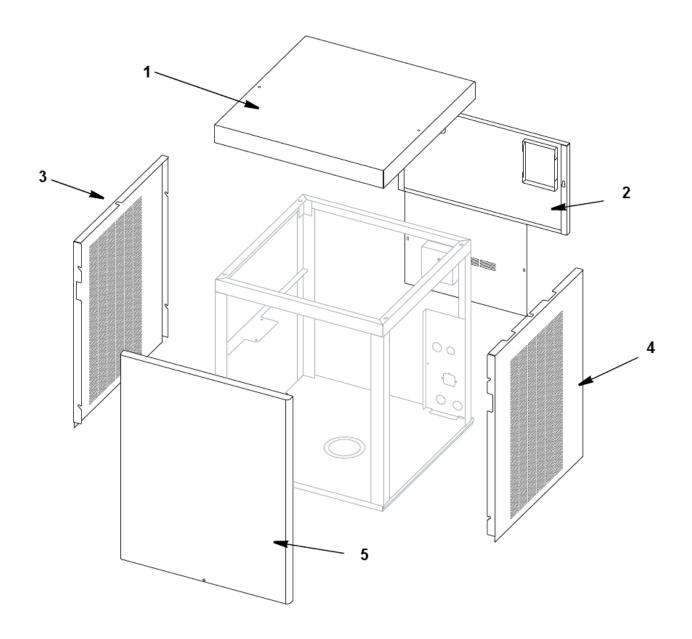




RFS1200C PANELS

#	PART#	DESCRIPTION	QTY	Note
1	000009983	Top Panel		
2		Back Panel		
2a	000009984	Back Panel - 208-230V/60 Hz/1 Ph		
2b	000010418	Back Panel - 230V/50 Hz/1 Ph		
3	000008768	Left Side Panel		
4	000008757	Right Side Panel		
5	000009985	Front Panel Assembly		
6	000011923	Cartoning		



RCU1075 REMOTE CONDENSER

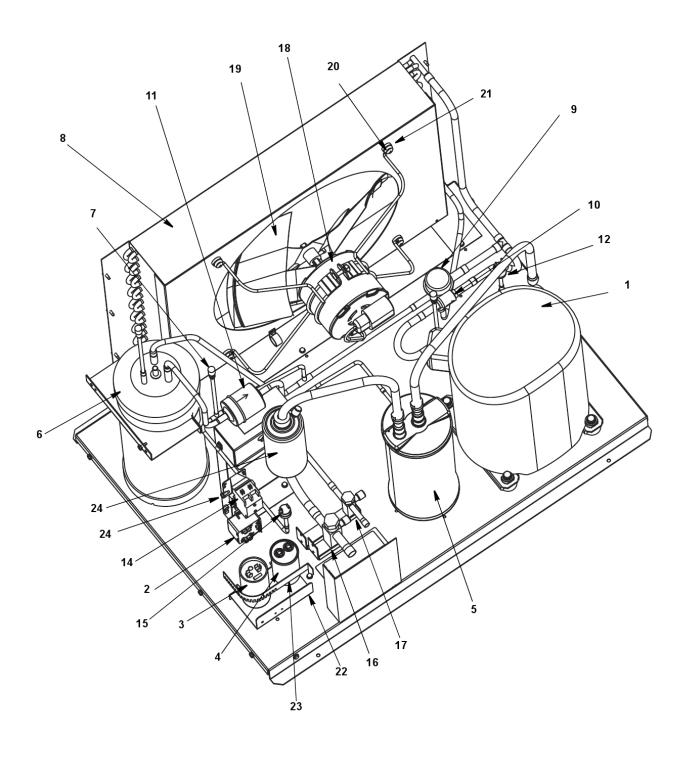



RCU1075 REMOTE CONDENSER

#	PART#	DESCRIPTION	QTY	Note
1		Compressor		
	7602293	Compressor - Copeland - 208-230V/60 Hz/1 Ph		
	7602303	Compressor - Copeland - 208-230V/60 Hz/3 Ph		
2	2007559	Start Potential Relay - 50-60 Hz/1 Ph		
3	000006454	Start Capacitor - 50-60 Hz/1 Ph		
4	2010133	Run Capacitor - 115-230V/50-60 Hz/1 Ph		
5	000007280	Suction Accumulator		
6	7629573	Receiver		
7	8373253	Access Valve		
8	8851453	Air-cooled Condenser		
9	000002369	Head Pressure Control Valve		
10	000001289	Check Valve		
11	8930279	Drier		
12	2001243	High Pressure Cut-out		
13	2001263	Fan Cycling Control - 200-250 psig		[1]
14		Contactor		
14a	2006609	Contactor - 208-230V/50-60 Hz/1 Ph		
14b	2006619	Contactor - 230V/60 Hz/3 Ph		
15	2002229	Low Pressure Cut-out		
16	8373303	Manual Shut-off Valve - 0.625"		
17	8373293	Manual Shut-off Valve - 0.375"		
18	2000189	Fan Motor - 208-230V/60 Hz/1-3 Ph		
19	2416303	Fan Blade		
20	3006823	Fan Motor Mounting Bracket		
21	5429559	Mounting - Rubber Wellnut		
22	6034981	Capacitor Mounting Bracket		
23	6021601	Capacitor Mounting Strap		
24	5650659	Cable Tie with Mounting Hole		
25	8250539	Suction Line Filter		
26		Wiring Harness		[2]
26a	000006532	Wiring Harness - 230V/60 Hz/1 Ph		
26b	2033089	Wiring Harness - 230V/60 Hz/3 Ph		
26c	000007729	Fan Cycle Control		
26d	000007425	Wiring Harness - Heater/Therm		
27	6000561	Receiver Mounting Bracket		[2]
28	2007619	Copeland Plug Assembly Wiring Harness, 230V/50-60Hz/1-3 Ph		[2]


PART NOTES:

[1] - \pages from 200126_09.jpg" width=150 height=306>

[2] - Not Shown



RCU1075 CONDENSING UNIT PANELS

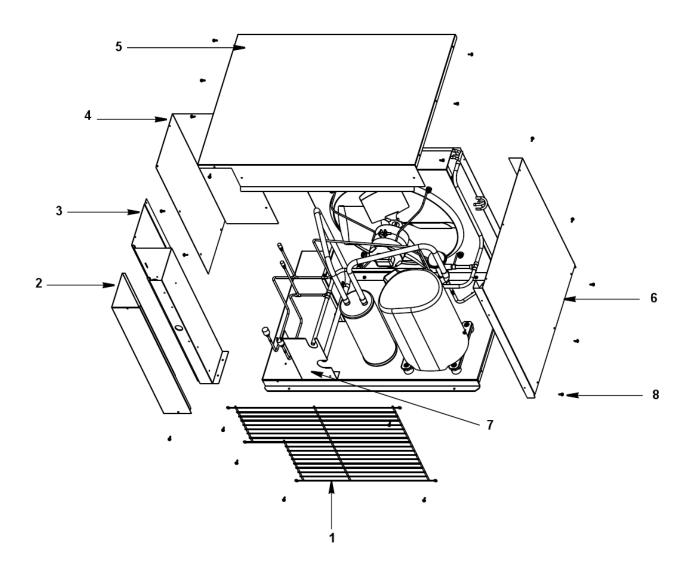



RCU1075 CONDENSING UNIT PANELS

#	PART #	DESCRIPTION	QTY	Note
1 2 3	3406893 6040171 000009054	Condenser Fan Guard Control Box Cover Control Box Panel		
4	6037051	Left Side Panel		
5	6034751	Cover Top		
6	6034701	Right Side Panel		
7	6042261	Condensing Unit Tube Shield		
8	5202069	Screw - #10-24 x 0.50" HEX		
9	00000768	Cartoning		

