This part list contains the service parts for the air cooled, water cooled and remote air cooled C1448, C1848, C2148 ice machines.

To avoid costly and time consuming errors, double check the model and voltage before ordering a part. The above have been manufactured in several voltages, which are designated by a voltage code after the hyphen (-) in the model number. Codes used included:

- -32 = 208-230/60/1
- -3 = 208-230/60/3
- -6 = 230/50/1
- -63 = 30/380-420/50/3

There was also a panel change in late 2009, denoted by a B at the end of the model number.

D series models began late 2014 and E began late 2017


Note: These abbreviations are used in this list:

- AC = Air Cooled
- WC = Water Cooled
- RC = Remote Cooled
- HGV = Hot Gas Valve
- TXV = Thermostatic Expansion Valve
- Volt = Voltage
- Sol VIv = Solenoid Valve
- Hdwe = Hardware

Contents


| Cabinet - A Series | Page 2 |
|--|---------|
| Cabinet - B Series | Page 3 |
| Cabinet - D and E Series | Page 4 |
| Interior Parts | Page 5 |
| Evaporator Compartment | Page 6 |
| Air Cooled Refrigeration System | Page 7 |
| Air Cooled Fan Area | Page 8 |
| Water Cooled Refrigeration | Page 9 |
| Remote Refrigeration System | Page 10 |
| Electrical and Control Box, -3, -632 | Page 11 |
| Electrical & Control Box, 400 volt, 50 Hz. 3 phase w/neutral (-63) | Page 12 |
| Compressors | Page 13 |
| Remote Condenser, ERC311 and ERC611 | Page 14 |

Cabinet - A Series

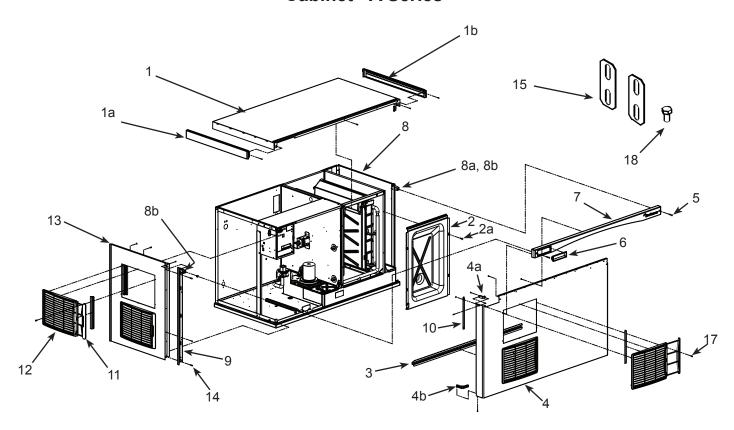


| Item | Part | | 8 | A38553-022 | Right side panel assy |
|----------|------------|---|-----------|-----------------------------------|-------------------------------|
| Number | Number | Description | 8a | 02-4215-01 | Receptacle |
| 1 | A38941-023 | Top panel, w/trim strips | 8b | 03-3804-01 | Screw receptacle |
| 1a | 02-4221-01 | Left trim strip | 9 | 02-4067-03 | Side panel support. Fits |
| 1b | 02-4221-02 | Right trim strip | | oled and remo pport for air co | te models. Used as back side |
| 2 | 02-4184-01 | Evaporator cover | pariei su | 02-4067-04 | Front side panel support for |
| 2a | 03-0727-05 | Screw | air coole | d models | Tront side parier support for |
| 3 | A39045-001 | Front panel stiffener | 10 | A39222-001 | Filter guide |
| . 4 | | | 11 | 02-4212-01 | Air filter |
| includes | | p, gussets and labels. | 12 | 02-4224-01 | Louver panel |
| assembly | | WC, or RC front panel strip, gussets and labels | 12a | A39238-001 | Louver bracket |
| 4a | 02-4216-01 | Top gusset | 13 | A38551-023 | Left side panel, AC |
| 4b | 02-4217-01 | Bottom gusset | | A38551-024 | Left side panel WC, RC |
| 5 | 03-1735-03 | Screw, front panel | 14 | 03-1404-12 | Screw |
| 6 | 02-4284-01 | Bezel, full window | 15 | A30911-015 | Machine straps |
| 6a | 02-4284-02 | Bezel, partial window | 16 | 16-0355-00 | Inlet water fitting, flare |
| 7 | 02-4214-03 | Trim strip | 17 | 03-1419-17 | Flat head screw |
| | | · | 18 | 03-1405-15 | Screw |

Cabinet - B Series

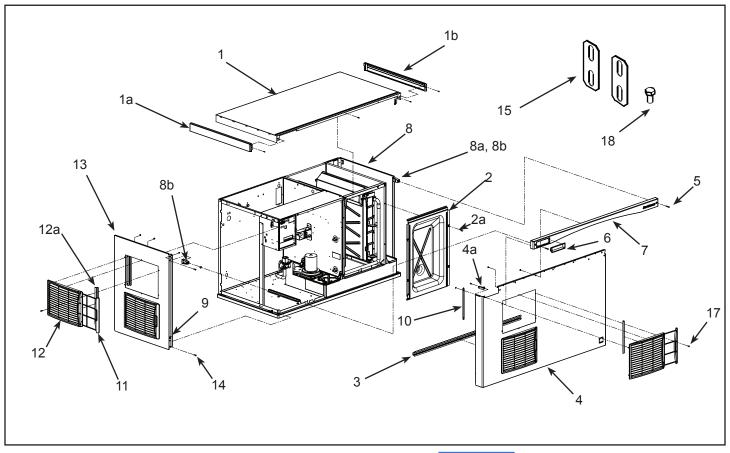

| Number Number Description 9 A39571-001 Panel clip | |
|--|------------------|
| 1 A39579-023 Top panel 10 A39238-001 Filter guide | |
| 1a 02-4221-01 Left trim strip* 11 02-4212-01 Air filter | |
| 1b 02-4221-02 Right trim strip* 12 02-4224-01 Louver pan | el |
| 2 02-4184-01 Evaporator cover 12a A39238-001 Louver brace | cket |
| 2a 03-0727-05 Screw 13 A39580-026 Left side pa | nel, AC |
| 3 A39045-001 Front panel stiffener A39580-024 Left side pa | anel, WC, RC |
| 4 A39578-025 AC Front panel assembly, 14 03-1404-12 Screw | |
| includes filters, trim strip 15 A30911-015 Machine str | raps |
| | fitting, flare** |
| assembly, includes trim strip 17 03-1419-17 Flat head so | crew |
| 4a 02-4216-01 Top gusset 18 03-1405-15 Screw | |
| 5 03-1735-03 Screw, front panel * Side trim strips discontinued mid 2 | 011 |
| 6 02-4284-01 Bezel, full window ** Bezel and fitting discontinued 2/8/ | |
| 6a 02-4284-02 Bezel, partial window** | |
| 7 02-4214-03 Trim strip | |
| 8 A39581-022 Right side panel assy | |
| 8a 02-4215-01 Receptacle | |

Cabinet - D and E Series

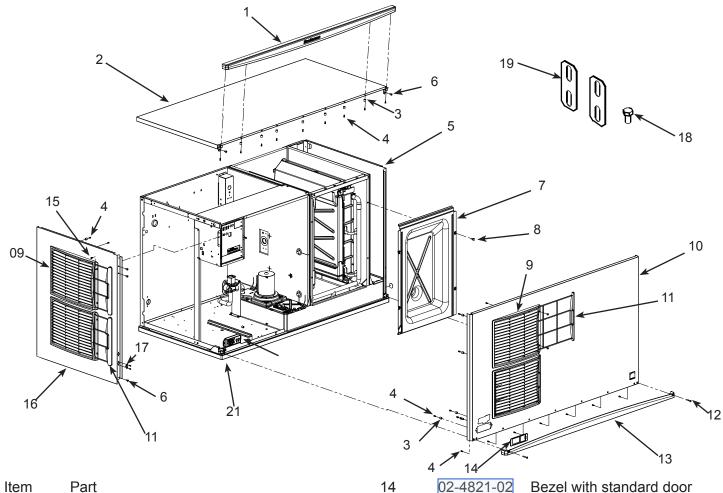


| Item | Part | | 14 | 02-4821-02 | Bezel with standard door |
|--------|------------|-------------------|--------|---------------|---|
| Number | Number | Description | 14a | 02-4822-02 | Bezel with secure door |
| 1 | 02-4819-03 | Trim strip | 15 | 03-1419-26 | Screw |
| 2 | A40309-023 | Top panel | 16 | A40310-028 | Left side panel, AC |
| 3 | 02-4824-01 | Spacer | | A40310-022 | Left side panel WC, RC |
| 4 | 03-3836-02 | Screw | 17 | 03-1733-04 | Ball stud Receptacle |
| 5 | A40311-022 | Right side panel | 18 | 03-1405-15 | Screw |
| 6 | 03-1404-10 | Screw | 19 | A30911-015 | Machine straps |
| 7 | 02-4184-01 | Inner front panel | 20 | 11-0622-21 | Light & switch panel D |
| 8 | 03-0727-05 | Thumbscrew | series | C | 10 m 20 00 00 00 00 00 00 00 00 00 00 00 00 |
| 9 | 02-4224-03 | Louvers | 21 | See page 5 II | tems 29,29a &29b |


10 A40308-030 AC Front panel assembly, includes filters, trim strip, gussets and labels.

A40308-031 WC, or RC front panel assembly, includes trim strip, gussets and labels

| 11 | 02-4212-03 | Filters |
|----|------------|-------------------|
| 12 | 03-1735-03 | Screw |
| 13 | 02-4820-03 | Trim strip bottom |

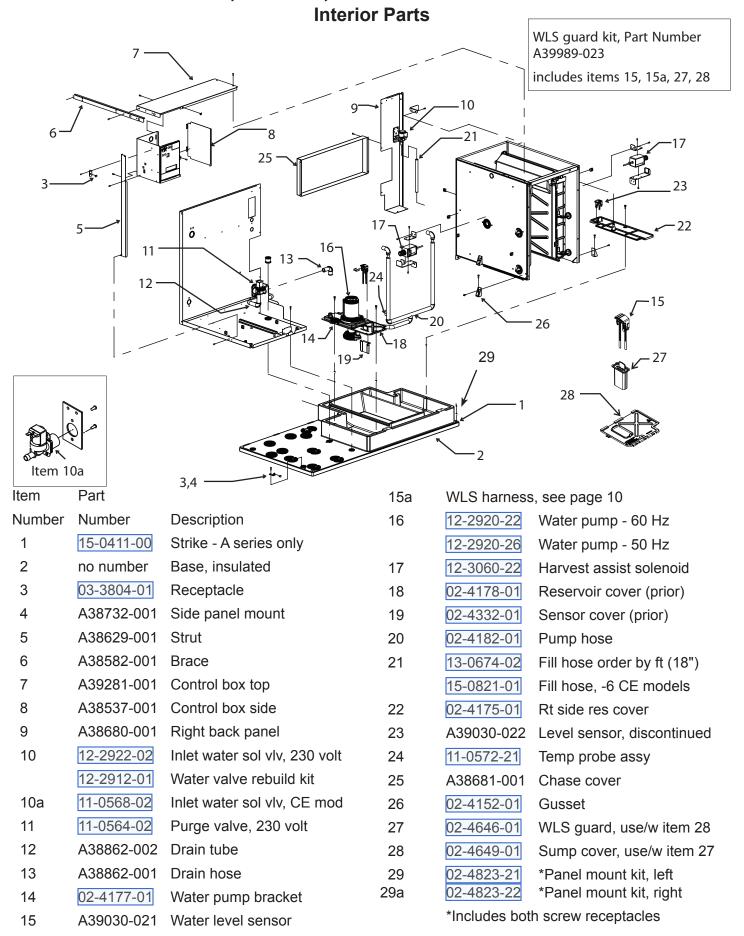

Evaporator Compartment

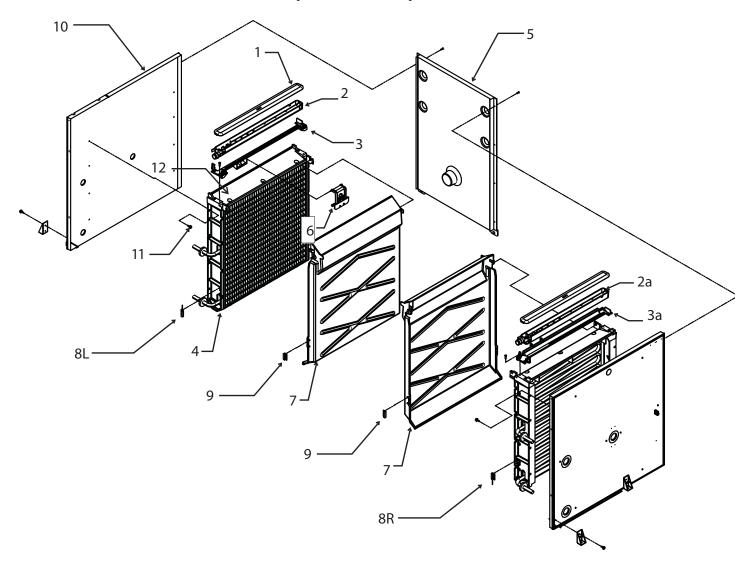


| Item | Part | | 6 | A39031-021 | Ice thickness sensor |
|--------|------------|--------------------------|----|------------|--------------------------|
| Number | Number | Description | 7 | 02-4611-21 | Curtain |
| 1 | 02-4065-01 | Water distributor cover | 8L | 11-0563-06 | Curtain switch, left |
| 2 | 02-4064-01 | Water distributor, left | 8R | 11-0563-03 | Curtain switch, right |
| 2a | 02-4064-02 | Water distributor, right | 9 | 11-0563-02 | Curtain switch magnet* |
| 3 | 02-4205-01 | Mounting bracket, left | 10 | 13-0943-01 | Gasket tape |
| 3a | 02-4205-02 | Mounting bracket, right | 11 | 03-3868-01 | Screw |
| 4 | see table | Evaporator | 12 | 02-4156-21 | Spillway replacement kit |

| | small cube | medium cube |
|-------|------------|-------------|
| Right | A38628-023 | A38628-024 |
| Left | A38628-021 | A38628-022 |


⁵ A38677-001 Back wall

Air Cooled Refrigeration System

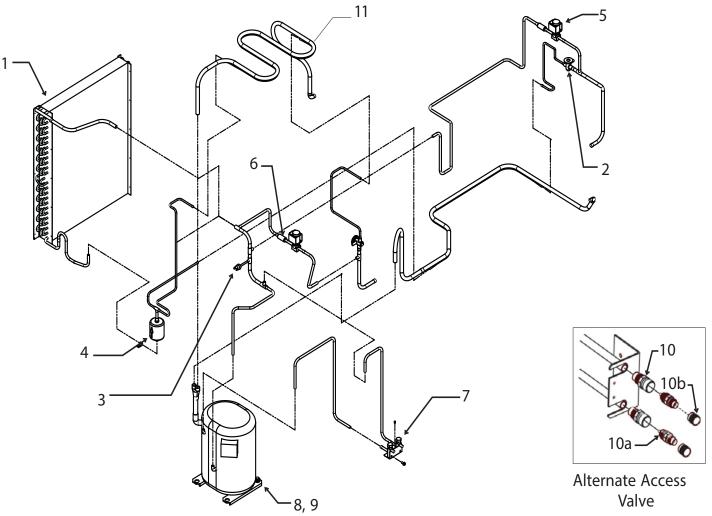


| Item | Part | | Alternate | e Access Valve | , use began 4/08 |
|--------|-------------|-------------------------|-----------|----------------|---------------------------|
| Number | Number | Description | 10 | 16-1137-01 | Valve body |
| 1 | 18-8892-01 | Condenser, AC | 10a | 16-1139-01 | Core |
| 2 | 16-1130-01 | TXV | 10b | 16-1140-01 | Сар |
| | 19-0599-06 | Insulation Danfoss TXV | 11 | A38736-001 | Left suction line heat ex |
| 3 | 11-0566-22 | Fan cycle pressure sw. | | | |
| 4 | 02-3319-02 | Dryer | | | |
| 5 | 11-0493-01 | Hot gas valve, 230 volt | | | |
| | 12-2719-22 | 230 volt coil | | | |
| | 12-2733-30 | HGV rebuild kit | | | |
| 6 | 16-1063-01 | Strainer | | | |
| 7 | 16-0832-20 | Access valve | | | |
| | 16-0832-03 | Port cap | | | |
| | 16-0832-02 | Stem cap | | | |
| 8 | see page 10 | Compressors | | | |
| 9 | see page 10 | Compressor mounting hdw | | | |

C1448, C1848, C2148 Service Parts Air Cooled Fan Area

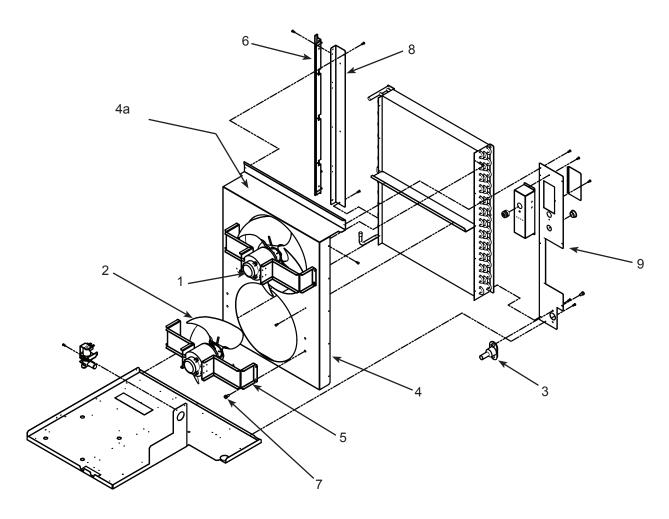

| Item | Part | |
|--------|------------|------------------------------------|
| Number | Number | Description |
| 1 | 18-8927-01 | Fan motor All but C1848 E |
| 1a | 18-8927-02 | C1848 E Fan motor |
| 2 | 18-8882-01 | Fan blade |
| 3 | 02-3692-21 | Drain adapter - also for WC and RC |
| 4 | A38682-001 | Fan shroud - A Series |
| | A39630-001 | Fan shroud - B- E Series |
| 4a | A39631-001 | Fan shroud top - B - E series only |
| 5 | A38554-001 | Fan motor bracket |
| 6 | 02-4067-04 | Side panel support - AC |
| 7 | 03-1645-01 | Screw |
| 8 | A38741-001 | AC bracket - A Series |
| | A39590-001 | AC bracket - B and E Series |
| 9 | A38797-001 | Back panel, AC only |
| | | |


Water Cooled Refrigeration

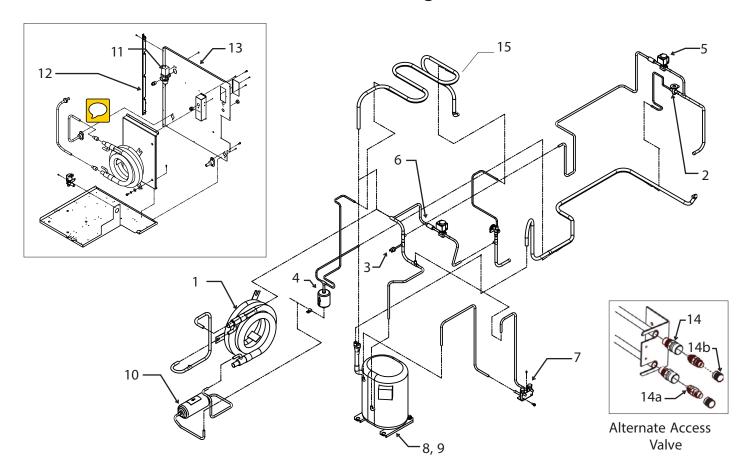

| Item | Part | | 8 | see page 10 | Compressors |
|--------|------------|----------------------------|-----------|---------------|---------------------------------|
| Number | Number | Description | 9 | see page 10 | Compressor mounting hdw |
| 1 | 18-8865-01 | Condenser, WC C1448. C1848 | 10 | 02-2628-02 | Receiver |
| | 18-8931-21 | Condenser, WC C2148 | 11 | 11-0608-21 | Water regulating valve, C1448W, |
| 2 | 16-1130-01 | TXV | C1848W | | |
| | 19-0599-06 | Insulation for TXV | | 11-0478-02 | Water regulating valve C2148W |
| 3 | 11-0501-21 | High pressure sw. | 12 | 02-4067-03 | Side support |
| 4 | 02-3319-02 | Dryer | 13 | A38606-001 | Back panel, WC - A series |
| 5 | 11-0493-01 | Hot gas valve, 230 volt | | A39574-001 | Back panel, WC - B - D series |
| 5 | | | | A40629-001 | Back panel, WC - E series |
| | 12-2719-22 | 230 volt coil | | A40654-001 | Back cover, WC - E series |
| | 12-2733-30 | HGV rebuild kit | Drior Acc | ess Valve, up | , |
| 6 | 16-1063-01 | Strainer | FIIOI ACC | | |
| 7 | 16-1137-01 | Valve body | | 16-0832-20 | Access valve |
| 7a | 16-1139-01 | Core | | 16-0832-03 | Port cap |
| 7b | 16-1140-01 | Сар | | 16-0832-02 | Stem cap |
| | 10 1110 01 | Cap | 15 | A38736-001 | Left suction line heat ex |


C1448, C1848, C2148 Service Parts **Remote Refrigeration System** 22 20 21 13 11 **Alternate Access** 12 Item Part Valve Description Number Number 7, 8 1 16-1177-01 Receiver Top receiver bracket 14 A37211-001 2 16-1130-01 **TXV** 15 A37212-001 Bottom receiver bracket insulation Danfoss TXV 19-0599-06 02-3692-21 16 Drain adapter 3 16-0850-01 Discharge quick connect 17 16-1122-21 Accumulator, kit w/insul 16-0850-03 Liquid quick connect 4 18 A38679-001 Back panel, rem - A series 5 02-3319-02 Drier A39574-001 Back panel, rem - B series 6 16-1030-01 Liquid line access valve Back panel, rem - E series A40629-001 7 see page 10 Compressors 8 Compressor mounting hdw see page 10 *Prior Access Valve, up to 4/08 8a see page 10 Crankcase heater 19* 16-0832-20 Access valve 02-4067-03 9 Side panel support, 19a* 16-0832-03 Port cap 10 11-0501-22 High pressure cut out 19b* 16-0832-02 Stem cap 11 11-0493-01 Liquid line valve or HGV, 230 v 20 16-1208-01 3/8 Isolation valve - E series 12 16-1137-01 Valve body 21 16-1208-02 1/2 Isolation valve - E series 16-1139-01 Core 21a A40507-001 Isolation valve bracket - E series 16-1140-01 Cap 22 A40508-001 Fittings cover rem - E series 13 16-1063-01 Strainer September 2017 Page 10

Electrical and Control Box, -3, -6. -32

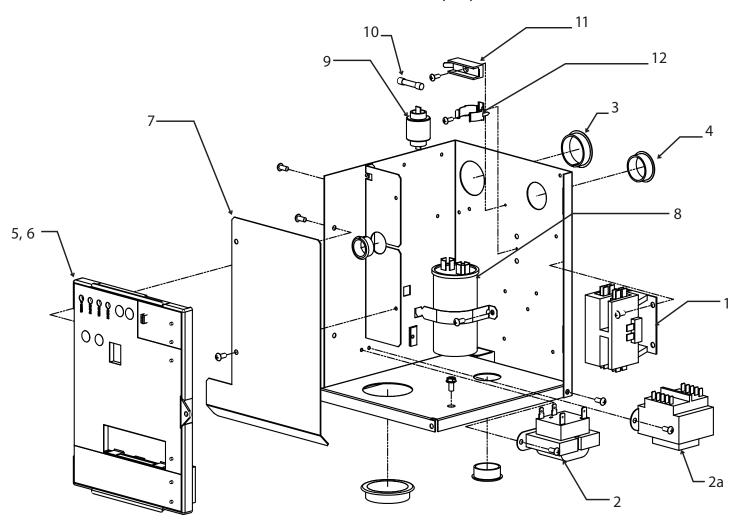

| Item | Part | | 10 | 12-2686-01 | Fuse, 50 Hz only |
|------------|--------------|------------------------------|-----------|-----------------|--------------------------------|
| Number | Number | Description | 11 | 12-2687-01 | Fuse holder |
| 1 | 12-2469-02 | Contactor, 230, single ph | 12 | 18-8840-02 | Bracket |
| | 12-2533-02 | Contactor, three phase | Wiring H | larnesses (not | illustrated) |
| 2 | 12-2924-02 | Transformer, 230 volt | 13 | 12-2931-01 | Power harness, A & W |
| 2a | 12-2639-01 | Transformer, 50 Hz | | 12-2931-02 | Power harness, Remote |
| 3 | 12-1213-11 | Snap bushing | Power h | arness connec | ts to J1 on controller |
| 4 | 12-1213-15 | Snap bushing | 14 | 12-2937-01 | Hi voltage harness, A & W |
| 5 | 11-0621-21 | Service controller, fits all | | 12-2938-01 | Hi voltage harness, Rem |
| Prodigy of | cubers | | | 12-2944-01 | Hi voltage, 50 Hz A & W |
| 6 | 02-4076-01 | Control box door | | 12-2944-02 | Hi voltage, 50 Hz, Rem |
| | 02-4189-01 | Overlay label | Hi voltag | je harness has | the 8 pin connector |
| 7 | A39216-001 | Barrier | 15 | 12-2928-01 | Water level sensor harness |
| 8 | see next pag | e Run capacitor | for one 3 | 3 probe sensor. | Second sensor discontinued. |
| 9 | see next pag | e PTCR - | 16 | 11-0622-21 L | ight & switch panel D,E series |

Electrical & Control Box, 400 volt, 50 Hz. 3 phase w/neutral (-63)

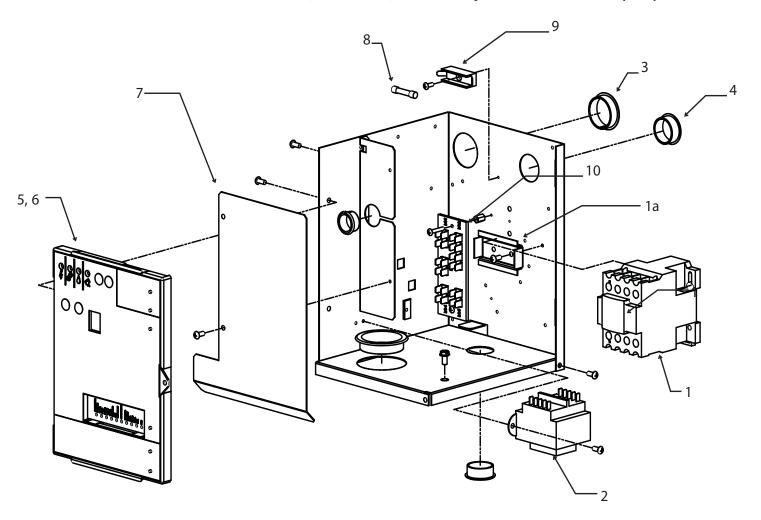

| Item | Part | | Wii |
|------------|------------|------------------------------|-----|
| Number | Number | Description | 11 |
| 1 | 12-3010-03 | Contactor, 400 v 3 ph. | cap |
| 1a | A39511-001 | Bracket | 12 |
| 2 | 12-2639-01 | Transformer, 50 Hz | 13 |
| 3 | 12-1213-11 | Snap bushing | ser |
| 4 | 12-1213-15 | Snap bushing | |
| 5 | 11-0621-21 | Service controller, fits all | |
| Prodigy of | cubers | | |
| 6 | 02-4076-01 | Control box door | |
| | 02-4189-01 | Overlay label | |
| 7 | A39216-001 | Barrier | |
| 8 | 12-2686-01 | Fuse, 50 Hz only | |
| 9 | 12-2687-01 | Fuse holder | |
| 10 | A25981-001 | Terminal board | |
| | | | |

Wiring Harnesses (not illustrated)

11 12-3066-02 Hi voltage, 50 Hz, Rem (with cap) Hi voltage harness has the 8 pin connector

12 12-2928-02 Water level sensor harness

13 11-0622-21 Light & switch panel D, E

series

C1448, C1848, C2148 Service Parts Compressors

| Model | Electrical | Compressor | Run Capacitor | PTCR |
|---------------------|------------------|------------|---------------|------------|
| C1448-32 | 208-230/60/1 | 18-8749-22 | 18-1902-70 | 18-8840-01 |
| C1448-6 | 230/50 | 18-8749-27 | 18-1902-70 | 18-8840-01 |
| C1448-3 | 208-230/60/3 | 18-8749-24 | - | - |
| C1848-32 A-D series | 208-230/60/1 | 18-8751-23 | 18-1902-71 | 18-8840-01 |
| C1848-32 E series | 208-230/60/1 | 18-8750-22 | 18-1902-70 | 18-8840-01 |
| C1448-63 | 230/380-420/50/3 | 18-8749-11 | - | - |
| C1848-6 | 230/50 | 18-8751-27 | 18-1902-71 | 18-8840-01 |
| C1848-3 | 208-230/60/3 | 18-8751-25 | - | - |
| C2148-32 - WC | 208-230/60/1 | 18-8930-24 | 18-1902-27 | 18-8840-01 |
| C2148-6 - WC | 230/50 | 18-8930-26 | 18-1902-59 | 18-8840-01 |
| C2148-3 - WC | 208-230/60/3 | 18-8930-25 | - | - |
| C2148-32 - RC | 208-230/60/1 | 18-8923-22 | 18-1902-27 | 18-8840-01 |
| C2148-6 - RC | 230/50 | 18-8923-26 | 18-1902-59 | 18-8840-01 |
| C2148-3 - RC | 208-230/60/3 | 18-8923-23 | - | - |


| Model | Bolt | Washer | Grommet | Sleeve |
|--------------|------------|------------|------------|------------|
| C1448, C1848 | 03-1420-20 | 03-1407-07 | 18-2300-27 | 18-2300-26 |
| C2148 | 03-1405-20 | 03-1407-07 | 18-2300-27 | 18-2300-26 |

| Model | Internal crankcase heater* | External crankcase heater* |
|------------------------|----------------------------|----------------------------|
| C1448R, C1848R, C2148R | 18-2308-01 | 12-3043-03 |

^{*} Included with replacement compressor

Compressor shells changed early 2012, crankcase heaters are external after the change. Suction and discharge diameters also changed. Replacement compressors supplied with necessary fittings.

Remote Condenser, ERC311 and ERC611

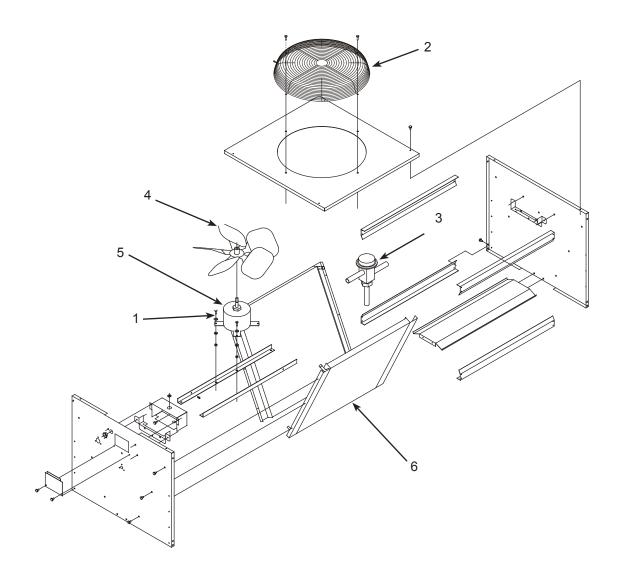

| Item | Part | | Not Shown: | |
|--------|------------|--------------------|--------------|-------------------------------|
| Number | Number | Description | A37169-001 | Leg |
| 1 | 03-1405-08 | Screw | A37170-001 | Leg brace - ECR311 |
| 2 | 02-3575-01 | Fan guard | A37296-001 | Leg brace - ERC611 |
| 3 | 11-0422-22 | Headmaster | 03-1645-01 | Screw for legs |
| 4 | 18-8816-01 | Fan blade - ERC311 | 16-0850-01 | Quick connect, discharge |
| | 18-8820-01 | Fan blade - ERC611 | 16-0850-03 | Quick connect, liquid |
| 5 | 12-2651-01 | Fan motor - ERC311 | 16-1100-08 g | Quick connect w/ stub for 3/8 |
| | 12-2717-01 | Fan motor - ERC611 | ed | inch line set tube |
| 6 | 18-8827-01 | Coil, ERC311 | 16-1100-09 💆 | Quick connect w/ stub for 1/2 |
| | 18-8819-01 | Coil. ERC611 | | inch line set tube |