This parts list contains the service part numbers for 3 basic Electrical Components Common to All Machines models, plus 4 different electrical configurations. It contains service parts for all series machines. The series differences include:

• Inlet water valve
• System controller

- · A first production
- · B not used
- C New front panel and side panels
- D New top panel and PTCR
- E New side panels and CME506R expansion valve change

The complete model number will be needed to identify the correct part.

Unique parts include: cabinet, electrical and refrigeration. Electrical Codes are located at the end of the model number (voltage/hertz/phase):

- -1 is 115/60/1
- -32 is 208-230/60/1
- -3 is 208-230/60/3
- -6 is 250/50/1


- System controller
- · Water sensor
- Discharge line sensor
- Bin controls
- Water level sensor
- · Hi pressure cut out


Unique Electrical Components

- Compressor and related starting components
- Contactor (single / three phase)
- Fan motor
- Water pump
- Transformer
- Hot gas valve


Table of Contents

Cabinet	page 2
Interior Structure and Controls	page 3
CME506 Refrigeration	page 4
CME506 E Series Refrigeration	page 5
CME656 Refrigeration	page 6
CME806 Refrigeration	page 7
Receiver	page 8
Water System Components	page 9
Compressors and Electrical Components	page 10
HTB555 Ice Storage Bin	page 11
Remote Condenser	page 12
Wiring Diagrams	nage 13

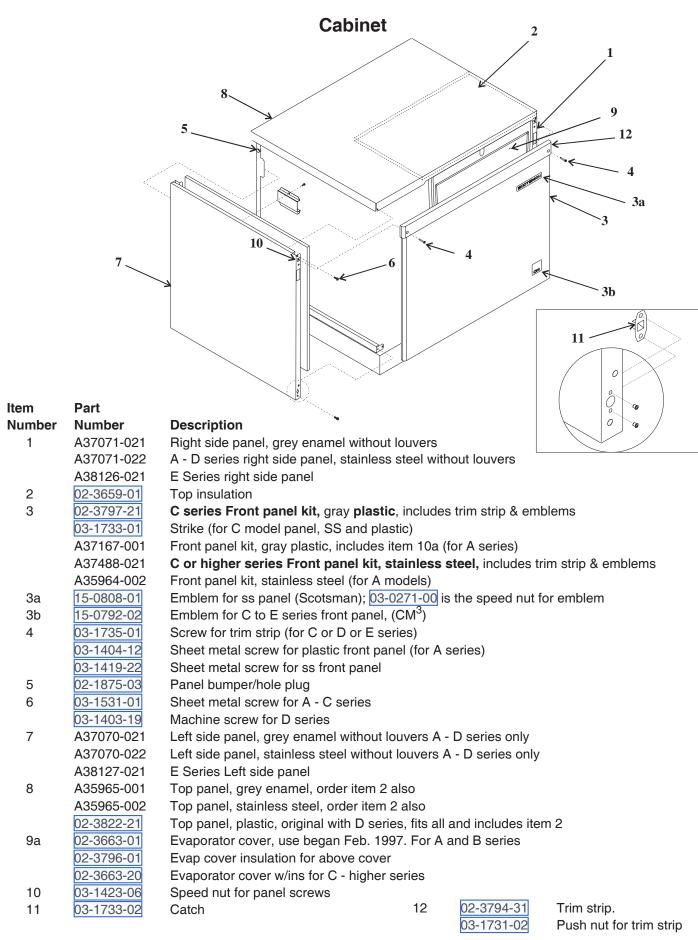

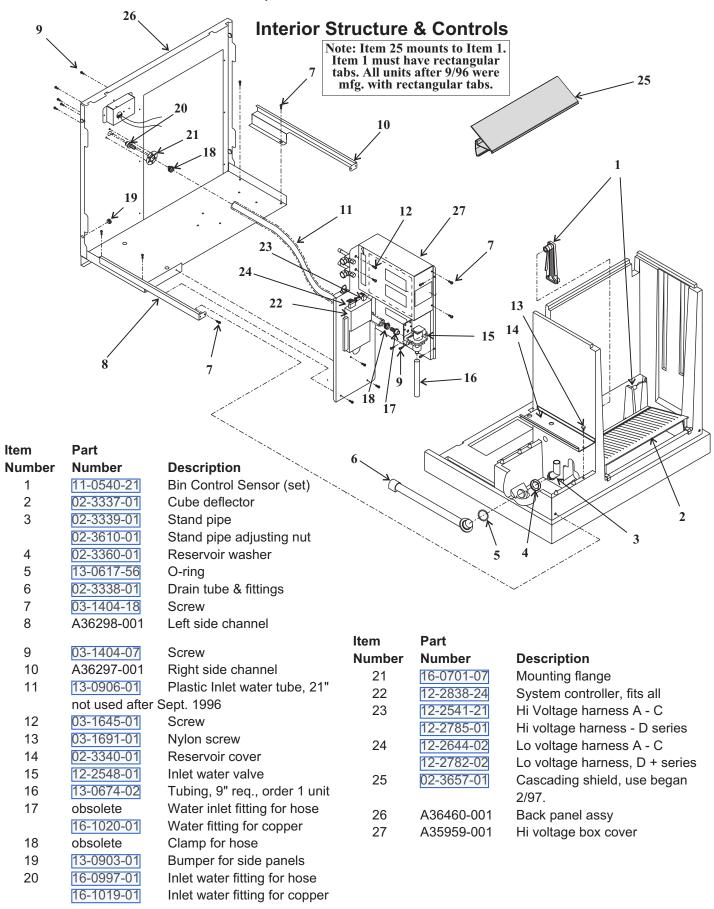


CME506R A - D Series Refrigeration System

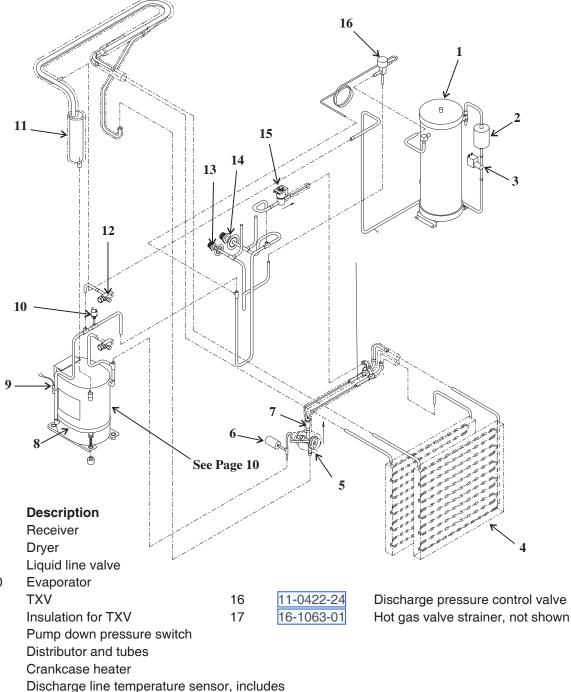


Item	Part			
Number	Number	Description		
1	16-0761-01	Receiver	er e	
2	02-3319-02	Dryer		
3	12-2471-23	Liquid line valve		
4	A36734-020	Evaporator		
5	16-1017-21	TXV	16	11-04
	02-2920-01	Insulation for TXV	17	16-10
6	11-0502-21	Pump down pressure switch		
7	16-0843-03	Distributor and tubes		
8	12-1868-01	Crankcase heater		
9	02-3410-21	Discharge line temperature sens water temp sensor & clip	sor, inclu	des
	03-1711-01	Sensor clip		
10	11-0501-22	Hi pressure cut out switch		
11	16-0778-21	Accumulator		
12	16-0832-20	Access valve		
	16-0832-03	Port cap		
	16-0832-02	Stem cap		
13	16-0850-03	Liquid line fitting		
14	16-0850-01	Discharge line fitting		
15	12-2471-22	Hot gas valve complete		
	12-2719-23	Hot gas valve coil		
		Decemb	er 2003	

CME506R E & Higher Series Refrigeration System

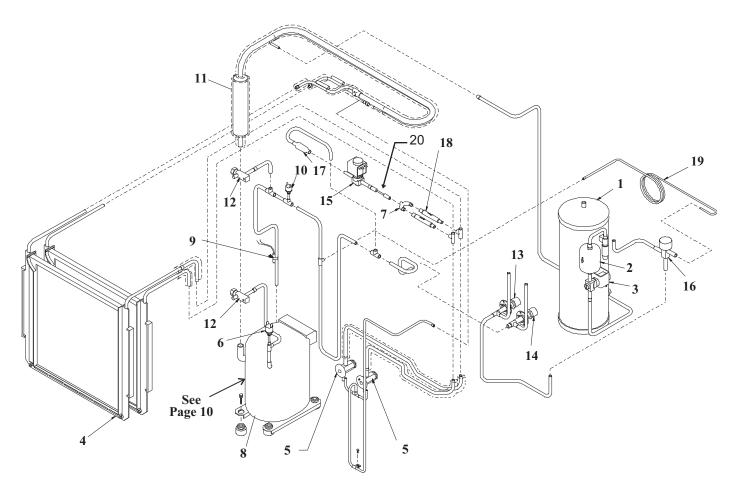

Item	Part		Item	Part	
Number	Number	Description	Number	Number	Description
1	16-0761-01	Receiver	16	11-0422-24	Discharge pressure control valve
2	02-3319-02	Dryer	17	16-1063-01	Hot gas valve strainer
3	12-2471-23	Liquid line valve	18	16-1071-01	Check valve
4	A36734-020	Evaporator	19	A36427-001	By-pass tubing
5	16-1009-22	TXV - only for E series	20	16-1095-01	Restrictor
	02-3792-01	Insulation for TXV			
6	11-0502-21	Pump down pressure switch			
7	16-0776-01	Tee			
8	12-1868-01	Crankcase heater			
9 sonsor in	02-3410-21	Discharge line temperature np sensor & clip			
Senson, in	03-1711-01	Sensor clip			
10	11-0501-22	Hi pressure cut out switch			
11	16-0778-21	Accumulator			
12	16-0832-20	Access valve			
12	16-0832-03	Port cap			
	16-0832-03	Stem cap			
13	16-0850-03	Liquid line fitting			
	16-0850-03				
14 15		Discharge line fitting			
15	12-2471-22	Hot gas valve complete			
	12-2719-23	Hot gas valve coil			

CME656R Refrigeration System

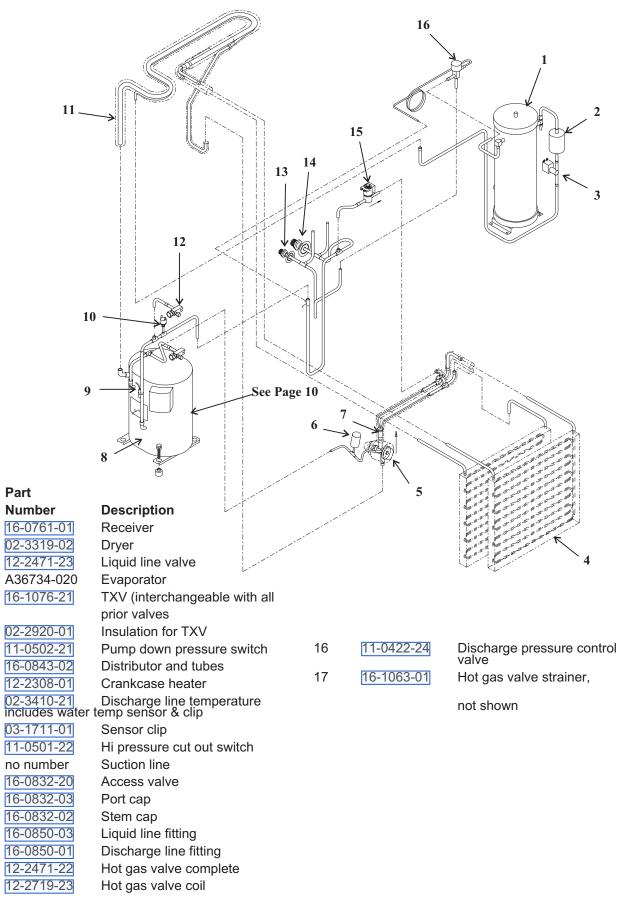


Item

Number

sensor,


CME806R Refrigeration System

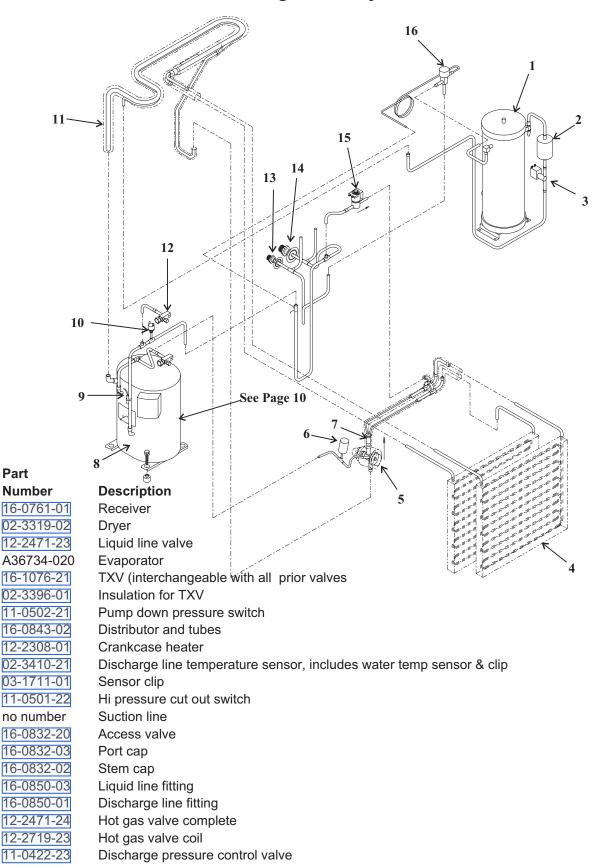

Item


Number

Receiver

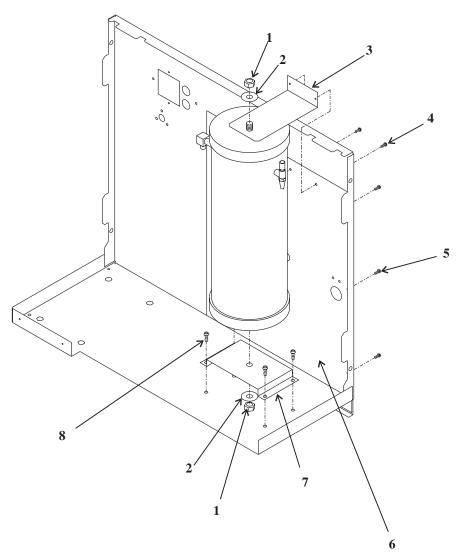


Item	Part	
Number	Number	Description
1	03-1406-13	Nut
2	03-1410-06	Washer
3	A36454-001	Bracket
4	03-1638-03	Screw
5	03-1531-01	Screw
6	A36440-001	Back cover
7	A36021-001	Bracket
8	03-1645-01	Screw

Water System Components

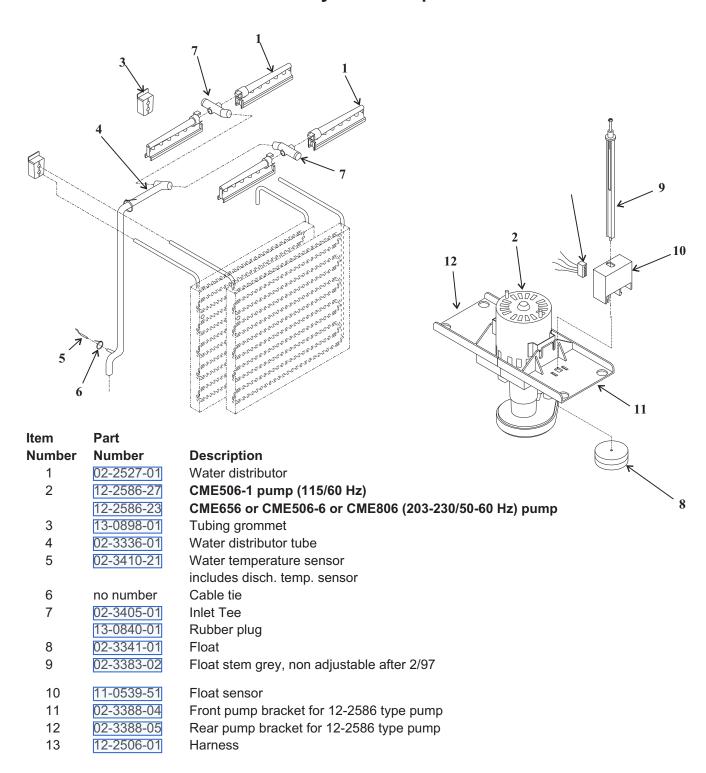



Compressors and Electrical Components

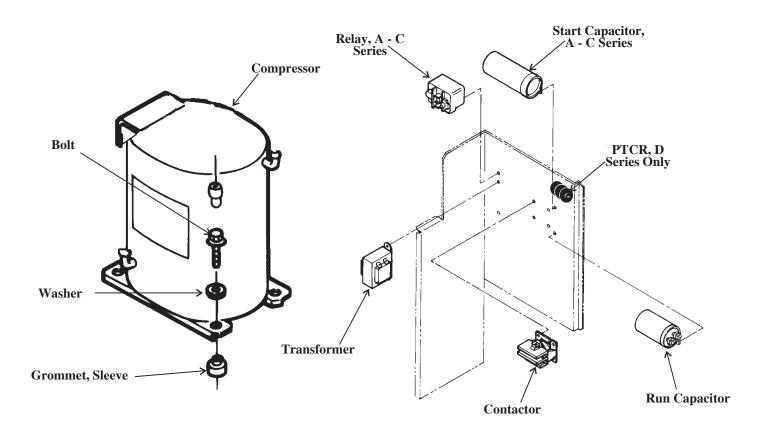

Model	СМЕ	E 506		CME656		СМІ	E806
Voltage/Hz	115/60	250/50	208-230/60	208-230/60	250/50	208-230/60	230/50
Phase	Single	Single	Single	Three	Single	Single	Single
Compressor*	18-8721-21*	18-8721-22	18-8813-23*	18-8813-25	18-8813-27	18-8749-22*	18-8749-27
PTCR** D series	18-8835-01	18-8835-01	18-8835-01	18-8835-01	18-8835-01	18-8835-01	18-8835-01
Start Relay**	18-1903-50	18-1903-29	18-1903-33	not used	18-1903-29	18-1903-46	18-1903-33
Start Capacitor**	18-1901-03	18-1901-43	18-1901-15	not used	18-1901-52	18-1901-48	18-1901-48
Run Capacitor	18-1902-45	18-1902-30	18-1902-53	not used	18-1902-53	18-1902-55	18-1902-55
Overload	18-8711-50	18-8721-50	internal	internal	internal	internal	internal
Mounting Bolt	03-1405-20	03-1405-20	03-1405-20	03-1405-20	03-1405-20	03-1405-20	03-1405-20
Sleeve	18-2200-27	18-2200-27	18-2200-27	18-2200-27	18-2200-27	18-2200-27	18-2200-27
Washer	03-1407-07	03-1407-07	03-1407-07	03-1407-07	03-1407-07	03-1407-07	03-1407-07
Grommet	18-2200-28	18-2200-28	18-2200-28	18-2200-28	18-2200-28	18-2200-28	18-2200-28
Contactor	12-2469-01	12-2469-01	12-2469-01	12-2533-01	12-2469-01	12-2469-01	12-2469-01
Transformer	A37231-001	A37217-001	A37217-001	A37217-001	A37217-001	A37217-001	A37217-001


HTB555 Ice Storage Bin

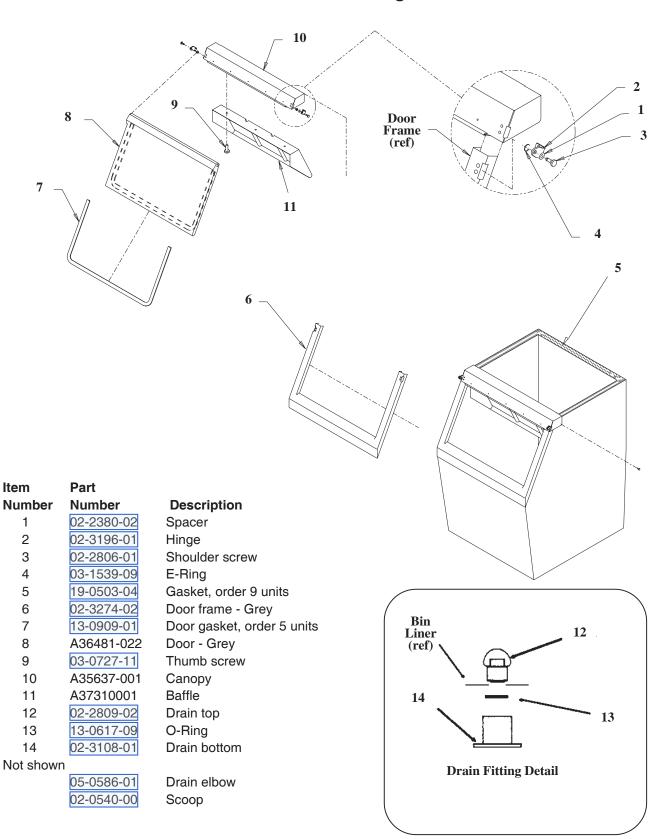

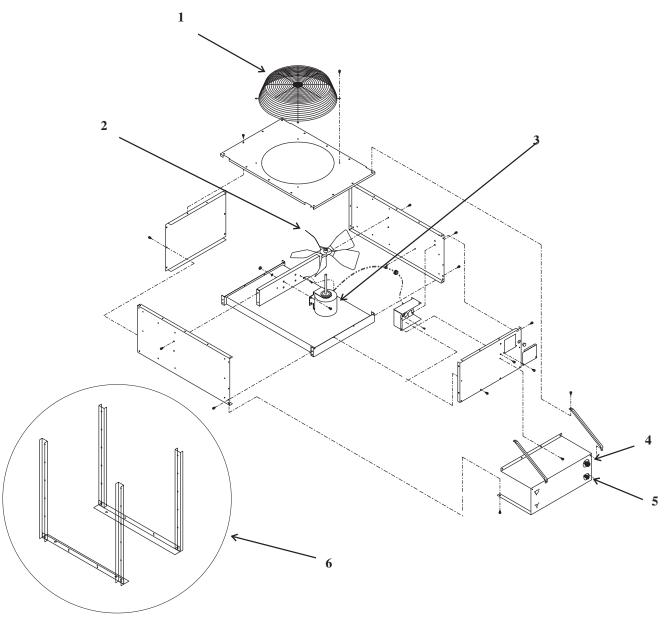


ITEM		PART
NUMBER	NUMBER	DESCRIPTION
1	02-3575-01	Fan guard
2	18-8800-01	Fan blade
3	18-8796-01	Fan motor ERC101
	18-8796-32	Fan motor ERC201, ERC402
4	16-0850-01	Quick connect, discharge
5	16-0850-03	Quick connect, liquid
6	A36990-001	Leg kit for ERC101, 201
	A36990-002	Leg kit for ERC402
Filters:		
	02-3231-03	Discharge line
	02-3231-02	Liquid line

D Series, Single Phase Schematic Diagram

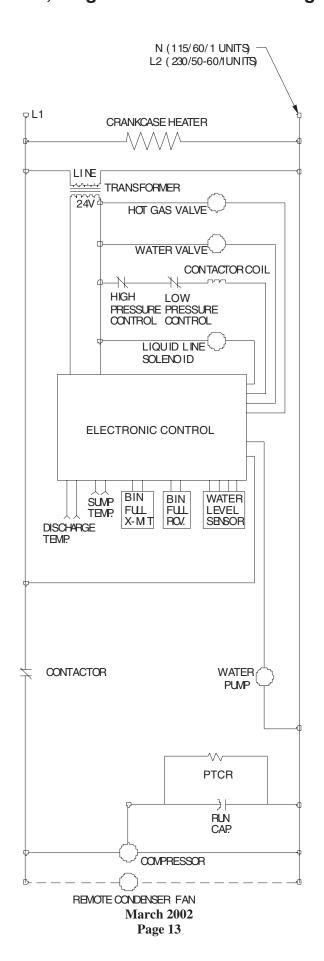

D Series, CME506R Wiring Diagram

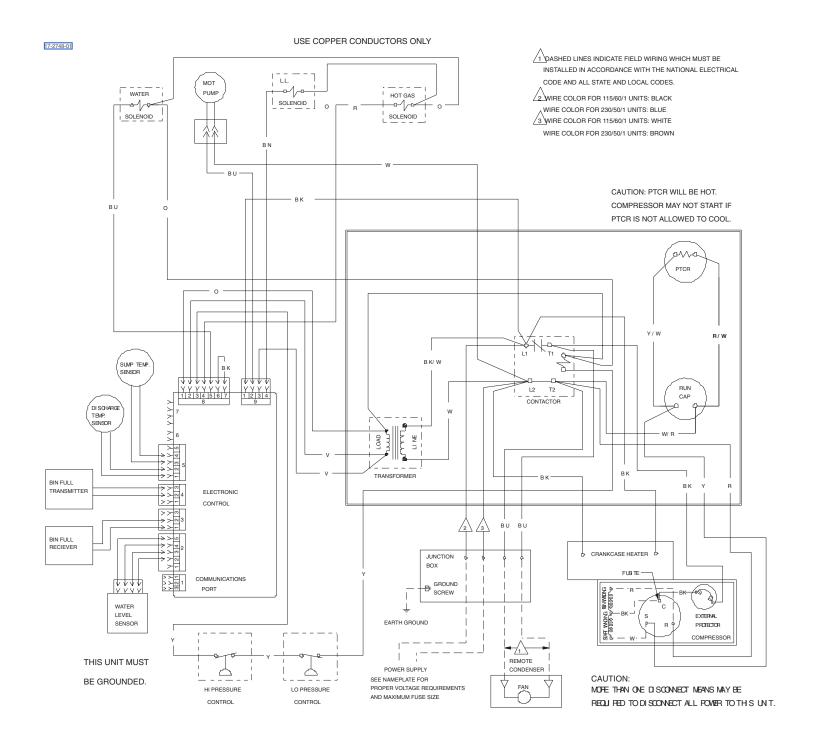


D Series, CME656R and CME806R Single Phase Wiring Diagram

USE COPPER CONDUCTORS ONLY 17-2751-01 1 QASHED LINES INDICATE FIELD WIRING WHICH MUST BE (AC ONL Y) INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL WATER HOT GAS мот МОТ CODE AND ALL STATE AND LOCAL CODES. -/-GRAY FAN SOLENOID SOLENOID ВU CAUTION: PTCR WILL LΒ PTCR IS NOT ALLOWED TO COOL. BAA-B PTCR W/Y W/R ВК SUMP TEMP. SENSOR RUN T2 CONTACTOR TEMP. SENSOR ELECTRONI C BIN FULL вк CONTROL TRANSMITTER PROTECTOR BK/W BIN FULL TERMINAL BOX INTERNAL RECIEVER GROUND JUNCTION SCREW⊕ COMMUNICATIONS HI PRESSURE # 3 CONTROL EARTH GROUND (WC ONLY) WATER POWER SUPPLY LEVEL SEE NAMEPLATE FOR SENSOR PROPER VOLTAGE REQUIREMENTS COMPRESSOR THIS UNIT MUST CAUTION:


MORE THAN ONE DISCONNECT MEANS MAY BE REQUIRED TO DISCONNECT ALL POWER TO THIS UNIT.

BE GROUNDED.


D Series, Three Phase Schematic Diagram

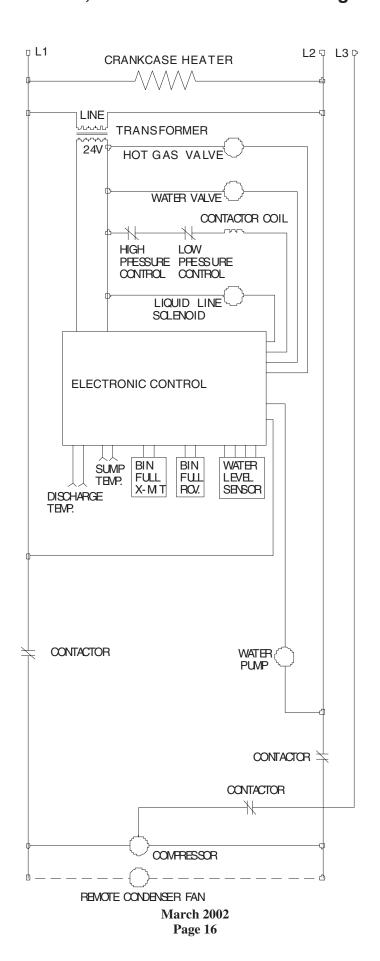

D Series, Three Phase Wiring Diagram

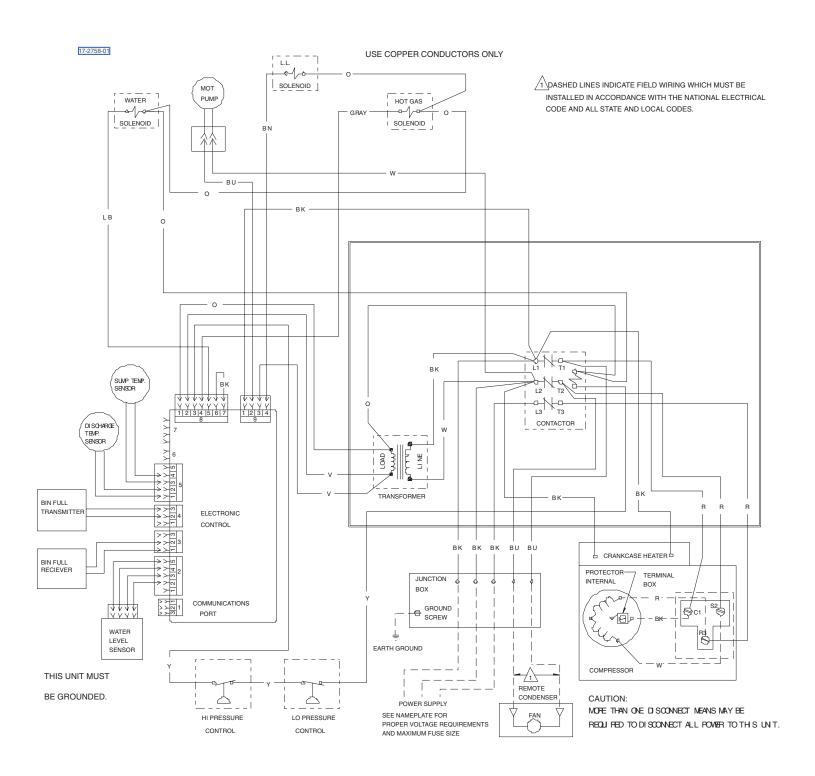


Single Phase Schematic Diagram, A - C Series

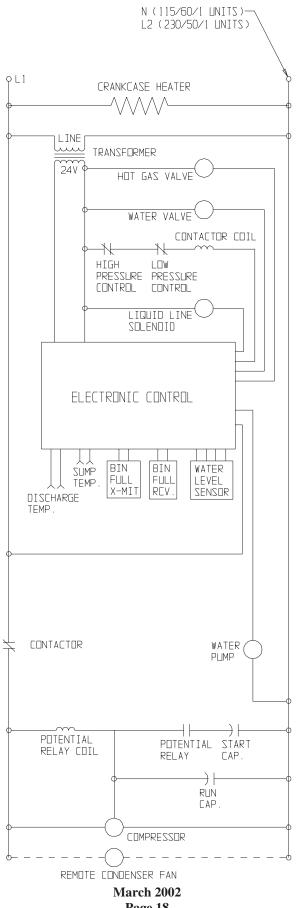


Page 18

A -C Series Single Phase Wiring Diagram

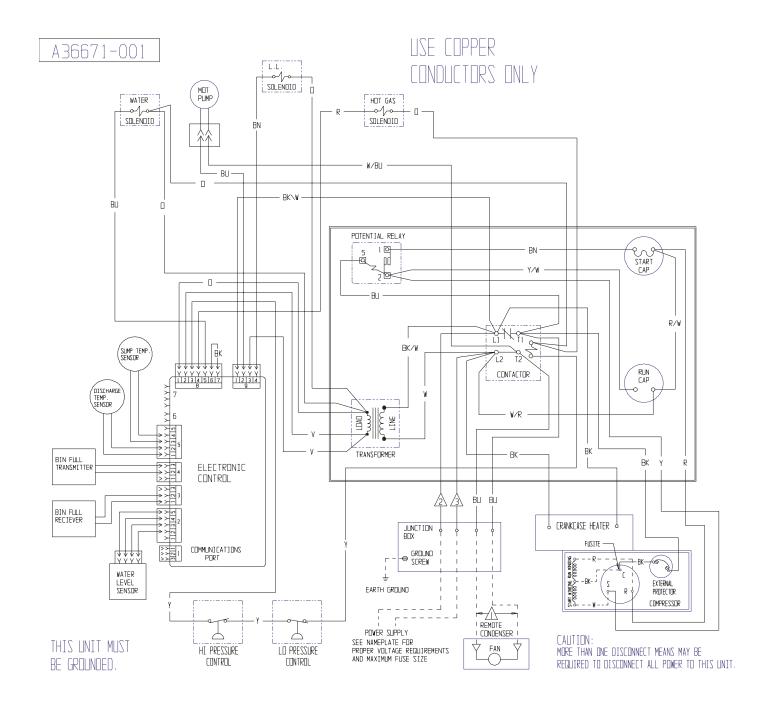

A -C Series Three Phase Schematic Diagram

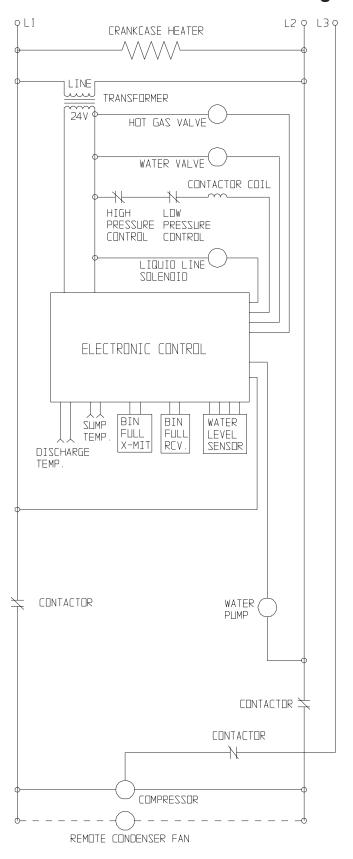

A - C Series Three Phase Wiring Diagram

