
This parts list contains the parts for the **CME865W** and the **CME1002W**. The model number of the machine is located on the ice machine in two places: on the back panel, and behind the front panel below the control box. Check the model number to be certain of obtaining the correct parts. Some machines are 50 Hz. They have a "-6" at the end of the model number, such as CME1002WE-**6A**


The major differences are in the timer, the compressor and its starting components. The two models also have different Hot Gas Valves.

TABLE OF CONTENTS

| lbinet | age 2 |
|--------------------------|-------|
| erior Cabinet Components | age 3 |
| frigeration System | age 4 |
| ater System | age 5 |
| ontrol Box | age 6 |
| Storage Bin | age 7 |
| ring Diagrams | age 8 |

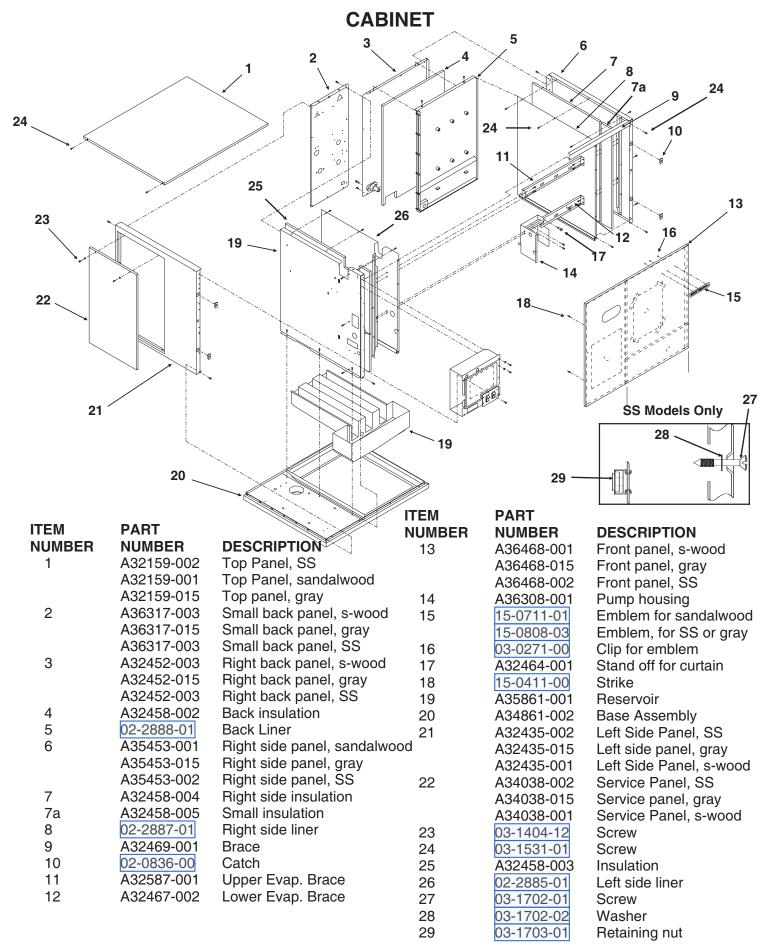

CME865W & CME1002W SERVICE PARTS INTERIOR CABINET COMPONENTS

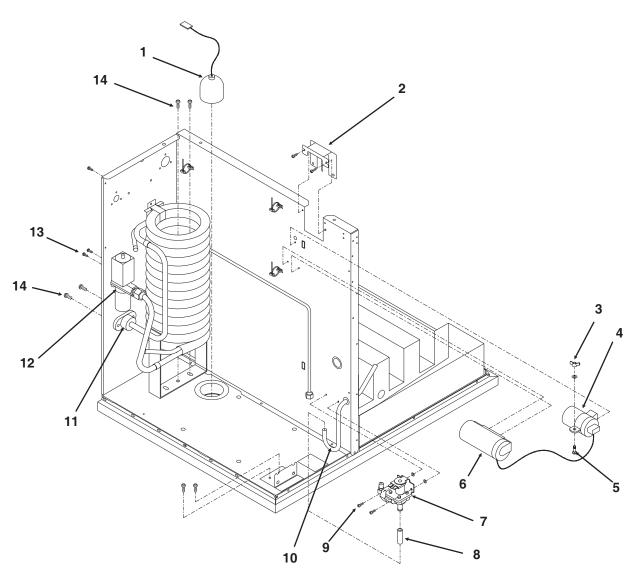


| ITEM NUMBER 1 | PART NUMBER A34908-021 | DESCRIPTION Transducer | ITEM NUMBER 9 | PART NUMBER 03-1531-01 | DESCRIPTION Screw |
|---------------------|------------------------------|-------------------------------------|---------------------|------------------------------|-----------------------------|
| 2 | 02-3404-01 | Flange retainer | 10 | A36293-001 | Tube |
| 3 | 03-0255-04 | Wing nut | 11 | A31828-003 | Drain adapter |
| 4 | 18-1902-55 | Run capacitor, for all except | 12 | 11-0478-01 | Water reg .valve |
| | | CME1002-6 (50 Hz) | 13 | 03-1645-01 | Screw |
| | 18-1902-57 | Run capacitor for CME1002-6 (50 Hz) | 14 | 03-1405-15 | Screw |
| 5 | 03-1652-02 | Bolt | | | |
| 6 | 18-1901-48 | Start capacitor | | | |
| | A35328-001 | Capacitor cover | | | |
| 7 | 12-2446-26 | Inlet water valve | | | |
| 8 | 13-0674-02 | Tubing, 1.5" req. | | | |


REFRIGERATION SYSTEM

| REFRIGERATION SYSTEM | | | | | | | |
|----------------------|------------------|----------------------------|--|---|--------------------------|--|--|
| ITEM | PART | | ITEM | PART | | | |
| NUMBER | NUMBER | DESCRIPTION | NUMBER | NUMBER | DESCRIPTION | | |
| 1 | 16-0876-01 | Distributor and tubes | 11 | 03-1405-20 | Screw | | |
| | | | | | | | |
| 2 3 | 16-0875-01 | Suction line header | 12 | 18-8749-22 | Compressor* | | |
| 3 | 16-0878-21 | TXV for 60 Hz models | | for CME865 6 | | | |
| | 16-1022-21 | TXV for 50 Hz models | | 18-8749-27 | Compressor* | | |
| 4 | 02-3396-01 | Insulation for TXV (half) | | for CME865 5 | 0 Hz | | |
| 5 | A30296-020 | Evaporator | | 18-8750-22 | Compressor* | | |
| 6 | 16-0877-01 | Hot gas manifold | | | 60 Hz, single phase | | |
| 7 | | | | | | | |
| 1 | 11-0493-21 | Hot gas valve for CME865 | | 18-8750-24 | Compressor* | | |
| | 11-0491-21 | Hot gas valve for CME1002 | | | 60 Hz, 3 phase | | |
| 8 | 11-0486-21 | Hi pressure control switch | | 18-8750-27 | Compressor* | | |
| 9 | 16-0832-20 | Access valve | | for CME1002 | 50 Hz | | |
| | 16-0832-03 | Port/core cap | Replacemen | | nclude a crankcase | | |
| | 16-0832-02 | Stem cap | | ised on this mod | | | |
| 10 | 18-2200-27 | Sleeve | | d or used upon i | | | |
| 10 | | | | | | | |
| | 18-2200-28 | Grommet | 13 | 12-2300-07 | Hi temp cut out | | |
| | | | 14 | 02-3319-02 | Filter drier | | |
| | | | 15 | 11-0608-21 | Water reg. valve | | |
| | | ^ @ | 16 | 16-0874-01 | Receiver | | |
| | | | 17 | 18-8200-25 | Water cooled condenser | | |
| | | | ., | 10 0200 20 | viator coolea contacheor | | |
| | 17 | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | (E | | `` | | 4 | | |
| | | | | | _1 | | |
| | 7 | | | ^ | | | |
| 16 | | | | | | | |
| | | 14 | | | | | |
| | B | 14 | | | | | |
| | | T | 11/11 | ./* (<i>(((</i> ******************************** | | | |
| | | | | | | | |
| 15 | | 13. , | de de la companya de | | | | |
| 13 | | | | | | | |
| | | | | | 3 | | |
| | | | | | | | |
| Ψ , | | | | | | | |
| | | | | | | | |
| | Ų | | | ` | | | |
| | | | | | | | |
| | | | | | 7 | | |
| | | | | | | | |
| | | | \ <u>\</u> | ~ 6 | | | |
| | | | <i></i> | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | _ | | | | |
| | | 12 | | | | | |
| | | | 7 | | | | |
| * Compress | ors include a ne | w 11 | | | | | |
| | | | | | ₩ | | |
| TII | ter drier. | | 8 | <u></u> - | | | |
| | | | | il . | _ | | |
| | | | | | 5 | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | <u> </u> | | |
| February 2014 | | | | | | | |
| Page 4 | | | | | | | |
| | | ı aye . | • | | | | |

WATER SYSTEM

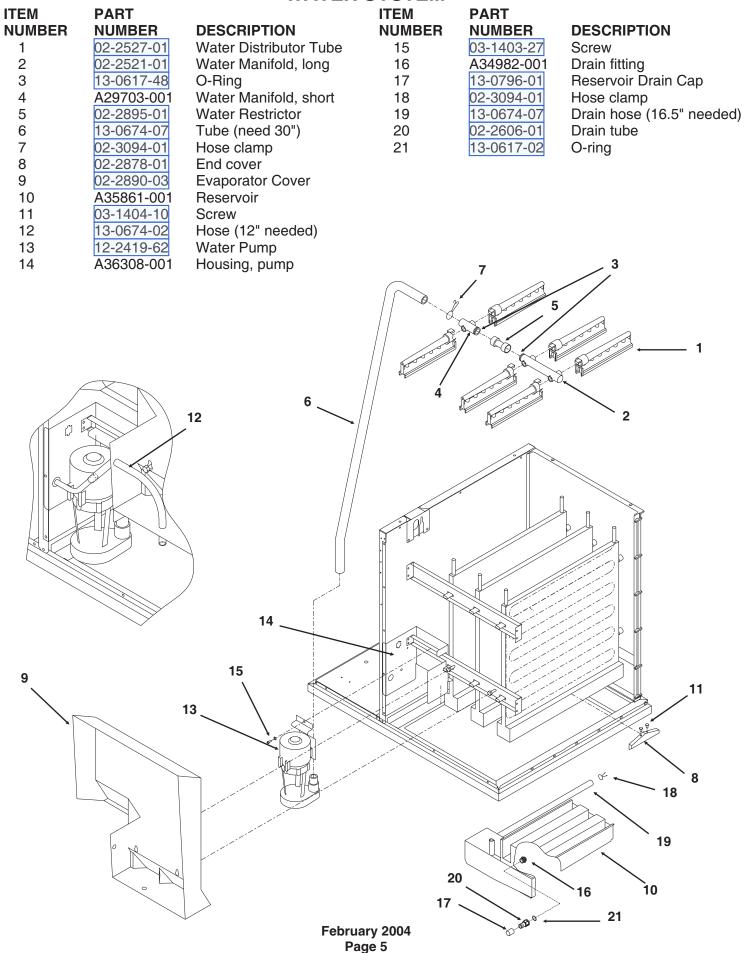


CME865W & CME1002W SERVICE PARTS CONTROL BOX

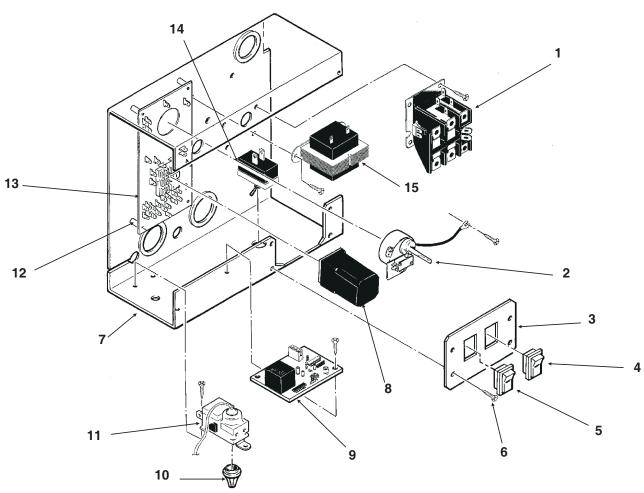

| ITEM NUMBER | PART NUMBER | DESCRIPTION | ITEM NUMBER | PART NUMBER | DESCRIPTION |
|----------------|----------------|-----------------------------|------------------|----------------|--------------------------|
| 1 | 12-0739-02 | Contactor 3 phase | 13 | 12-1912-01 | Circuit board |
| | 12-2469-02 | Contactor, single phase | 14 | 12-0426-01 | Compressor on off switch |
| 2 | 12-2107-22 | Timer for 60 Hz | 15 | 12-2285-22 | Transformer |
| | 12-2107-26 | Timer for 50 Hz | | | |
| 3 | 02-3173-01 | Cover plate | Not Shown | | |
| 4 | 12-2414-01 | ON/OFF/WASH switch | 16 | A34845-015 | Control Box Cover |
| | 12-2402-01 | Wire harness, bin level | 18 | 18-1903-46 | Potential relay, 60 Hz |
| | | switch to board | | and C | ME1002 50 Hz |
| 5 | 12-2411-01 | Bin ice level switch | | 18-1903-33 | Potential relay, |
| 6 | 03-1638-03 | Screw | | for CM | 1E865 50 Hz |
| 7 | no number | Control box | | | |
| 8 | 12-1879-03 | Relay | | | |
| 9 | 12-2376-21 | Bin level control board | | | |
| 10 | no number | Knob, part of item 11 | | | |
| 11 | 11-0436-21 | Cube size control, includes | knob | | |
| 12 | 02-2242-02 | Stand off | | | |
| 12 | 02-2242-02 | Stand off | | | |

ICE STORAGE BIN SERVICE PARTS

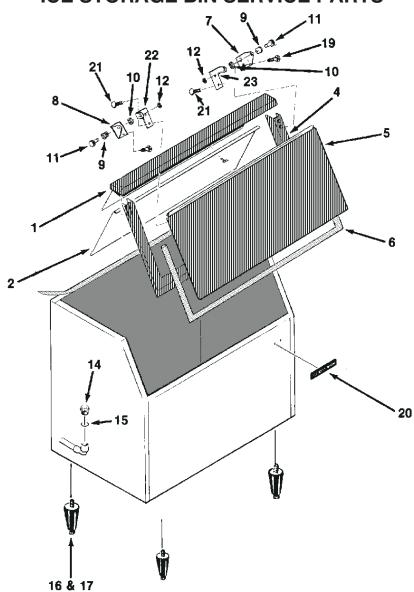


BH550

| ITEM NUMBER | PART NUMBER | DESCRIPTION | ITEM NUMBER | PART NUMBER | DESCRIPTION |
|----------------|----------------|-------------------------|----------------|----------------|----------------------|
| 1 | A33921-001 | Canopy | 14 | 02-2809-01 | Drain Top |
| 2 | A32580-001 | Baffle | 15 | 13-0617-11 | O-Ring |
| 3 | 19-0503-04 | Gasket | 16 | KLPE | Leg kit, black |
| 4 | A33922-020 | Door Frame | 17 | KLPS | Leg kit, nickel |
| | A37639-021 | Door frame for C series | 18 | 03-1404-06 | Screw |
| 5 | A33938-020 | Door | 19 | 03-1360-02 | Screw |
| 6 | 13-0595-00 | Door Gasket, 6' req. | 20 | 15-0711-01 | Emblem |
| 7 | A32396-002 | Hinge Right | 21 | 03-1418-41 | Screw |
| 8 | A32396-001 | Hinge Left | 22 | A32546-001 | Door hinge left |
| 9 | 02-2380-02 | Hinge Bushing | 23 | A32546-002 | Door hinge right |
| 10 | 02-2380-02 | Hinge Spacer | 24 | 03-1423-07 | Speed nut for baffle |
| 11 | 02-2806-01 | Shoulder Screw | | | |
| 12 | 03-1539-09 | E-Clip | | | |
| 13 | 03-0727-06 | Thumb Screw | | | |

Single Phase, 60 Hz Wiring Diagram

Note 2*: Wire Color for -32 (60 hz) units is Black. Wire Color for -6 (50 Hz) units is Brown.

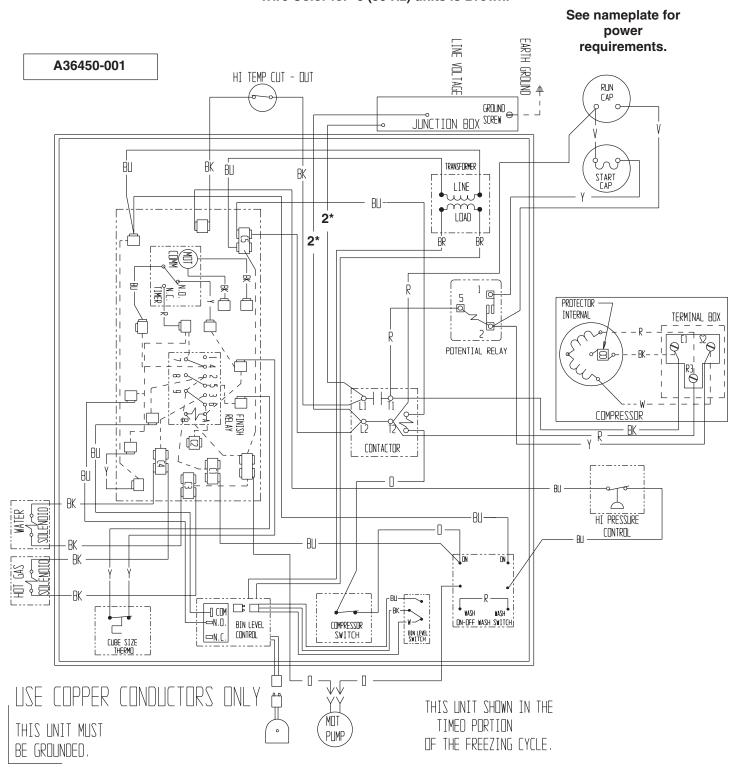


Single Phase, 60 Hz Schematic Diagram

CAUTION:


MORE THAN ONE DISCONNECT MEANS MAY BE REQUIRED TO DISCONNECT ALL POWER TO THIS UNIT.

NOTE: DASHED LINES INDICATE FIELD WIRING WHICH MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL STATE AND LOCAL CODES.

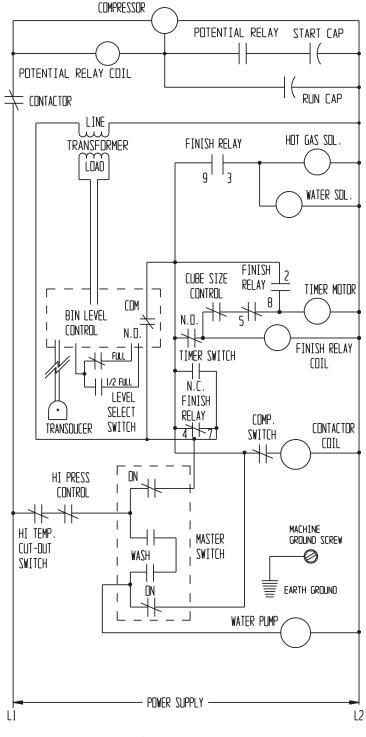

January 1998 Page 9

Three Phase Wiring Diagram

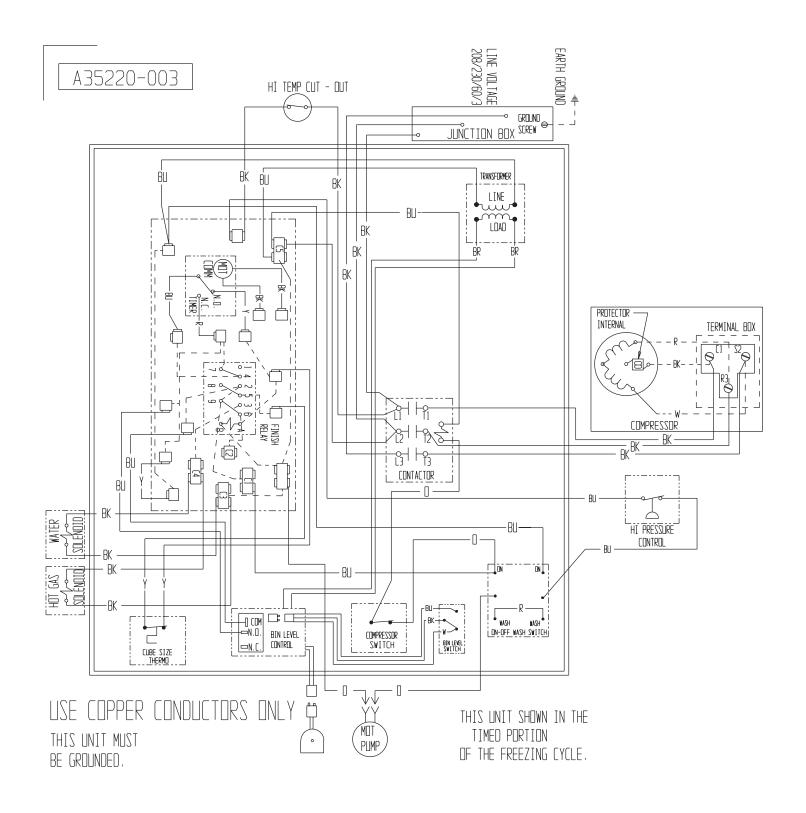


Three Phase Schematic Diagram

CAUTION:

MORE THAN ONE DISCONNECT MEANS MAY BE REQUIRED TO DISCONNECT ALL POWER TO THIS UNIT.

NOTE: DASHED LINES INDICATE FIELD WIRING WHICH MUST BE

INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL
CODE AND ALL STATE AND LOCAL CODES.

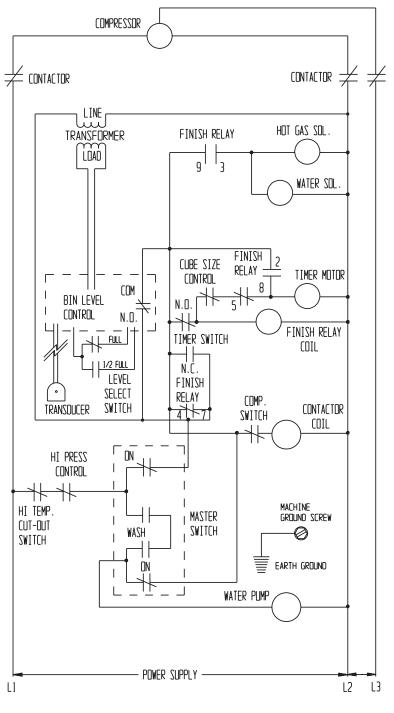

January 1998 Page 11

50 Hz Wiring Diagram

