

# N0622L, F0822L, N0922L, F1222L, N1322L/NCL, F1522L/NCL

## Service Parts

This is the illustrated service parts list for the N0622, F0822, N0922, F1222, N1322 and F1522 remote low side ice machine heads.

Several models are listed together, be sure to select the correct part based on the complete model number, including voltage.

Voltage codes:

-1 = 115/60/1

The reservoir and related tubes changed in June 2012.


NCL units ship with a R407A TXV and are Nitrogen charged.

### Contents

|                                                                    |         |
|--------------------------------------------------------------------|---------|
| Cabinet - A Series . . . . .                                       | Page 2  |
| Cabinet - D Series . . . . .                                       | Page 3  |
| Refrigeration. . . . .                                             | Page 4  |
| Water and Chute, Clear Reservoir Cover Models . . . . .            | Page 5  |
| Water and Chute, White Reservoir Cover Units and D Series .. . . . | Page 6  |
| N0622L, N0922L, N1322L Evaporator System . . . . .                 | Page 7  |
| F0822L, F1222L, F1522L Evaporator System . . . . .                 | Page 8  |
| Gear Reducer and Motor .. . . .                                    | Page 9  |
| Electrical Control and Harnesses . . . . .                         | Page 10 |

# N0622L, F0822L, N0922L, F1222L, N1322L/NCL, F1522L/NCL

## Service Parts Cabinet - A Series

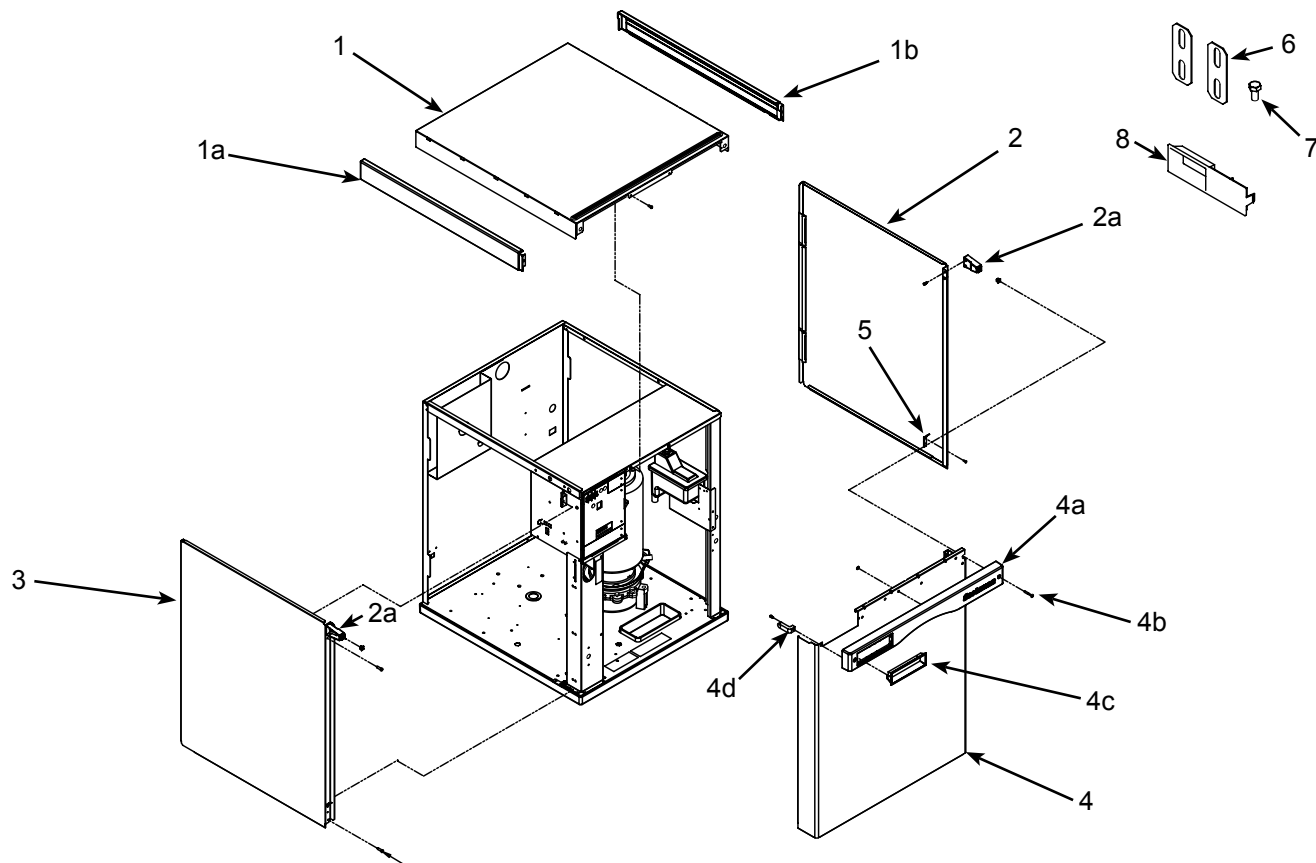

| Item Number | Part Number                | Description                                    |
|-------------|----------------------------|------------------------------------------------|
| 1           | A39579-021                 | Top panel                                      |
| 1a          | <a href="#">02-4221-01</a> | Left trim strip*                               |
| 1b          | <a href="#">02-4221-02</a> | Right trim strip*                              |
| 2           | A39445-022                 | Right side panel, incl 2a and 5                |
| 2a          | <a href="#">02-4215-01</a> | Screw receptacle                               |
| 3           | A39444-024                 | Left side panel, incl 2a and 5                 |
| 4           | A39443-024                 | Front panel, complete. Includes 4a, 4b, 4c, 4d |
| 4a          | <a href="#">02-4214-01</a> | Trim strip                                     |
| 4b          | <a href="#">03-1735-03</a> | Screw                                          |
| 4c          | <a href="#">02-4284-01</a> | Bezel                                          |
| 4d          | <a href="#">02-4216-01</a> | Gusset                                         |
| 5           | A39571-001                 | Clip                                           |
| 6           | A30911-015                 | Machine straps                                 |
| 7           | <a href="#">03-1405-15</a> | Cap screw                                      |
| 8           | <a href="#">02-4284-02</a> | Bezel, partial window**                        |

\* Side trim strips discontinued mid 2011


\*\* Item 8 discontinued from production 2/9/2012

December 2014

Page 2

# N0622L, F0822L, N0922L, F1222L, N1322L/NCL, F1522L/NCL

## Service Parts Cabinet - D Series

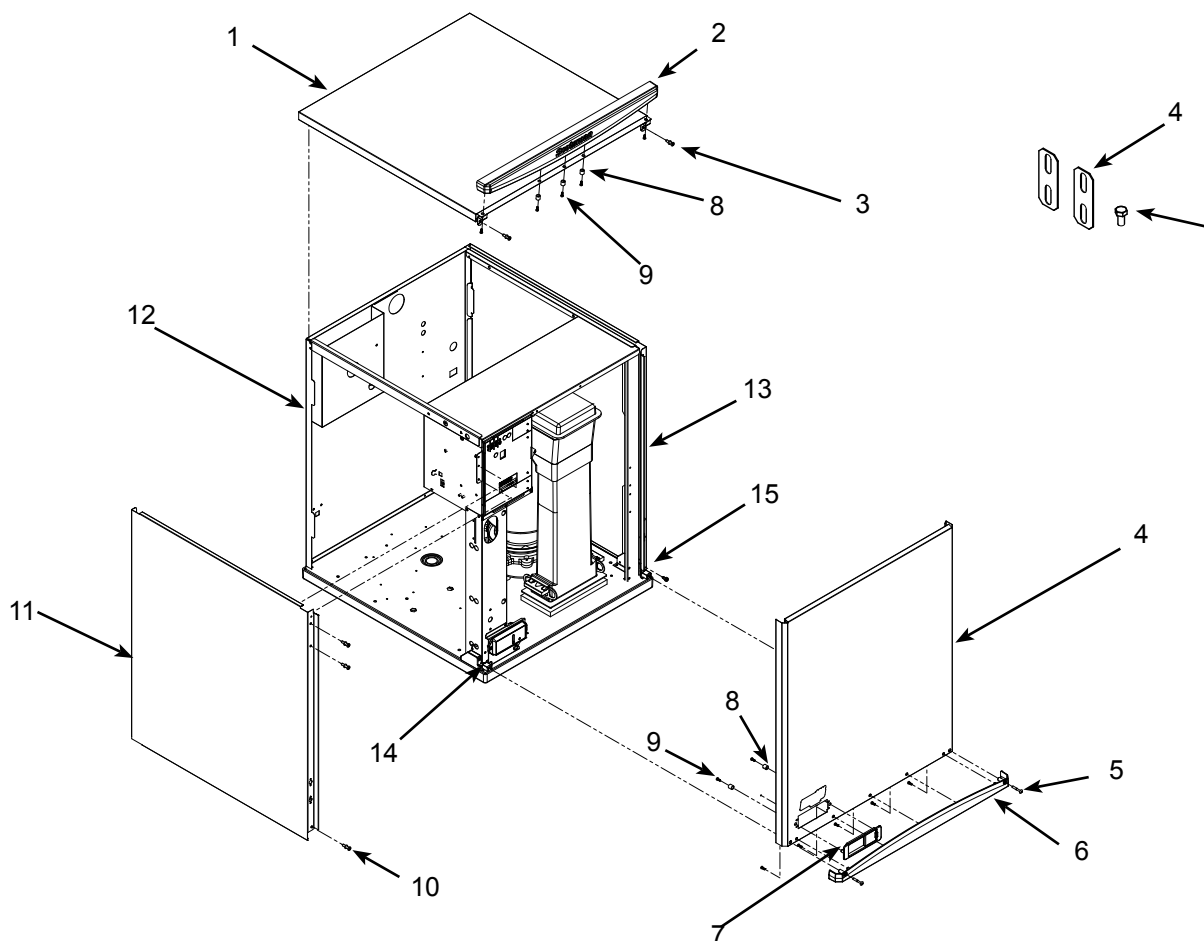


| Item Number | Part Number                | Description                    | 13 | A40335-022                 | Right side panel  |
|-------------|----------------------------|--------------------------------|----|----------------------------|-------------------|
| 1           | A40309-022                 | Top panel, includes item 2     | 14 | <a href="#">02-4823-01</a> | Left panel mount  |
| 2           | <a href="#">02-4819-02</a> | Trim strip                     | 15 | <a href="#">02-4823-01</a> | Right panel mount |
| 3           | <a href="#">03-1404-10</a> | Screw                          |    |                            |                   |
| 4           | A40308-029                 | Front panel, includes item 6&7 |    |                            |                   |
| 5           | <a href="#">03-1735-03</a> | Screw                          |    |                            |                   |
| 6           | <a href="#">02-4820-02</a> | Trim strip                     |    |                            |                   |
| 7           | <a href="#">02-4821-02</a> | Bezel, includes standard door  |    |                            |                   |
| 7a          | <a href="#">02-4822-01</a> | Door, bezel with handle        |    |                            |                   |
| 7b          | <a href="#">02-4822-02</a> | Door, bezel secure             |    |                            |                   |
| 8           | <a href="#">02-4824-01</a> | Spacer                         |    |                            |                   |
| 9           | <a href="#">03-3836-02</a> | Screw                          |    |                            |                   |
| 10          | <a href="#">03-1404-10</a> | Screw                          |    |                            |                   |
| 11          | A40310-026                 | Left side panel                |    |                            |                   |
| 12          | A39179-001                 | Back panel                     |    |                            |                   |

# N0622L, F0822L, N0922L, F1222L, N1322L/NCL, F1522L/NCL

## Service Parts

### Refrigeration

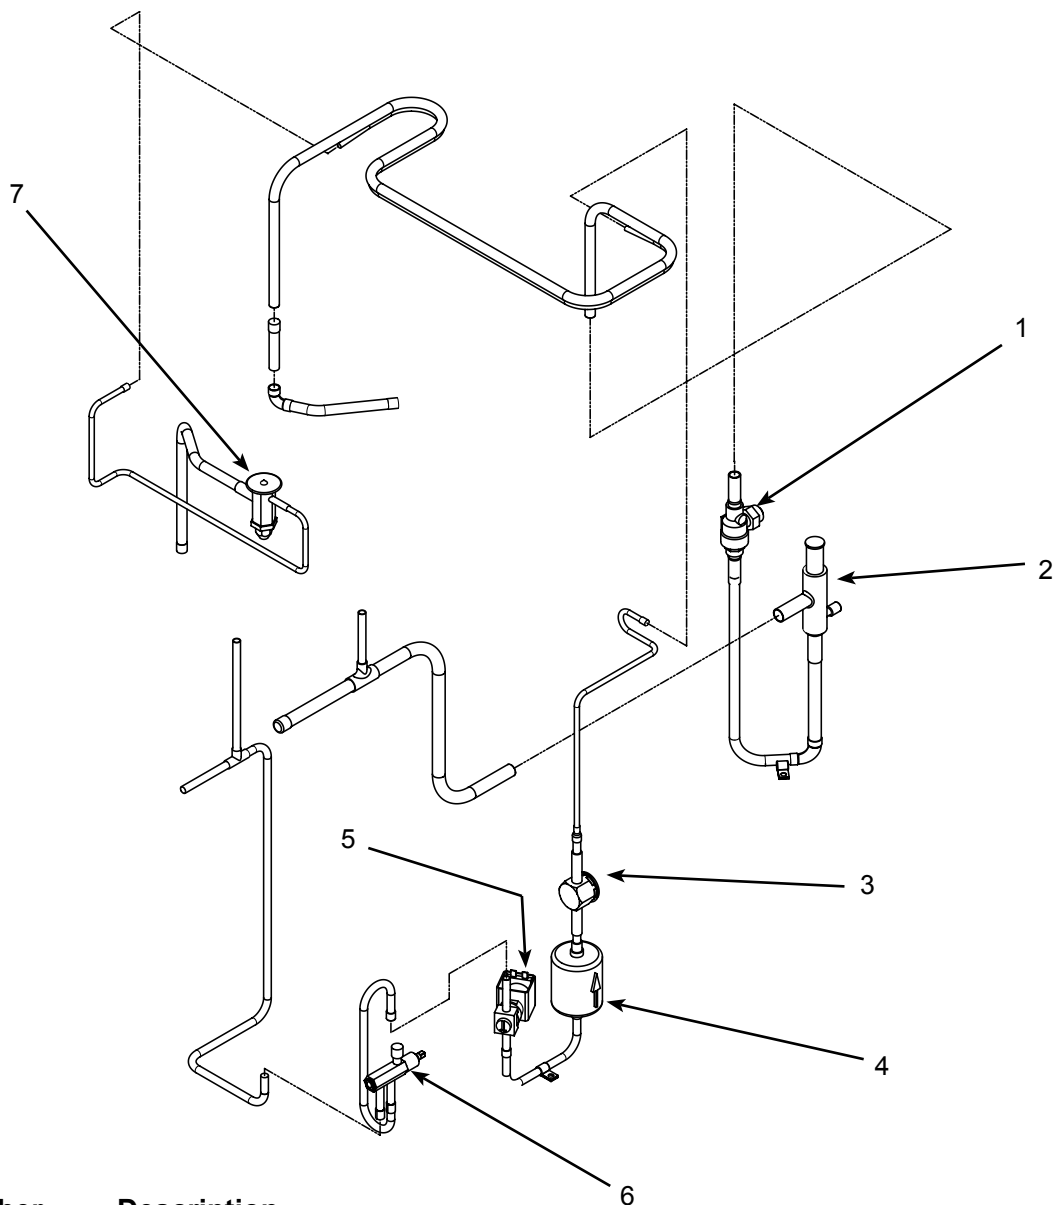


| Item   | Part                       |                             |
|--------|----------------------------|-----------------------------|
| Number | Number                     | Description                 |
| 1      | <a href="#">11-0548-02</a> | Ball valve                  |
| 2      | <a href="#">16-1143-01</a> | EPR valve                   |
| 3      | <a href="#">16-0762-01</a> | Sight glass                 |
| 4      | <a href="#">02-3319-02</a> | Dryer                       |
| 5      | <a href="#">11-0493-02</a> | Liquid line valve, 115 volt |
| 6      | <a href="#">16-1030-01</a> | Liquid access valve         |
| 7      | <a href="#">16-1144-22</a> | TXV, N0622, F0822 (R404A)   |
|        | <a href="#">16-1144-24</a> | TXV, N0922, F1222 (R404A)   |
|        | <a href="#">16-1144-23</a> | TXV, N1322, F1522 (R404A)   |
| 8      | <a href="#">16-1222-21</a> | TXV, N1322, F1522 (R407A)   |
|        | <a href="#">02-4406-01</a> | Insulation, TXV             |

# N0622L, F0822L, N0922L, F1222L, N1322L/NCL, F1522L/NCL

## Service Parts

### Water and Chute, Clear Reservoir Cover Units

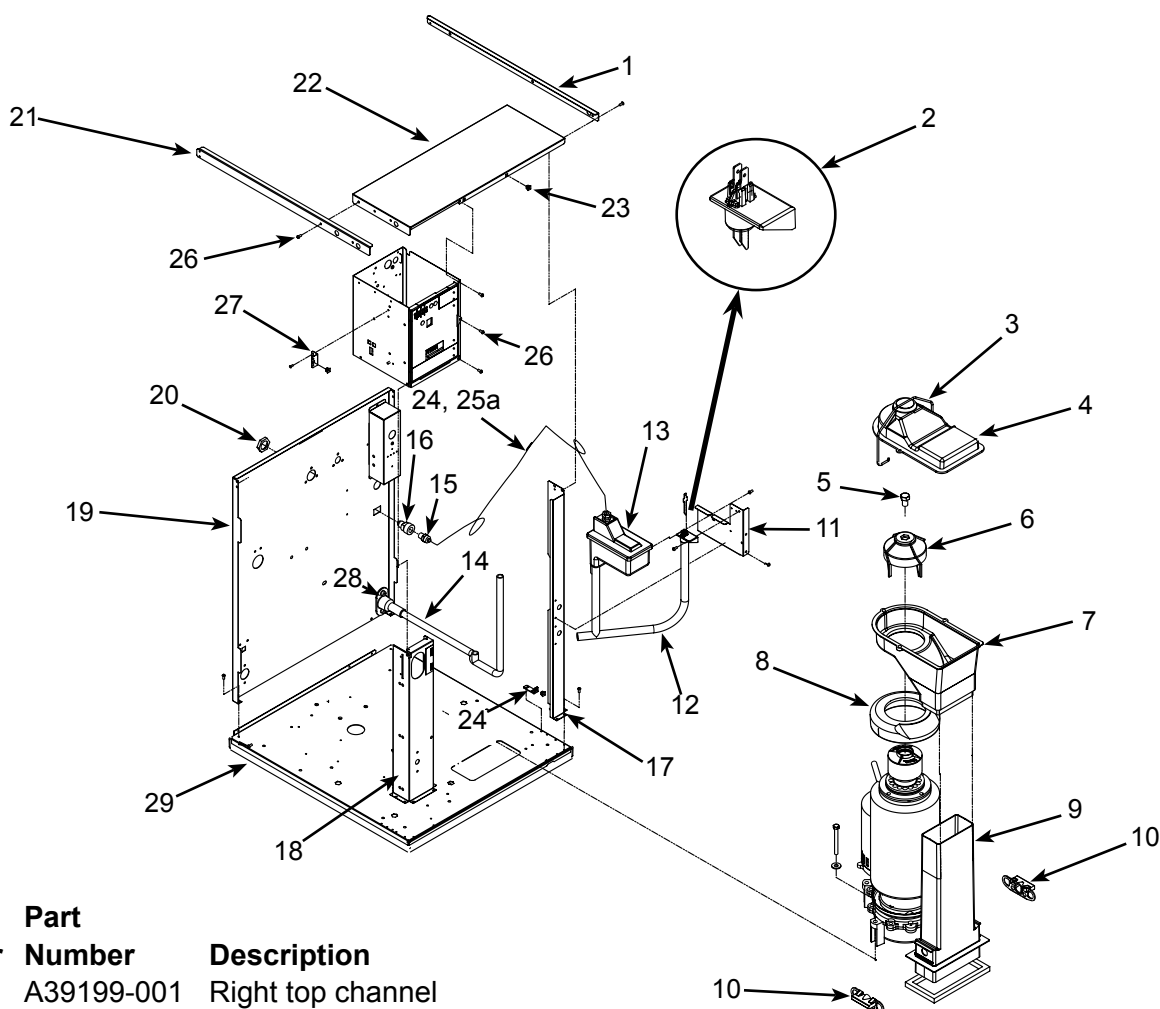

| Item Number | Part Number                | Description             |     |                            |                        |
|-------------|----------------------------|-------------------------|-----|----------------------------|------------------------|
| 1           | A39199-001                 | Right top channel       |     |                            |                        |
| 2           | <a href="#">02-4449-21</a> | Water sensor            |     |                            |                        |
| 3           | A34969-001                 | Bail clamp              |     |                            |                        |
| 4           | <a href="#">02-2930-04</a> | Chute cover             |     |                            |                        |
| 5           | <a href="#">03-1405-52</a> | Cap screw               |     |                            |                        |
| 6           | <a href="#">02-3001-01</a> | Ice sweep               |     |                            |                        |
| 7           | <a href="#">02-3841-01</a> | Ice chute               |     |                            |                        |
| 8           | <a href="#">13-0929-01</a> | Insul collar, flaker    |     |                            |                        |
|             | <a href="#">13-0929-02</a> | Insul collar, nuggets   |     |                            |                        |
| 9           | <a href="#">02-2929-04</a> | Ice chute, lower        |     |                            |                        |
|             | <a href="#">02-2929-03</a> | ice chute, lower*       |     |                            |                        |
| 10          | A37708-021                 | Bin control set         |     |                            |                        |
| 11          | A39200-001                 | Reservoir bracket       |     |                            |                        |
| 12          | <a href="#">02-4338-01</a> | Evaporator inlet hose   |     |                            |                        |
|             | A39336-001                 | Evaporator inlet hose*  |     |                            |                        |
| 13          | <a href="#">02-3371-01</a> | Water reservoir & valve |     |                            |                        |
|             | <a href="#">02-3371-02</a> | Float and arm only      |     |                            |                        |
|             | <a href="#">02-3266-03</a> | Plunger/seat only       |     |                            |                        |
| 14          | <a href="#">02-4339-01</a> | Drain hose              |     |                            |                        |
|             | A39310-001                 | Drain hose*             |     |                            |                        |
|             | * N0622 or F0822           |                         |     |                            |                        |
|             |                            |                         | 15  | <a href="#">16-1039-01</a> | Connector, male        |
|             |                            |                         | 16  | <a href="#">16-0835-01</a> | Flare fitting, male    |
|             |                            |                         | 17  | A39182-001                 | Post, right front      |
|             |                            |                         | 18  | A39184-001                 | Post, control box      |
|             |                            |                         | 19  | A39179-001                 | Back panel             |
|             |                            |                         | 20  | <a href="#">03-1394-01</a> | Pal nut                |
|             |                            |                         | 21  | A39185-001                 | Left top panel         |
|             |                            |                         | 22  | A39181-001                 | Control box cover      |
|             |                            |                         | 23  | <a href="#">03-3804-01</a> | Receptacle             |
|             |                            |                         | 24  | A38732-001                 | Panel mount            |
|             |                            |                         | 25  | <a href="#">13-0895-01</a> | Tubing, order 3        |
|             |                            |                         | 25a | <a href="#">16-0871-01</a> | Insert (for valve end) |
|             |                            |                         | 26  | <a href="#">03-1531-01</a> | Screw                  |
|             |                            |                         | 27  | A39025-001                 | Bracket                |
|             |                            |                         | 28  | <a href="#">02-3692-21</a> | Drain fitting          |
|             |                            |                         | 29  | <a href="#">02-4524-21</a> | Base assembly          |


# N0622L, F0822L, N0922L, F1222L, N1322L/NCL, F1522L/NCL

## Service Parts

### Water and Chute, White Reservoir Cover Units and D Series

Identification Reference: Units with this design also have water sensor in the reservoir. Use began June 18, 2012 with N1322R-32A serial number 12061320013354.

Item 12 changed August 2013, with serial number 13081320013114

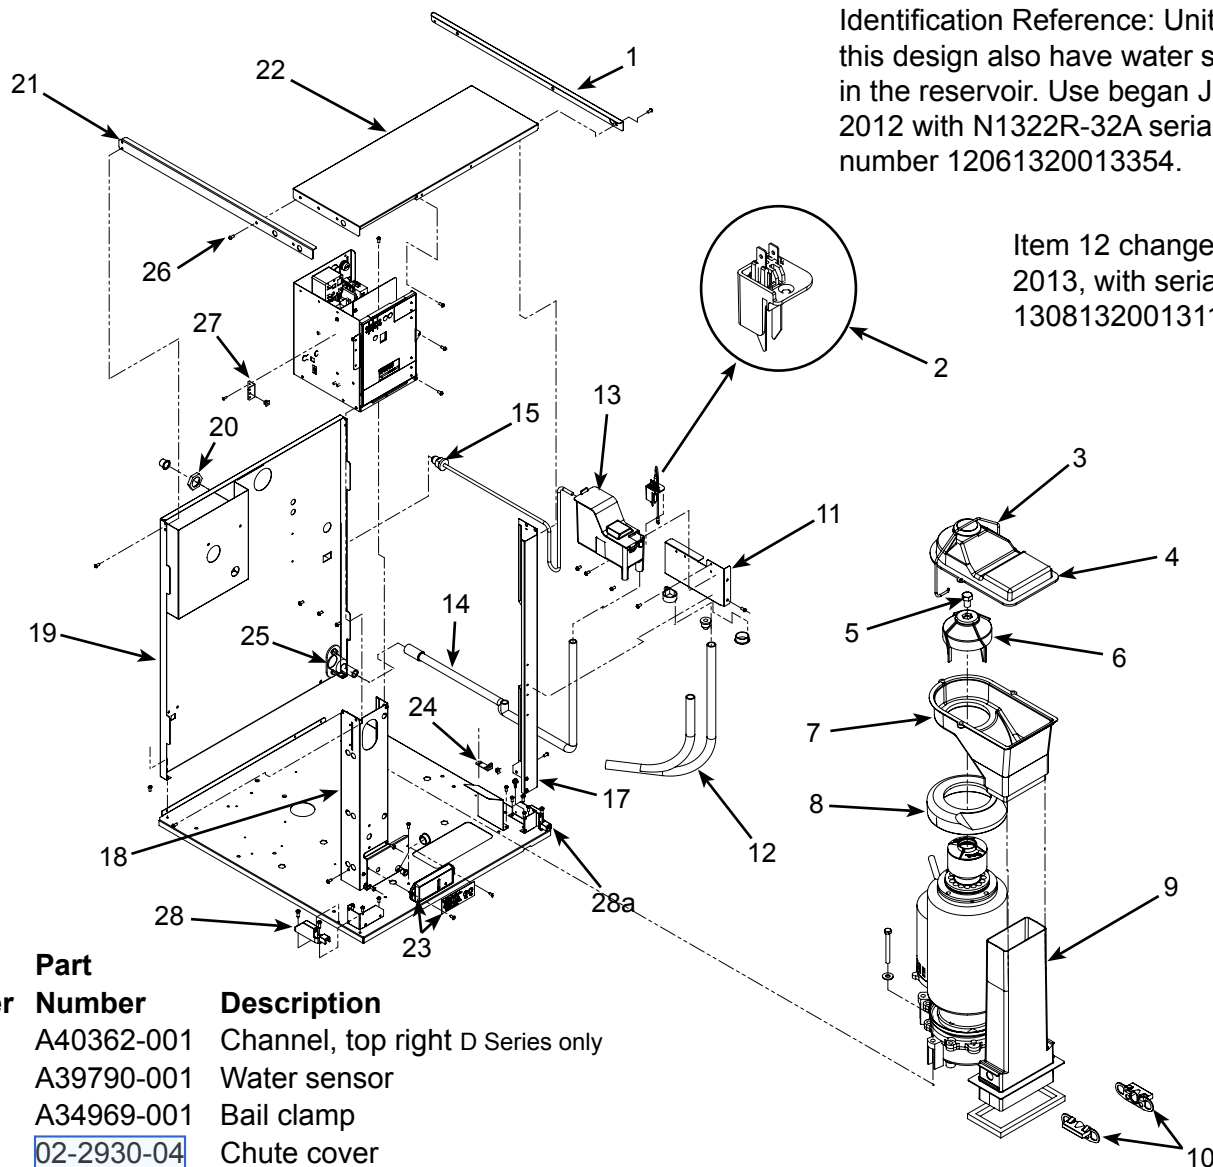

| Item Number | Part Number                | Description                      |
|-------------|----------------------------|----------------------------------|
| 1           | A40362-001                 | Channel, top right D Series only |
| 2           | A39790-001                 | Water sensor                     |
| 3           | A34969-001                 | Bail clamp                       |
| 4           | <a href="#">02-2930-04</a> | Chute cover                      |
| 5           | <a href="#">03-1405-52</a> | Cap screw                        |
| 6           | <a href="#">02-3001-01</a> | Ice sweep                        |
| 7           | <a href="#">02-3841-01</a> | Ice chute                        |
| 8           | <a href="#">13-0929-01</a> | Insulation collar, flakers       |
|             | <a href="#">13-0929-02</a> | Insulation collar, nuggets       |
| 9           | <a href="#">02-2929-04</a> | Ice chute lower                  |
|             | <a href="#">02-2929-03</a> | Ice chute lower*                 |
| 10          | A37708-021                 | Bin control set (2)              |
| 11          | A40029-001                 | Reservoir bracket                |
| 12          | <a href="#">02-4752-01</a> | Evaporator inlet hose            |
|             | A40189-001                 | Evaporator inlet hose*           |
| 13          | A39789-001                 | Water reservoir & valve          |
| 13a         | <a href="#">02-2217-02</a> | Float and arm only               |
| 14          | <a href="#">02-4708-01</a> | Drain hose                       |
|             | A40031-001                 | Drain hose*                      |
| 15          | <a href="#">16-1198-01</a> | Fitting only                     |
| 16          | <a href="#">02-4524-21</a> | Base                             |
| 17          | A39182-001                 | Post, right front                |
| 18          | A39184-001                 | Post, control box                |
| 19          | A39179-001                 | Back panel                       |
| 20          | <a href="#">03-1394-01</a> | Pal nut                          |
| 21          | A40361-001                 | Channel, top left D Series only  |
| 22          | A39181-001                 | Control box cover                |
| 23          | <a href="#">11-0622-21</a> | Lower light & sw panel           |
| 24          | A38732-001                 | Panel mount                      |
| 25          | <a href="#">02-3692-21</a> | Drain fitting                    |
| 26          | <a href="#">03-1531-01</a> | Screw                            |
| 27          | A39025-001                 | Bracket                          |
| 28          | <a href="#">02-4823-01</a> | Left panel mount                 |
| 28a         | <a href="#">02-4823-01</a> | Right panel mount                |



August 2015

Page 6

# N0622L, F0822L, N0922L, F1222L, N1322L/NCL, F1522L/NCL

## Service Parts

### N0622L, N0922L, N1322L Evaporator System

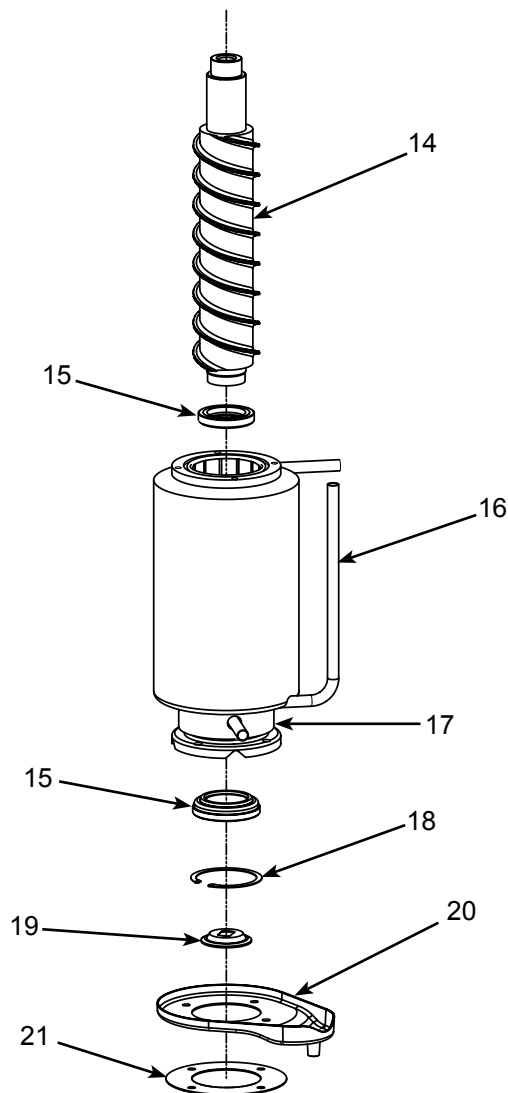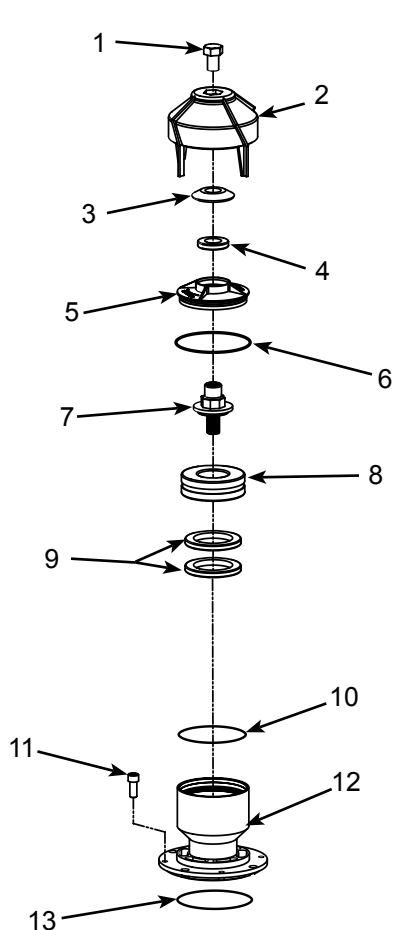


| Item Number | Part Number | Description            | Item Number | Part Number | Description                                                |
|-------------|-------------|------------------------|-------------|-------------|------------------------------------------------------------|
| 1           | 03-1405-52  | Cap screw              | 12          | A32900-020  | Nugget breaker assembly, includes items 3,4,5,6,8,9 and 13 |
| 2           | 02-3001-01  | Ice sweep              | 13          | 13-0617-45  | O-ring                                                     |
| 3           | 13-0871-01  | Water shed             | 14          | A38071-021  | Auger, N0622                                               |
| 4           | 02-2978-01  | Lip seal               |             | A38071-022  | Auger, N0922, N1322                                        |
| 5           | 02-3128-20  | Cover, includes item 4 | 15          | 02-0929-23  | Water seal                                                 |
| 6           | 13-0617-54  | O-ring                 | 16          | 02-4350-21  | Evaporator, N0622                                          |
| 7           | 08-0660-01  | Auger stud             |             | 02-4352-21  | Evaporator, N0922, N1322                                   |
| 8           | A34559-020  | Bearing                | 17          | 02-4352-01  | Collar                                                     |
| 9           | 02-2977-01  | Lip seal               | 18          | A32777-001  | Retaining ring                                             |
| 10          | 13-0617-52  | O-ring - to chute      | 19          | 02-4663-01  | Water shed                                                 |
| 11          | 03-1544-08  | Screw, socket head     | 20          | 02-3837-01  | Drip pan                                                   |
|             |             |                        | 21          | 13-0704-00  | Gasket                                                     |

# N0622L, F0822L, N0922L, F1222L, N1322L/NCL, F1522L/NCL

## Service Parts


### F0822L, F1222L, F1522L Evaporator System

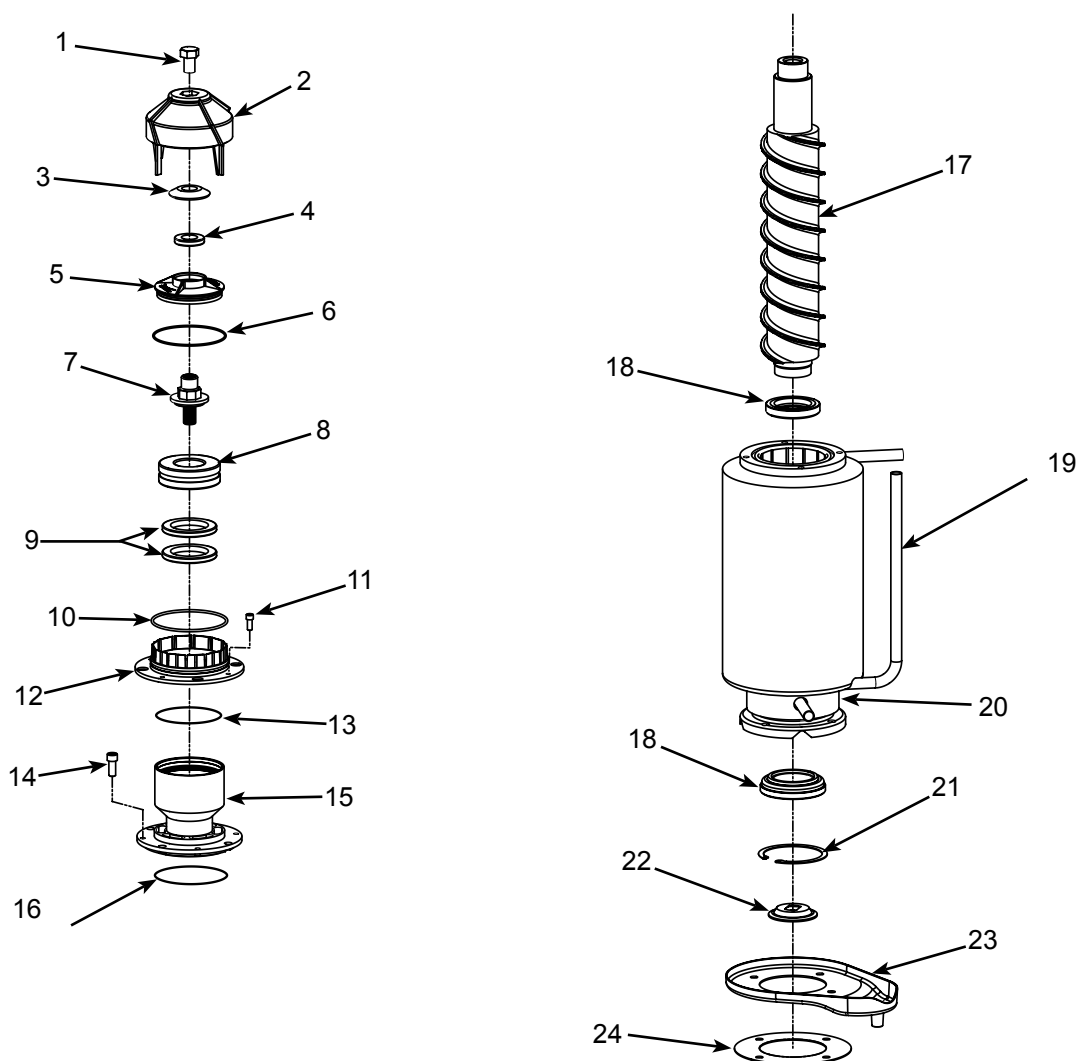

| Item Number | Part Number | Description                                                 |
|-------------|-------------|-------------------------------------------------------------|
| 1           | 03-1405-52  | Cap screw                                                   |
| 2           | 02-3001-01  | Ice sweep                                                   |
| 3           | 13-0871-01  | Water shed                                                  |
| 4           | 02-2978-01  | Lip seal                                                    |
| 5           | 02-3128-20  | Cover, includes item 4                                      |
| 6           | 13-0617-54  | O-ring                                                      |
| 7           | 08-0660-01  | Auger stud                                                  |
| 8           | A34559-020  | Bearing                                                     |
| 9           | 02-2977-01  | Lip seal                                                    |
| 10          | 13-0617-52  | O-ring, to chute                                            |
| 11          | 03-1403-27  | Screw                                                       |
| 12          | 02-2916-01  | Slotted collar                                              |
| 13          | 13-0617-49  | O-ring, under slotted collar                                |
| 14          | 03-1544-08  | Screw, socket head                                          |
| 15          | A34505-020  | Flaker breaker assembly, includes items 3,4,5,6,8,9, and 16 |
| 16          | 13-0617-45  | O-ring                                                      |
| 17          | A38071-021  | Auger, F0822                                                |
|             | A38071-022  | Auger, F1222, F1522                                         |
| 18          | 02-0929-23  | Water seal                                                  |
| 19          | 02-4350-21  | Evaporator, F0822                                           |
|             | 02-4352-21  | Evaporator, F1222, F1522                                    |
| 20          | 02-4358-01  | Collar                                                      |
| 21          | A32777-001  | Retaining ring                                              |
| 22          | 02-4663-01  | Water shed                                                  |
| 23          | 02-3837-01  | Drip pan                                                    |
| 24          | 13-0704-00  | Gasket                                                      |

# N0622L, F0822L, N0922L, F1222L, N1322L/NCL, F1522L/NCL

## Service Parts Gear Reducer and Motor

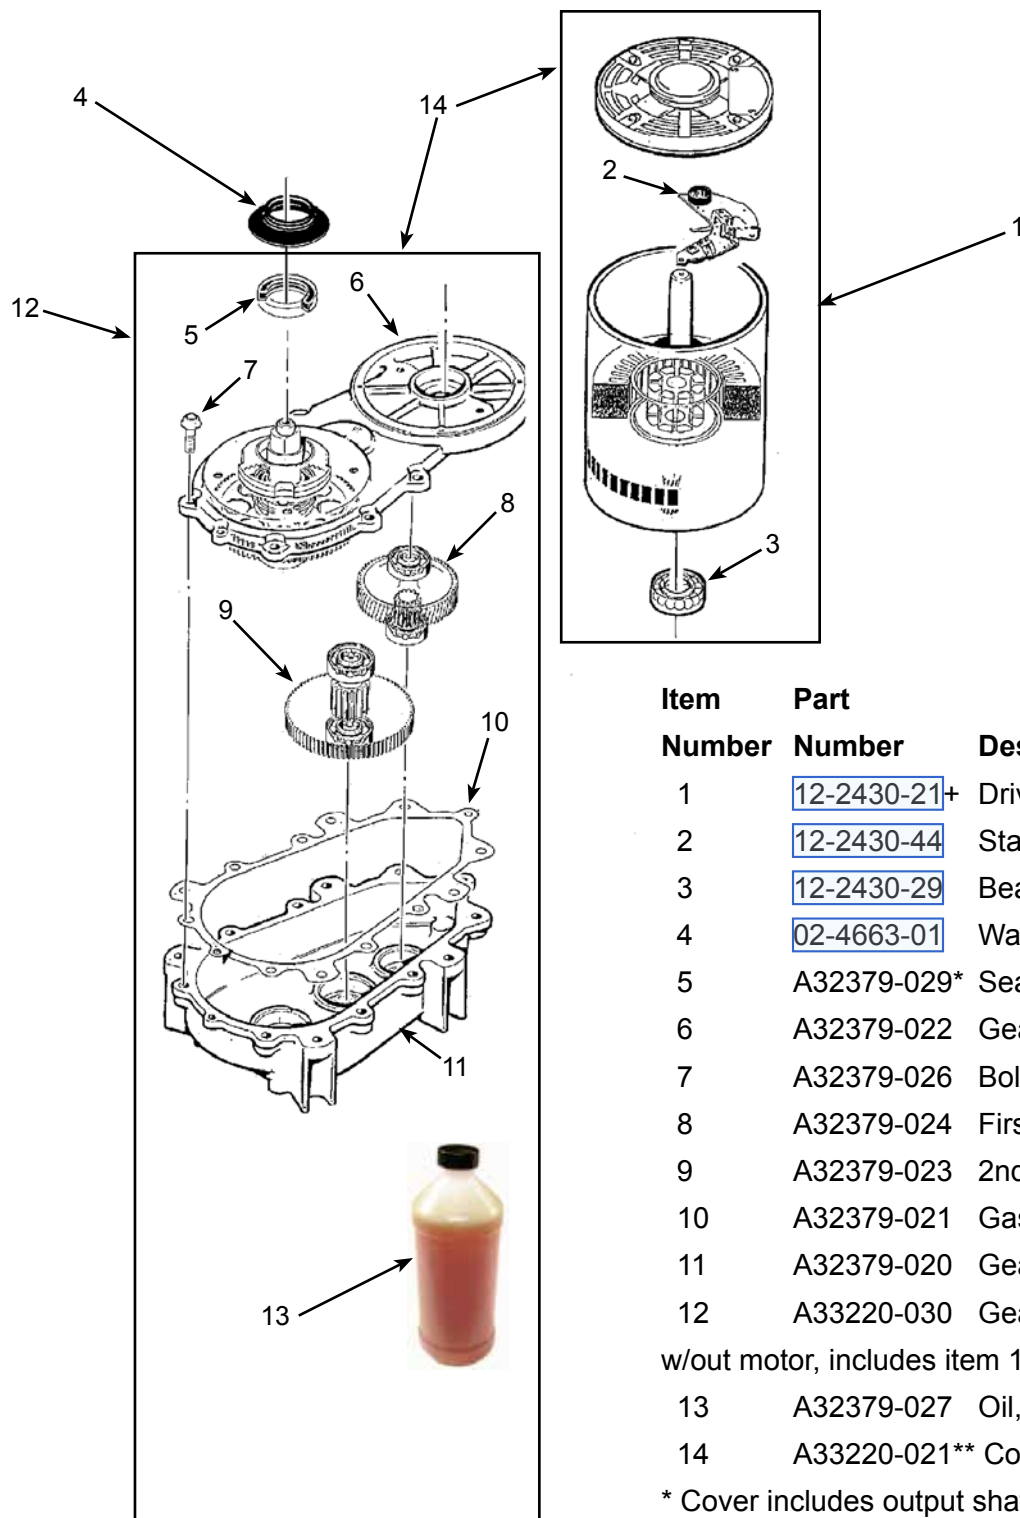

| Item Number | Part Number  | Description                                           |
|-------------|--------------|-------------------------------------------------------|
| 1           | 12-2430-21+  | Drive motor, 115 volt                                 |
| 2           | 12-2430-44   | Start switch                                          |
| 3           | 12-2430-29   | Bearing                                               |
| 4           | 02-4663-01   | Water Shed                                            |
| 5           | A32379-029*  | Seal                                                  |
| 6           | A32379-022   | Gearcase Cover*                                       |
| 7           | A32379-026   | Bolt                                                  |
| 8           | A32379-024   | First Gear & Bearings                                 |
| 9           | A32379-023   | 2nd Gear & Bearings                                   |
| 10          | A32379-021   | Gasket                                                |
| 11          | A32379-020   | Gear Case                                             |
| 12          | A33220-030   | Gearcase kit, assembled w/out motor, includes item 13 |
| 13          | A32379-027   | Oil, 1 Container                                      |
| 14          | A33220-021** | Complete 115 volt                                     |


\* Cover includes output shaft, seal, gear and bearings.  
If water has flowed thru the seal, the gearcase cover assembly should be replaced, not just the seal.

\*\* Includes items 1, 12, and is charged with gear oil.

+ Includes items 2 and 3.

# N0622L, F0822L, N0922L, F1222L, N1322L/NCL, F1522L/NCL

## Service Parts Electrical Control and Harnesses

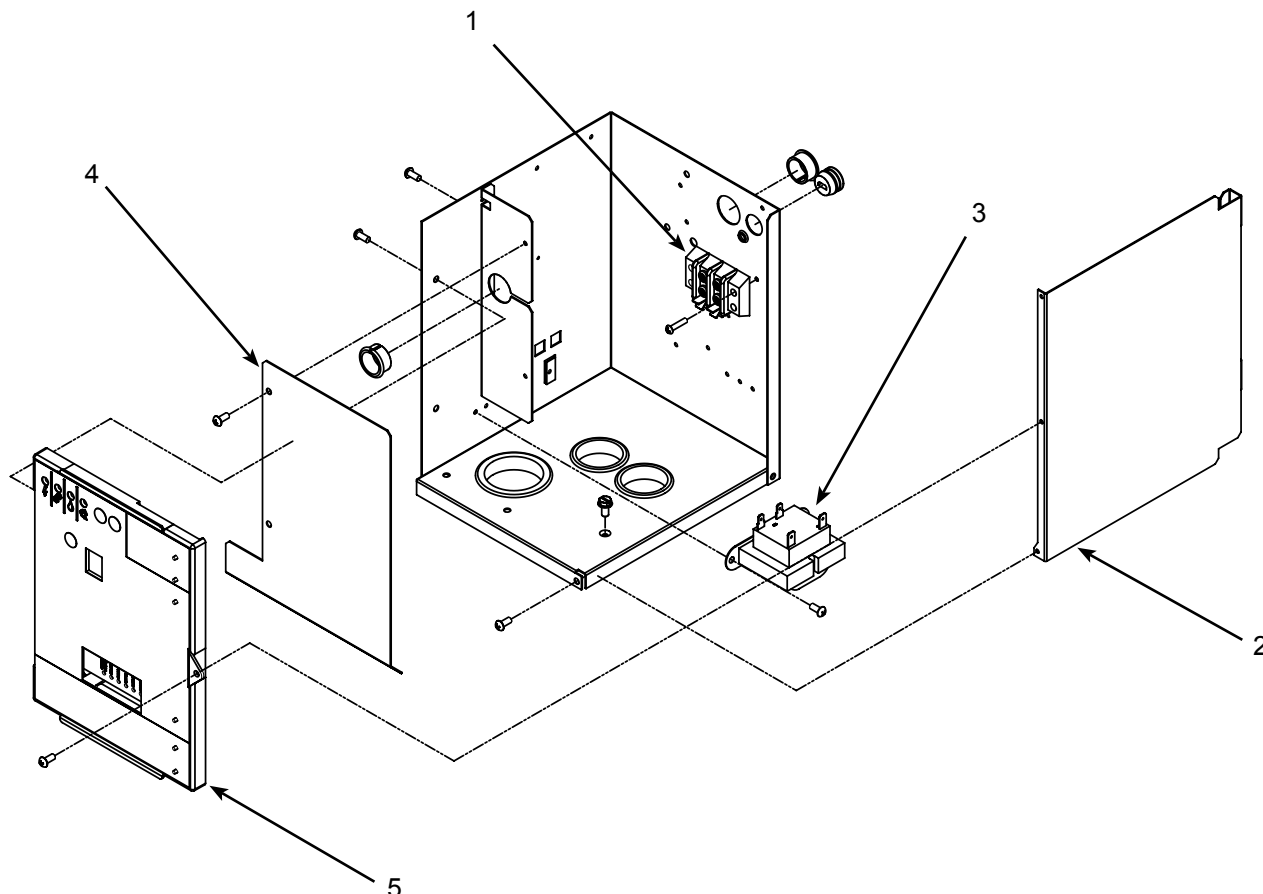

| Item Number | Part Number                | Description                                        |
|-------------|----------------------------|----------------------------------------------------|
| 1           | <a href="#">12-2780-01</a> | Terminal block                                     |
| 2           | A39198-001                 | Control box side cover                             |
| 3           | <a href="#">12-2924-01</a> | Transformer, 115 volt                              |
| 4           | A39216-001                 | Shield                                             |
| 5           | <a href="#">11-0575-22</a> | Controller for A or B series.                      |
|             | <a href="#">11-0623-21</a> | Controller for Prodigy Plus D series and all prior |
|             | <a href="#">02-4407-01</a> | Graphic overlay                                    |
|             | <a href="#">02-4076-01</a> | Control box cover                                  |

### Not Shown


|                            |                      |
|----------------------------|----------------------|
| <a href="#">12-2977-01</a> | High voltage harness |
| <a href="#">12-2976-01</a> | Low voltage harness  |
| <a href="#">12-1638-19</a> | Power cord           |

# N0622L, F0822L, N0922L, F1222L, N1322L/NCL, F1522L/NCL

## Service Parts


## Wiring Diagram

17-3215-01

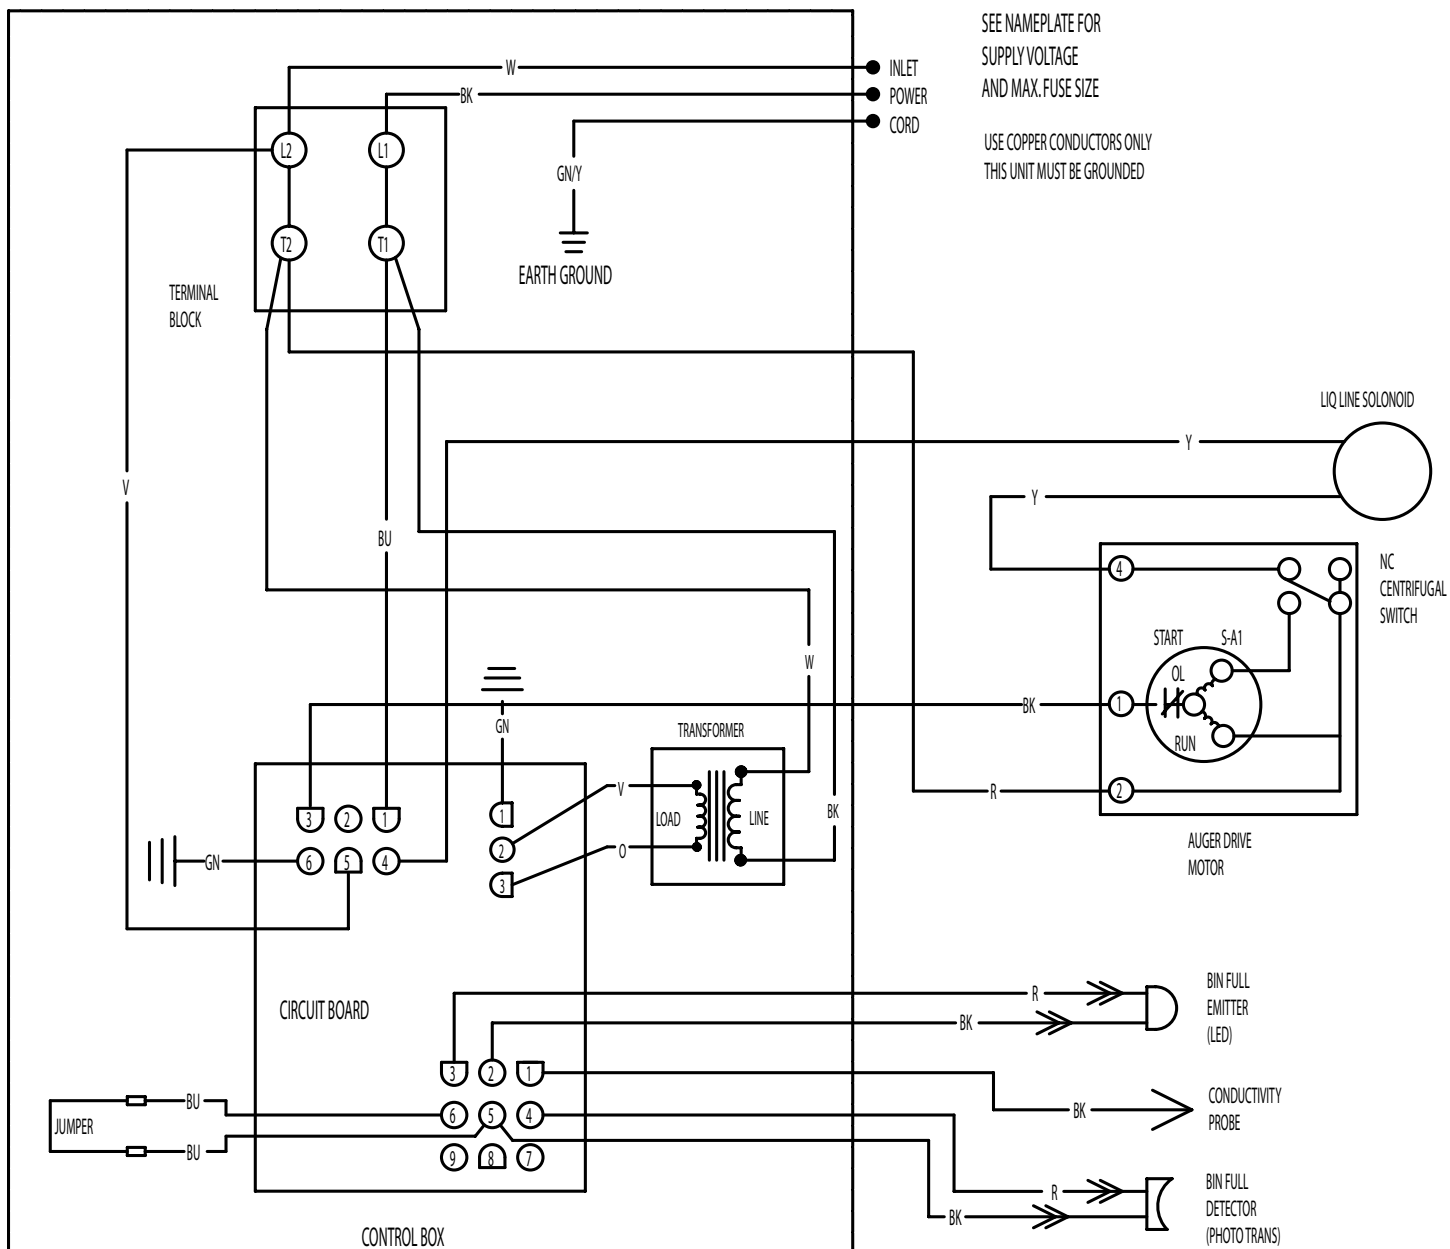

# N0622L, F0822L, N0922L, F1222L, N1322L/NCL, F1522L/NCL

## Service Parts Schematic Diagram

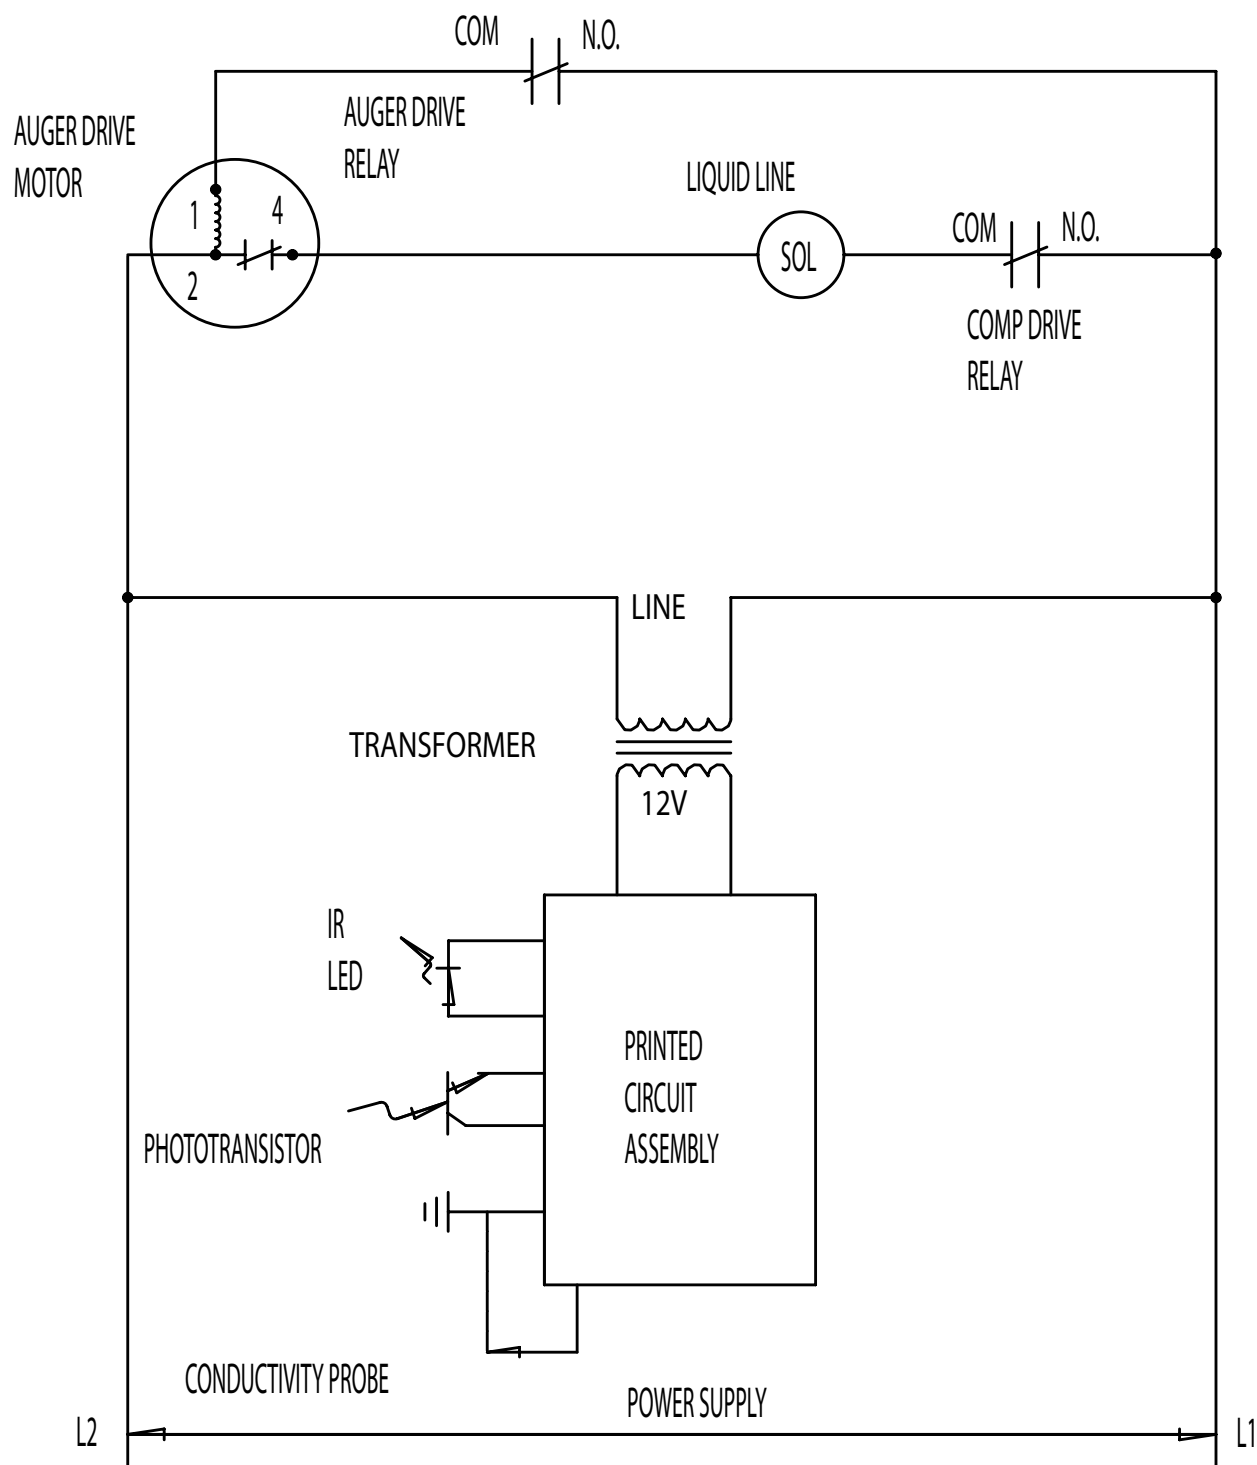

ALL CONTROLS SHOWN IN  
ICE MAKING MODE