Service Parts for models UF424 and UN324

This is the illustrated parts list for Scotsman ice maker models UF424 and UF324.


They were manufactured as either air or water cooled models, plus the air cooled models were made in 2 voltages. Please confirm the complete model number before ordering a part. Complete models are:

- UF424A-1A, flaked ice, air cooled 115 volt, 60 Hz
- UN324A-6A, nugget ice, air cooled, 115 volt, 60 Hz
- UF424W-1A, flaked ice, water cooled, 115 volt, 60 Hz
- UN324W-1A, nugget ice, water cooled, 115 volt, 60 Hz
- UF424A-6A, flaked ice, air cooled, 230 volt 50 Hz
- UN324A-6A, nugget ice, air cooled, 230 volt 50 Hz

Contents


Outer Cabinet	Page 2
Inner Cabinet, Water Tubing and Reservoir	Page 3
Refrigeration and Water Cooled Condensing	Page 4
Drains and Ice Making Components	Page 5
Base Top and Air Cooled Condensing	Page 6
Auger, Water Seal, Gear Reducer, Bearings	Page 7
Control Box	Page 8
Wiring Diagram	Page 9

Outer Cabinet

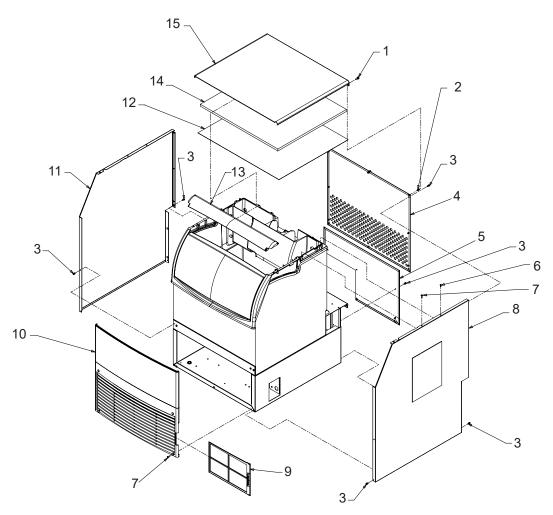


Item	Part Number	Description
1	03-0727-05	Thumbscrew
2	03-1642-08	Hex insert
3	03-3943-01	Screw, #8
4	A40584-021	Back panel
5	A40585-001	Lower back panel
6	03-3836-03	Screw
7	03-1404-12	Screw
8	A40589-001	Right side panel
9	02-4952-01	Air filter
10	02-4951-01	Louvered grill
11	A40589-002	Left side panel
12	02-4962-01	Inner top panel
13	02-4948-01	Top frame
14	02-4963-01	Insulation
15	A40593-021	Top panel

Inner Cabinet, Water Tubing and Reservoir

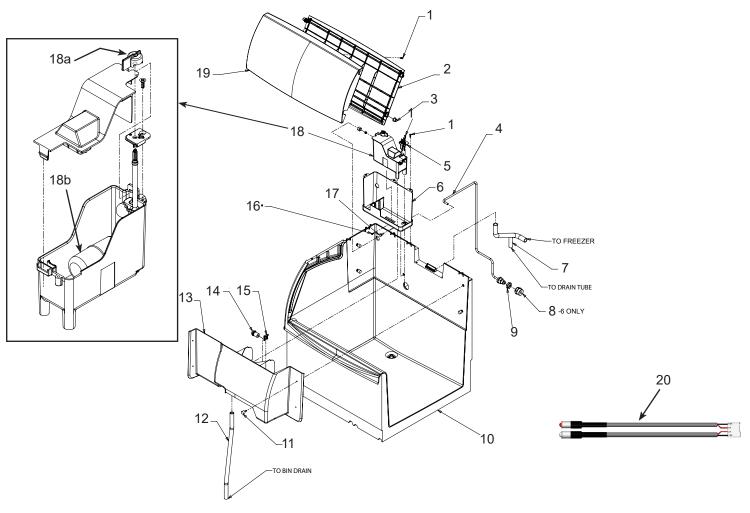


1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	Part Number 03-3870-01 no number 03-3941-01 A40665-001 A40666-001 02-4953-01 02-4961-01 16-1150-01 03-1394-01 A40668-001 03-3892-01 02-4997-01 02-4949-01 13-0964-01 02-4381-03	Screw Inner door, see item 19 Bushing Water inlet tube assembly Water sensor Reservoir bracket Evap water inlet tubing Water inlet, 50 Hz only Pal nut Foamed bin Thumb screw Overflow tube Compartment cover Bin sensor grommet	18 18b 19 and 2 20	A40664-001 02-4955-01 02-2217-02 A40908-021 2 12-3128-01	Reservoir Knob Float valve only, part of item 18 Door assembly, includes items 1 Bin sensors with wire harness
		•			
15	02-4381-03	Retaining clip			
16	03-3836-04	Screw			
17	03-0727-05	Screw			

Refrigeration and Water Cooled Condensing

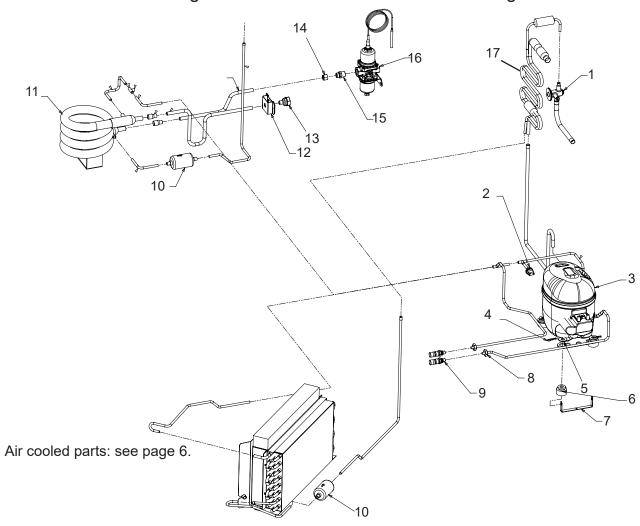

ltem	Part Number	Description	11	18-8869-01	Water cooled condenser
1	16-1214-02	Thermostatic expansion valve	12	A39550-002	Drain bracket
	19-0599-06	Insulation for TXV	13	16-1154-02	Condenser drain fitting
2	11-0501-24	Hi pressure cut out (260 PSIG)	14	16-1217-01	Nut
3	18-8979-21	Compressor, 115 volt, 60 Hz*	15	16-1215-01	Fitting
	18-8979-26	Compressor, 230 volt, 50 Hz*	16	11-0608-02	Water regulating valve
3a	18-8979-41	Overload for 115 volt, 60 Hz	17	A40600-001	Heat exchanger
	18-8979-51	Overload for 230 volt, 50 Hz	* Cor	mpressor kits in	clude starting components.
4	03-3821-01	Clip			
5	03-1407-08	Washer			
6	18-4700-28	Grommet			
7	A40002-001	Comp mounting bracket			
8	03-3905-01	Jam nut			
9	16-1138-01	Valve body			
	16-1139-01	Valve core			
	16-1140-01	Valve cap			
10	02-3319-01	Dryer			

Drains and Ice Making Components

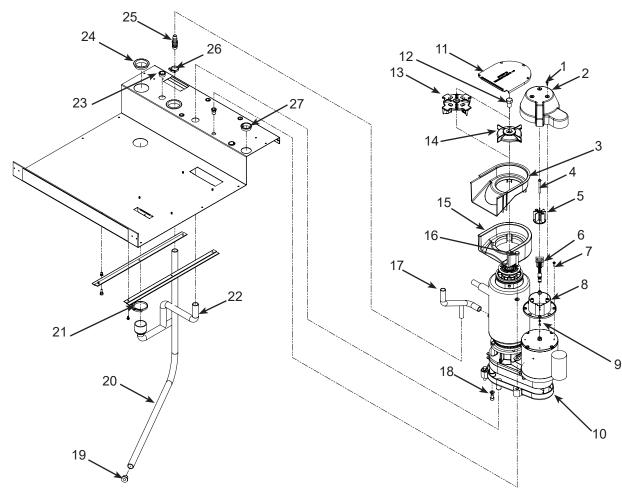

					\1
Item	Part Number	Description	18	03-1544-09	Screw, socket head
1	03-3836-04	Screw	19	13-0840-01	Drain plug
2	02-4797-01	Motor cover	20	02-4954-01	Drain tube
3	02-4760-01	Chute	21	02-2814-13	Hose clamp
4	03-1403-70	Bolt*	22	02-4954-01	Bin drain tube
5	02-4791-02	Magnet holder	23	12-1213-10	Snap bushing
6	12-3089-02	Rotation sensor with harness	24	12-1213-15	Snap bushing
7	03-1403-29	Screw	25	16-1213-02	Barbed adapter
8	02-4791-01	Sensor holder	26	02-2814-09	Hose clamp
9	03-1410-01	Lockwasher	27	12-1213-20	Snap bushing
	03-3889-02	Screw	28	02-4873-01	Wrench to hold motor shaft
10	02-4804-01	Drain pan	when removing item 4		
11	02-4802-01	Ice chute cover			
12	03-1405-52	Bolt	*A cor	dless impact d	river can be used to remove or
13	02-4985-01	Ice sweep, flaker (UF)	tighten the #4 retaining screw. #28 is an optional thin		
14	02-4745-01	Ice sweep, nugget (UN)	wrench to hold motor shaft.		
15	02-4760-01	Chute body			

Chute insulation

Evaporator water inlet tube

Mounting bolt

02-4761-01


03-1405-40

02-4961-01

16


17

Base Top and Air Cooled Condensing

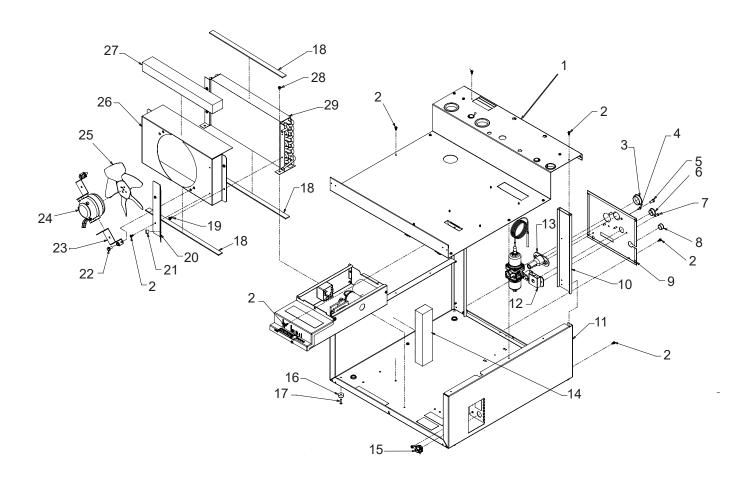

Item	Part Number	Description	19	03-3943-02	Screw
1	A40583-001	Base top	20	A40750-001	Air flow barrier
2	03-3943-01	Screw	21	12-1213-04	Snap bushing
3	02-1875-25	Hole plug	22	03-1645-01	Cap screw
4	03-1403-16	Screw	23	A40323-002	Motor bracket
5	03-0571-00	Screw	24	12-2989-01	Fan motor, 115 volt, 60 Hz
6	03-1875-21	Hole plug		12-2989-02	Fan motor, 230 volt, 50 Hz
7	03-1404-12	Screw	25	18-8708-01	Fan blade
8	12-1213-10	Snap bushing	26	A40592-001	Fan shroud
9	A40587-001	Utility panel	27	19-0655-03	Shroud tape
10	A40586-001	Gear box support	28	03-3963-02	Screw
11	A40582-001	Base pan	29	18-8942-01	Air cooled condenser
12	A39550-002	A39550-002 Drain bracket			
13	02-3692-01	Drain adapter			
14	16-0655-03	Gasket tape, each per foot			
15	12-0350-00	Strain relief			
16	03-3940-01	Plastic glide			
17	03-1531-08	Screw			
18	13-0609-00	Shroud tape, 15" req.			

Auger, Water Seal, Gear Reducer, Bearings

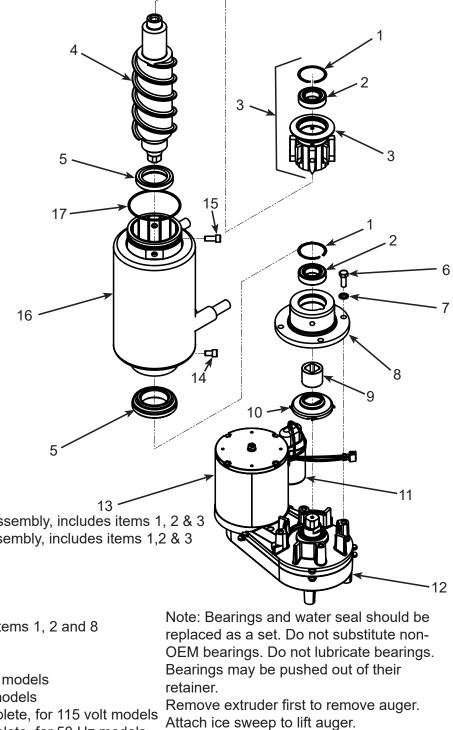


03-3953-01 Retaining ring 1 2 02-4843-23 Bearing 3 A40173-001 Nugget Extruder assembly, includes items 1, 2 & 3 A40173-002 Flaker extruder assembly, includes items 1,2 & 3 02-4840-21 Auger 4 5 02-0929-23 Water seal 6 03-1405-38 Cap screw 7 03-1417-13 Lockwasher 8 A40174-001 Adapter, includes items 1, 2 and 8 9 02-4838-01 Coupling 10 02-4786-01 Water shed 12-3083-24 Capacitor, 115 volt models 11 12-3083-25 Capacitor, 50 Hz models 12 12-3083-21 Gear reducer complete, for 115 volt models 12-3083-22 Gear reducer complete, for 50 Hz models 12a 12-3083-23 Gear reducer, no motor 13 12-3083-31 Auger drive motor, for 115 volt models Auger drive motor, for 50 Hz models 12-3083-32 14 03-1544-09 Socket hd cap screw, 1/2 inch long 03-1544-08 Socket hd cap screw, 3/4 inch long 15 02-4758-21 Evaporator 16 September 2017 13-0617-52 17 O-ring Page 7

Item Part Number Description

Auger motor note: Motor shipped attached to gear reducer cover. Cover not intended for replacement, used only for shipment. Remove motor from cover and discard cover.

12a ships with separate 11 oz oil charge.

Control Box

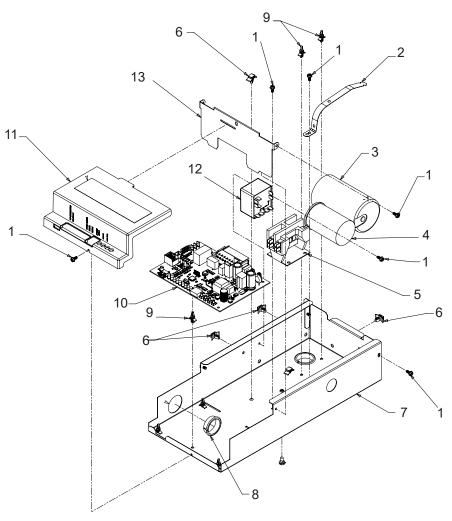

ltem	Part Number	Description
1	03-3943-01	Screw
2	A37366-001	Strap
3	18-1901-42	Start capacitor, for 115/60
	18-1901-56	Start capacitor for 230/50
4	18-1902-69	Run capacitor for 115/60
	18-1902-72	Run capacitor for 230/50
5	12-2469-03	Contactor for 115/60
	12-2469-02	Contactor for 230/50
6	02-3112-01	Wire mount
7	A40612-001	Control box, box only
8	12-1213-20	Snap bushing
9	03-1727-02	Stand off
10	11-0612-52	Controller
11	02-4830-02	Cover
12	18-1903-73	Potential relay, for 115/60
	18-1903-74	Potential relay, for 230/50
13	A40618-001	Barrier

Wire Harnesses (not illustrated)

	,
12-1638-30	·
12-1638-31	Power cord, 230 volt, 50 Hz
12-3127-01	Fan harness
12-3089-02	Rotation sensor with harness
12-3129-01	Hi voltage harness
12-3128-02	Bin and water sensor harness

Wiring Diagram

