# HOSHIZAKI

# Parts List

Proffessional Series
Refrigerated Kitchen Equipment

Models
RH1-SSE-FG
RH1-SSE-FS
RH1-SSE-HG
RH1-SSE-HS

hoshizakiamerica.com

Number: 71301
Issued: 1-22-2010
Revised: 9-27-2019

# CONTENTS


Auxiliary Codes ..... 3
Note About Ordering Parts ..... 3
A. Main Assembly ..... 4
B. Refrigeration Circuit ..... 6
C. Control Box Assembly ..... 8
D. Door-Right Hinged ..... 9
Full Glass: RH1-SSE-FG ..... 9
Full Solid: RH1-SSE-FS ..... 11
Half Glass: RH1-SSE-HG ..... 13
Half Solid: RH1-SSE-HS ..... 15
E. Accessories & Labels ..... 17

## Auxiliary Codes

**RH1-SSE-FG**

V-5 January 2010
B-5 April 2012
C-5 March 2013
D-5 December 2014
E-5 November 2015
F-5 January 2016

**RH1-SSE-FS**

U-5 November 2009
V-5 January 2010
A-5 March 2011
B-5 June 2012
C-5 March 2013
D-5 September 2014
E-5 March 2015
F-5 January 2016

**RH1-SSE-HG**

U-5 January 2009
V-5 January 2010
B-5 December 2012
C-5 January 2013
D-5 August 2014
E-5 May 2015

**RH1-SSE-HS**

U-5 December 2009
V-5 January 2010
A-5 July 2011
B-5 February 2012
C-5 February 2013
E-5 February 2015
F-5 January 2016

## Auxiliary Code Breakdown

The auxiliary code is the first two characters in the serial number. The first character indicates the year. Years progress or regress in alphabetical order. The series runs from "A" through "V" and the letters "I" and "O" are skipped. The second character indicates significant part changes within a year. Base is "5" and this number advances for each change.

## Note About Ordering Parts

Most assemblies cannot be ordered as complete units; parts in the assemblies generally must be ordered separately.

## A. Main Assembly
### RH1-SSE-XX
U-5 to F-5

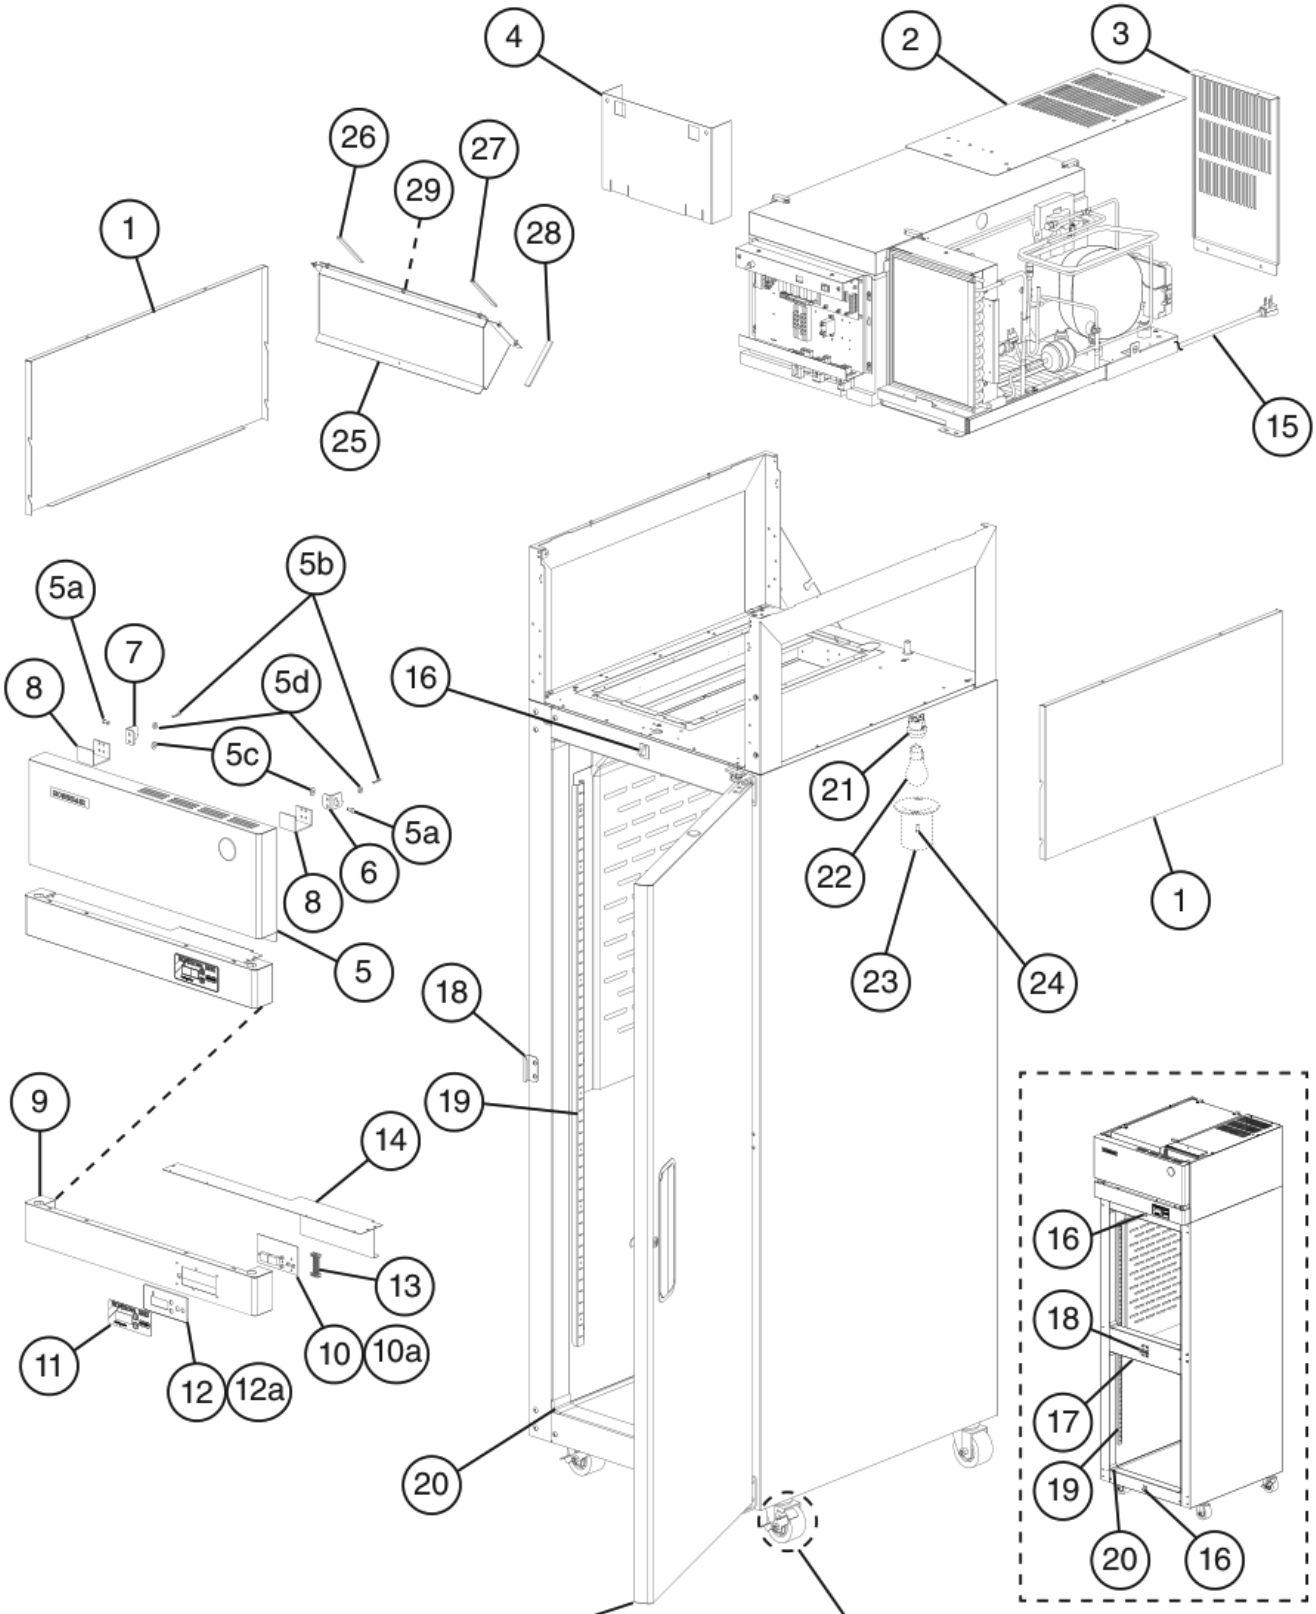


For Door, see section "D."

For Casters, see section "E."

| Title: A. Main Assembly Model: RH1-SSE-XX | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | | Required Number | | | | | | | | | |
| Index No. | Description | Material or Model Number | Part Number | U-5 to E-5 (H) | E-5 (J) F-5 | | | | | | | | |
| 1 | Side Panel | | 2A1800-01 | 2 | 2 | | | | | | | | |
| 2 | Top Cover | | 3A4504G01 | 1 | 1 | | | | | | | | |
| 3 | Rear Cover | | 2A4261-01 | 1 | 1 | | | | | | | | |
| 4 | Control Box Cover | | 2A1031-01 | 1 | 1 | | | | | | | | |
| 5 | Front Panel | | 1A0624-01 | 1 | 1 | | | | | | | | |
| 5a | Clevis Pin | | 8907-0102 | 2 | 2 | | | | | | | | |
| 5b | Cotter Pin | | 8907-0103 | 2 | 2 | | | | | | | | |
| 5c | Flat Washer | | 4A0665-03 | 2 | 2 | | | | | | | | |
| 5d | Hinge Spacer | | 4A2473-01 | 2 | 2 | | | | | | | | |
| 6 | Front Panel Right Hinge | | 4A2154-01 | 1 | 1 | | | | | | | | |
| 7 | Front Panel Left Hinge | | 4A2153-01 | 1 | 1 | | | | | | | | |
| 8 | Hinge Channel | | 4A2170-01 | 2 | 2 | | | | | | | | |
| 9 | Control Panel | **Glass Door** | 1A0760-04 | 1 | 1 | | | | | | | | |
| | | **Solid Door** | 1A0760-01 | 1 | 1 | | | | | | | | |
| 10 | Display Board | | 2A0883-01 | 1 | 1 | | | | | | | | |
| 10a | Palnut | | 4A1398-01 | 6 | 6 | | | | | | | | |
| 11 | Display Label | | 3A5788-01 | 1 | 1 | | | | | | | | |
| 12 | Display Board Mount | | 3A0823-01 | 1 | 1 | | | | | | | | |
| 12a | Nylon Screw | | 4A1397-01 | 4 | 4 | | | | | | | | |
| 13 | Ribbon Cable | L=610 mm | 4A1106-01 | 1 | 1 | | | | | | | | |
| 14 | Control Panel Cover | | 2A0133-01 | 1 | 1 | | | | | | | | |
| 15 | Power Cord | | 4A0520-01 | 1 | 1 | | | | | | | | |
| 16 | Door Switch | **Full Door** | 3A1826-01 | 1 | 1 | | | | | | | | |
| | | **Half Door** | | 2 | 2 | | | | | | | | |
| 17 | Horizontal Mullion (includes item 18) | **Half Door** | 2A3917G01 | 1 | 1 | | | | | | | | |
| 18 | Strike Plate | **Full Door** | 4A4587-01 | 1 | 1 | | | | | | | | |
| | | **Half Door** | | 2 | 2 | | | | | | | | |
| 19 | Pilaster | | 3A0145-01 | 6 | 6 | | | | | | | | |
| 20 | Corner Cover | **Full Door** | 3A1751-01 | 4 | 4 | | | | | | | | |
| | | **Half Door** | | 8 | 8 | | | | | | | | |
| 21 | Lampholder | | 4A2862-01 | 1 | 1 | | | | | | | | |
| 22 | Light Bulb | | 4A2420-01 | 1 | 1 | | | | | | | | |
| 23 | Light Shield | | 4A0465-01 | 1 | 1 | | | | | | | | |
| 24 | Cheese Head Screw | 5x12, SS | 7C52-0512 | 2 | 2 | | | | | | | | |
| 25 | Air Distributor (Top) | | 2A0610-01 | 1 | - | | | | | | | | |
| | | | 1A3951-01 | | 1 | | | | | | | | |
| 26 | Gasket | L=125 mm | 4A0808L01 | 1 | - | | | | | | | | |
| | | L=105 mm | 4A0808L02 | | 1 | | | | | | | | |
| 27 | Gasket | L=125 mm | 4A0808L01 | 1 | - | | | | | | | | |
| | | L=111 mm | 4A0808L02 | | 1 | | | | | | | | |
| 28 | Gasket | L=125 mm | 4A0808L01 | 1 | - | | | | | | | | |
| 29 | Gasket | L=1200 mm | 4A0808L02 | 1 | - | | | | | | | | |
| | | L=496 mm | | | 1 | | | | | | | | |

## B. Refrigeration Circuit

### RH1-SSE-XX

U-5 to F-5

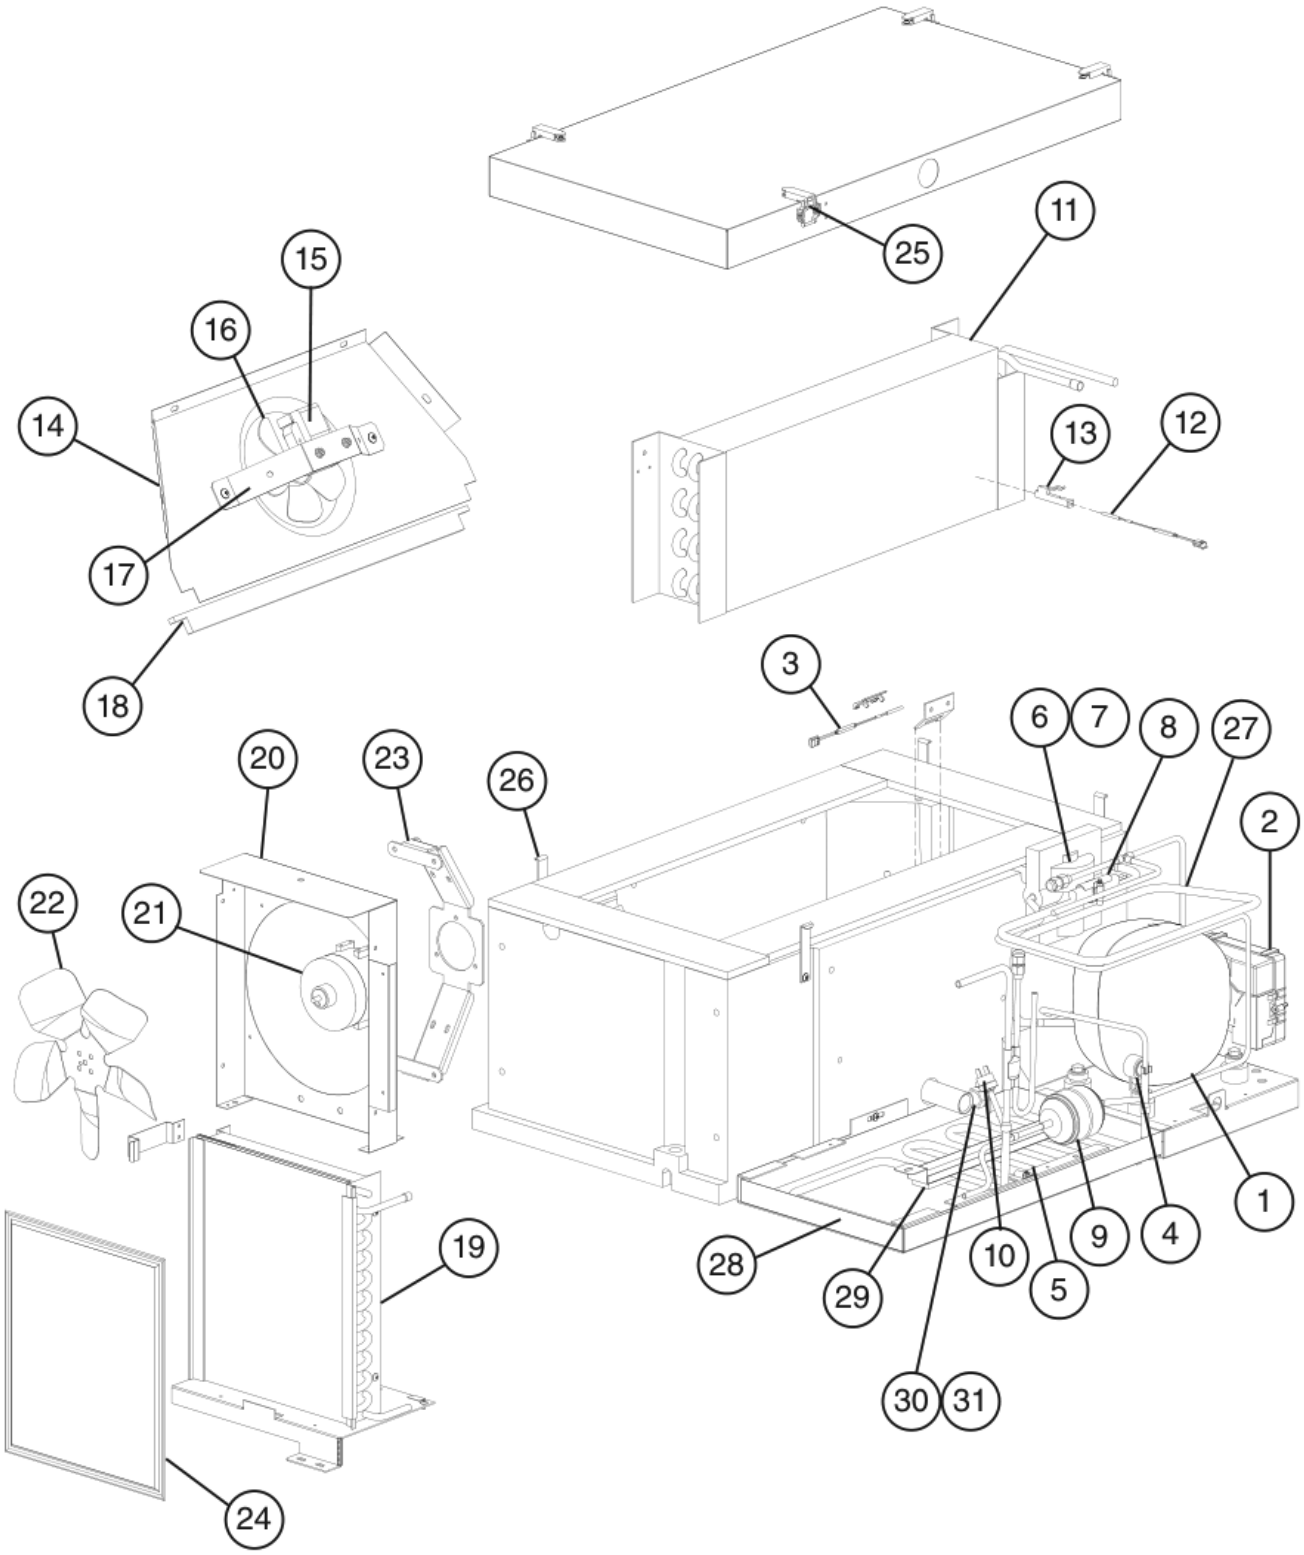

| Title: B. Refrigeration Circuit Model: RH1-SSE-XX | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Index No. | Description | Material or Model Number | Part Number | Required Number | | | | | | | | | |
| | | | | U-5 to B-5 (A) | B-5 (B) to F-5 | | | | | | | | |
| 1 | Compressor | | 4A4648-01 | 1 | 1 | | | | | | | | |
| 2 | Electronic Unit | | 4A4673-01 | 1 | 1 | | | | | | | | |
| 3 | Cabinet Thermistor | | 4A1429-01 | 1 | 1 | | | | | | | | |
| 4 | Clogged Filter Thermostat | | 4A0484-01 | 1 | 1 | | | | | | | | |
| 5 | Condensate Coil | | 3A1644-01 | 1 | 1 | | | | | | | | |
| 6 | Thermostatic Expansion Valve | | 4A4597-01 | 1 | 1 | | | | | | | | |
| 7 | Thermostatic Expansion Valve Cover | | 4A4646-01 | 1 | 1 | | | | | | | | |
| 8 | Thermostatic Expansion Valve Holder | | 3A0107-01 | 1 | 1 | | | | | | | | |
| 9 | Drier | | 4A0924-01 | 1 | 1 | | | | | | | | |
| 10 | High-Pressure Switch | | 4A2516-01 | 1 | 1 | | | | | | | | |
| 11 | Evaporator | | 2A1262-01 | 1 | 1 | | | | | | | | |
| 12 | Thermistor Defrost | | 4A1428-01 | 1 | 1 | | | | | | | | |
| 13 | Thermistor Clip | | 320418-01 | 1 | 1 | | | | | | | | |
| 14 | Evaporator Fan Shroud | | 2A0846-01 | 1 | - | | | | | | | | |
| | | | 3A6850G01 | | 1 | | | | | | | | |
| 15 | Evaporator Fan Motor | | 4A4942-01 | 1 | 1 | | | | | | | | |
| 16 | Evaporator Fan Blade | | 4A2378-01 | 1 | - | | | | | | | | |
| | | | 4A5438-01 | | 1 | | | | | | | | |
| 17 | Evaporator Fan Motor Bracket | | 3A6849-01 | 1 | 1 | | | | | | | | |
| 18 | PVC Gasket | L=522 mm | 4A0414L03 | 1 | 1 | | | | | | | | |
| 19 | Condenser | | 2A0623-01 | 1 | 1 | | | | | | | | |
| 20 | Condenser Shroud | | 3A6732G01 | 1 | 1 | | | | | | | | |
| 21 | Condenser Fan Motor | | 4A4620-01 | 1 | 1 | | | | | | | | |
| 22 | Condenser Fan Blade | | 3A0436-01 | 1 | 1 | | | | | | | | |
| 23 | Condenser Fan Bracket | | 3A1564-01 | 1 | 1 | | | | | | | | |
| 24 | Air Filter | | 3A0277-01 | 1 | 1 | | | | | | | | |
| 25 | Latch Draw | | 4A3988-01 | 4 | 4 | | | | | | | | |
| 26 | Latch Catch | | 4A3987-01 | 4 | 4 | | | | | | | | |
| 27 | Heat Exchanger | | 3A5089G01 | 1 | 1 | | | | | | | | |
| 28 | Evaporator Drain Pan | | 2A2760-01 | 1 | 1 | | | | | | | | |
| 29 | Condensate Coil Gasket | | 4A0455-03 | 1 | 1 | | | | | | | | |
| 30 | Drain Overflow Fitting | | 4A2182-01 | 1 | 1 | | | | | | | | |
| 31 | Rubber Gasket | | 413854-03 | 1 | 1 | | | | | | | | |

## C. Control Box Assembly
### RH1-SSE-XX
U-5 to F-5

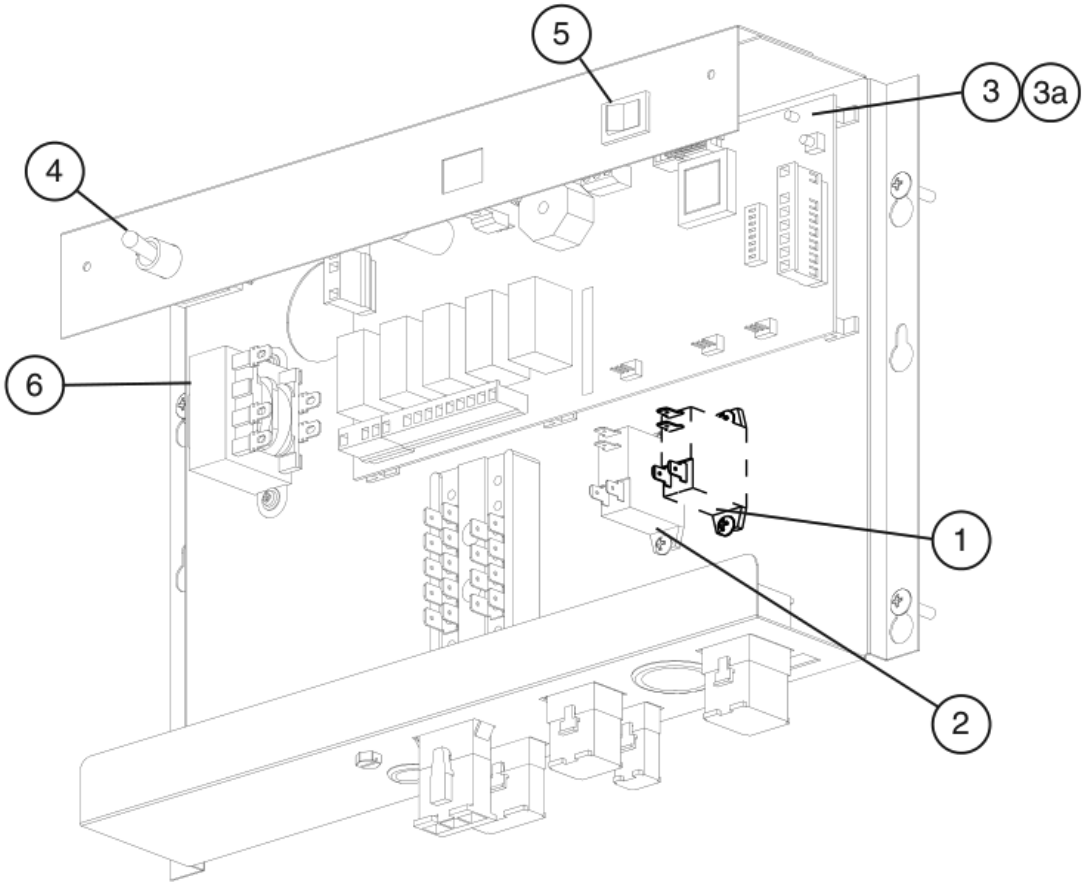


| Title: C. Control Box Assembly Model: RH1-SSE-XX | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | | Required Number | | | | | | | | | |
| Index No. | Description | Material or Model Number | Part Number | U-5 to V-5 (E) | V-5 (F-H) | V-5 (J) to F-5 | | | | | | | |
| 1 | Perimeter Heater Relay | | 4A4329-01 | 1 | 1 | - | | | | | | | |
| 2 | Compressor Relay | | 4A4329-01 | 1 | 1 | 1 | | | | | | | |
| 3 | Control Board | | 2A2862-23 | 1 | - | | | | | | | | |
| | | | 2A2862-24 | | 1 | 1 | | | | | | | |
| 3a | Control Board Support | | 4A0336-03 | 6 | 6 | 6 | | | | | | | |
| 4 | Power Switch | | 4A0424-01 | 1 | 1 | 1 | | | | | | | |
| 5 | Perimeter Heater Switch | | 4A0418-01 | 1 | 1 | 1 | | | | | | | |
| 6 | Control Transformer | | 3A1759-01 | 1 | 1 | 1 | | | | | | | |

## D. Door-Right Hinged
### Full Glass: RH1-SSE-FG

V-5 to F-5

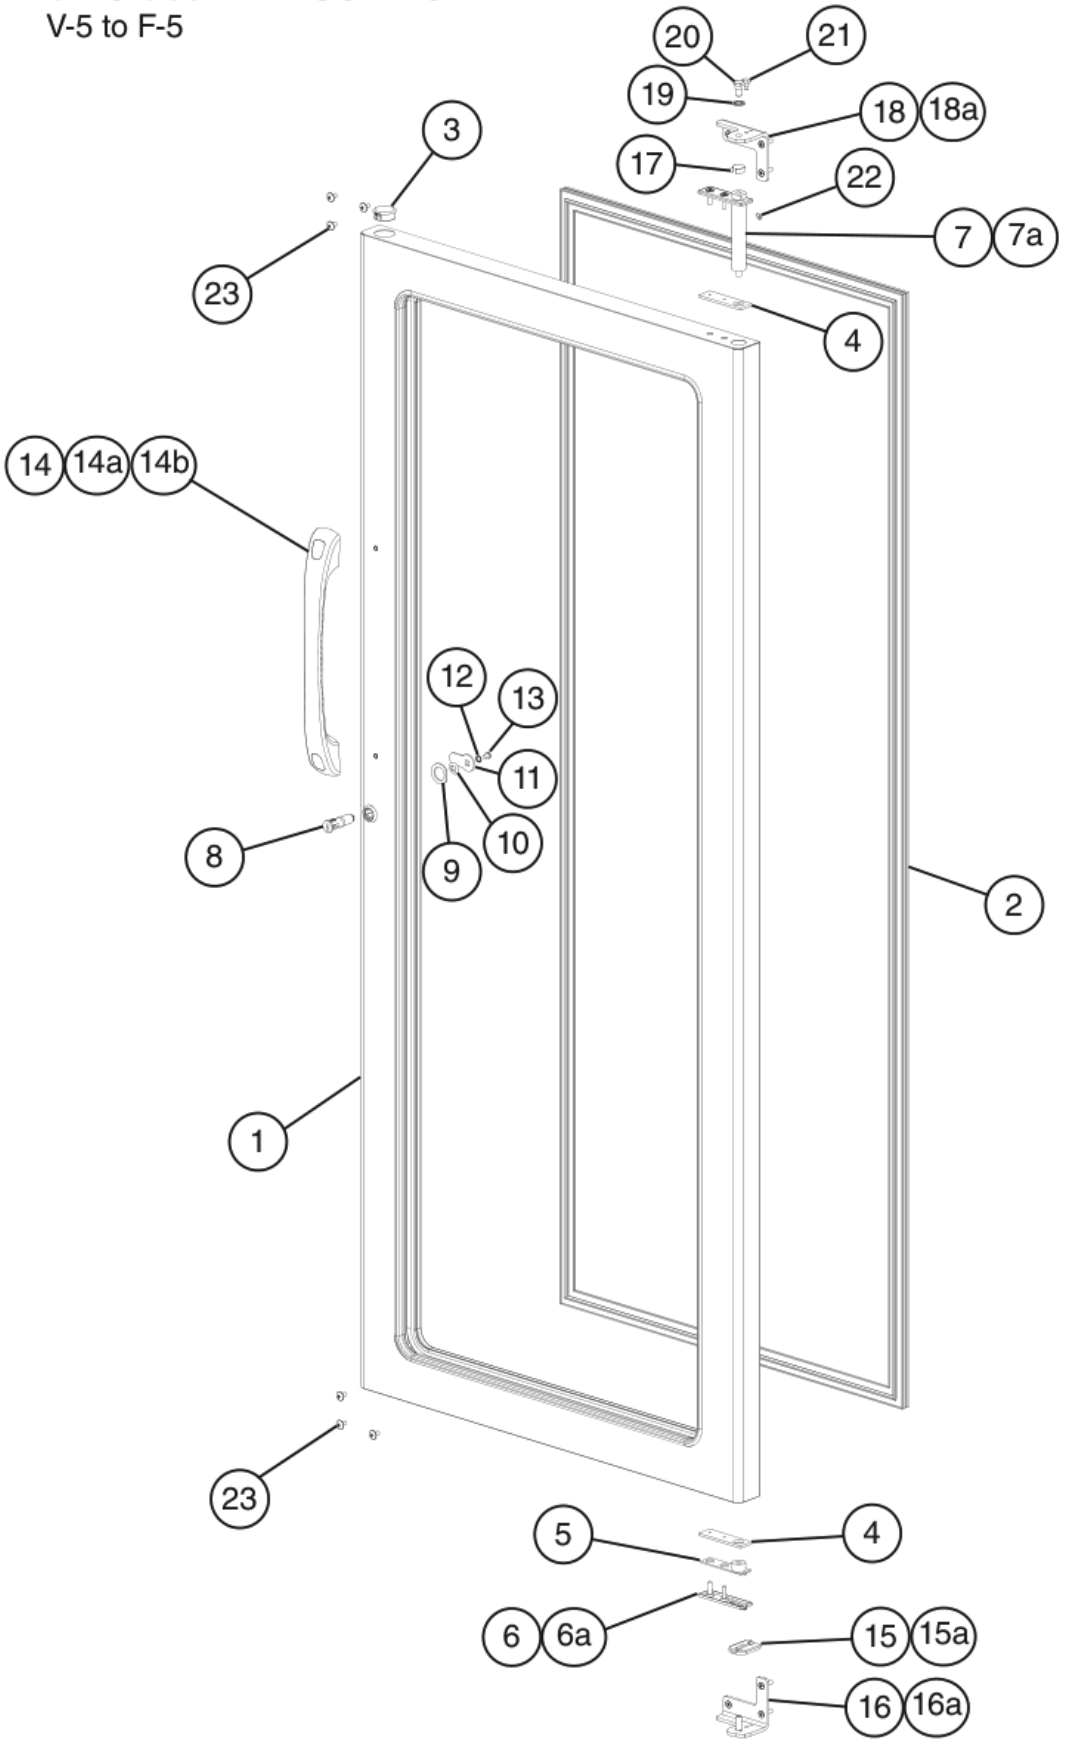

| Title: D. Door-Right Hinged Model: Full Glass: RH1-SSE-FG | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Index No. | Description | Material or Model Number | Part Number | Required Number | | | | | | | | | |
| | | | | V-5 to F-5 | | | | | | | | | |
| 1 | Right Full Glass Door Assembly (Includes items 2 through 7a) | | 2A4424G01 | 1 | | | | | | | | | |
| 2 | Door Gasket | | 3A0273-01 | 1 | | | | | | | | | |
| 3 | Locking Hole Plug | | 4A0586-06 | 1 | | | | | | | | | |
| 4 | Foam Pad | | 4A2257-01 | 2 | | | | | | | | | |
| 5 | Right Hinge Bottom Bushing | | 4A0439-01 | 1 | | | | | | | | | |
| 6 | Male Right Hinge Bottom Plate | | 4A0440-01 | 1 | | | | | | | | | |
| 6a | Countersunk Screw | 5x20, SS | 7C42-0520 | 2 | | | | | | | | | |
| 7 | Right Hinge Spring Cartridge | | 4A0438-01 | 1 | | | | | | | | | |
| 7a | Countersunk Screw | 5x20, SS | 7C42-0520 | 2 | | | | | | | | | |
| 8 | Door Lock Tumbler (includes Key 4A0460-01) | | 4A0462-01 | 1 | | | | | | | | | |
| 9 | Door Lock Washer | | 4A0670-01 | 1 | | | | | | | | | |
| 10 | Door Lock Stop Washer | | 4A0458-01 | 1 | | | | | | | | | |
| 11 | Door Lock Cam | | 4A0228-01 | 1 | | | | | | | | | |
| 12 | Door Lock Lock Washer | | 4A0459-01 | 1 | | | | | | | | | |
| 13 | Door Lock Screw | | 4A0461-01 | 1 | | | | | | | | | |
| 14 | Handle | | 115365-01 | 1 | | | | | | | | | |
| 14a | Bolt Screw | | 449879-08 | 2 | | | | | | | | | |
| 14b | Handle Cap | | 360643-01 | 2 | | | | | | | | | |
| 15 | Female Right Hinge Bottom Plate | | 4A0441-01 | 1 | | | | | | | | | |
| 15a | Stop Plate Screw | | 4A0483-01 | 1 | | | | | | | | | |
| 16 | Lower Right (LR) Door Hinge Bracket | | 3A1626-01 | 1 | | | | | | | | | |
| 16a | Countersunk Screw | 5x20, SS | 7C42-0520 | 3 | | | | | | | | | |
| 17 | Hinge Bushing Cover | | 4A0445-01 | 1 | | | | | | | | | |
| 18 | Upper Right (UR) Door Hinge Bracket | | 3A1580-01 | 1 | | | | | | | | | |
| 18a | Countersunk Screw | 5x20, SS | 7C42-0520 | 3 | | | | | | | | | |
| 19 | Hinge Lock Washer | | 4A0553-01 | 1 | | | | | | | | | |
| 20 | Top Hinge Pivot Pin | | 4A2179-01 | 1 | | | | | | | | | |
| 21 | Top Hinge Stop Pin | | 4A2180-01 | 1 | | | | | | | | | |
| 22 | Hinge Tension Screw | | 4A0446-01 | 1 | | | | | | | | | |
| 23 | Truss Head Screw (filler) | 5x10, SS | 7C32-0510 | 6 | | | | | | | | | |

## D. Door-Right Hinged
### Full Solid: RH1-SSE-FS

U-5 to F-5

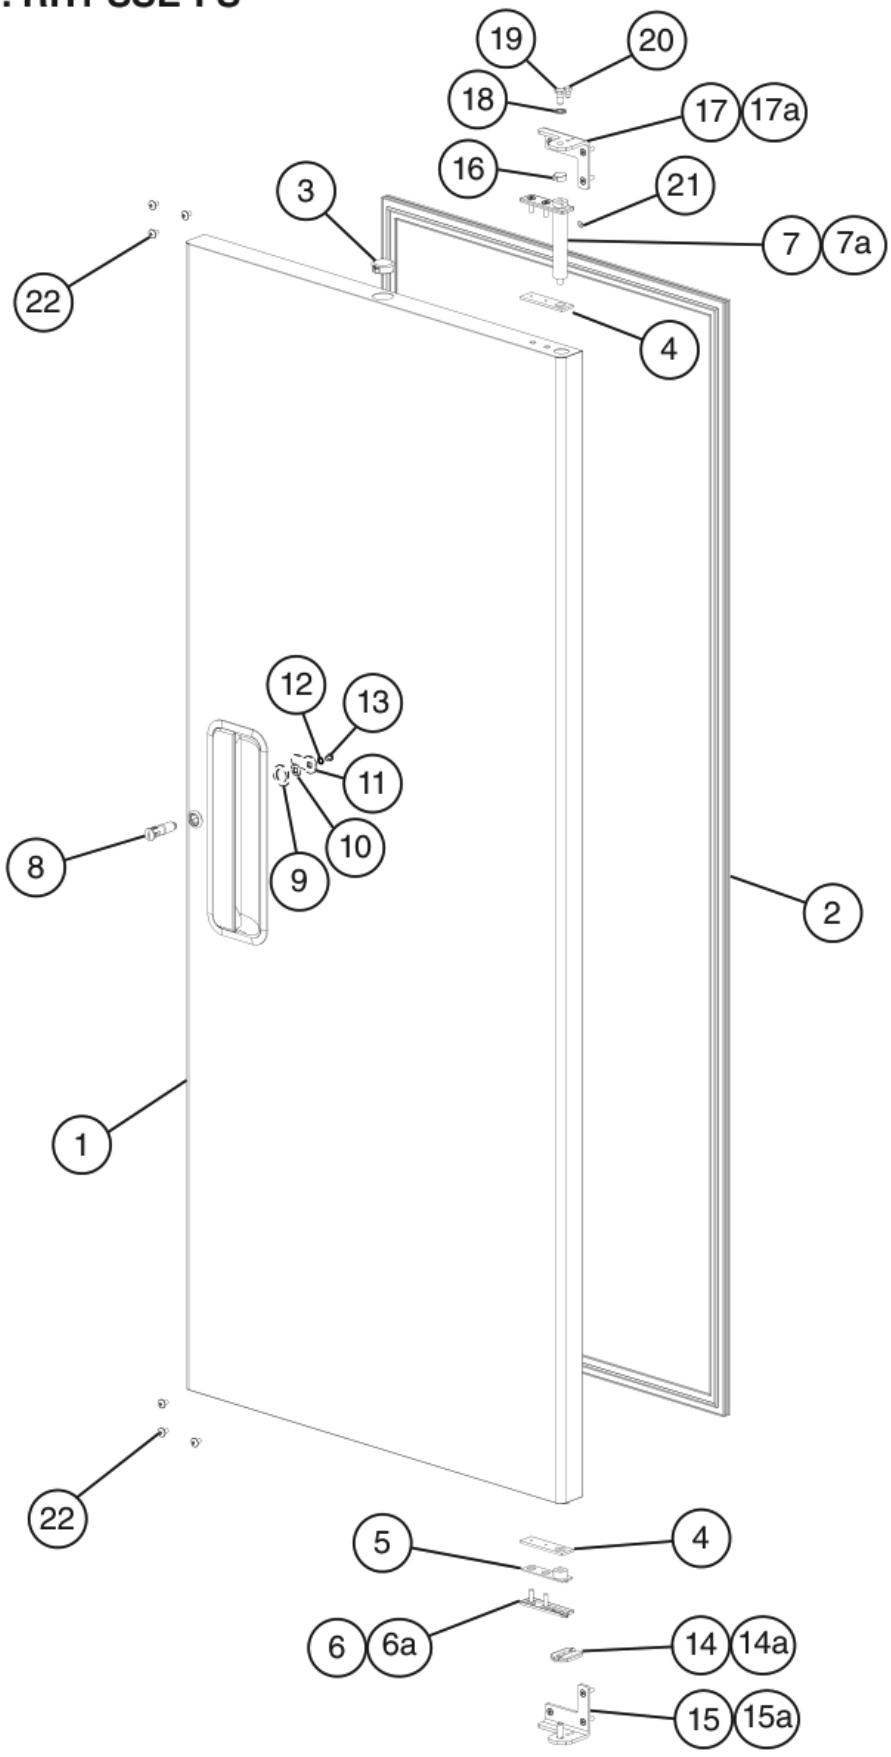

| Title: D. Door-Right Hinged Model: Full Solid: RH1-SSE-FS | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Index No. | Description | Material or Model Number | Part Number | Required Number | | | | | | | | | |
| | | | | U-5 to V-5 | A-5 to F-5 | | | | | | | | |
| 1 | Right Full Solid Door Assembly (Includes items 2 through 7a) | | 2A3940G01 | 1 | - | | | | | | | | |
| | | | 2A6545G01 | | 1 | | | | | | | | |
| 2 | Door Gasket | | 3A0273-01 | 1 | - | | | | | | | | |
| | | | 2A5192-07 | | 1 | | | | | | | | |
| 3 | Locking Hole Plug | | 4A0586-06 | 1 | 1 | | | | | | | | |
| 4 | Foam Pad | | 4A2257-01 | 2 | 2 | | | | | | | | |
| 5 | Right Hinge Bottom Bushing | | 4A0439-01 | 1 | 2 | | | | | | | | |
| 6 | Male Right Hinge Bottom Plate | | 4A0440-01 | 1 | 2 | | | | | | | | |
| 6a | Countersunk Screw | 5x20, SS | 7C42-0520 | 2 | 2 | | | | | | | | |
| 7 | Right Hinge Spring Cartridge | | 4A0438-01 | 1 | 1 | | | | | | | | |
| 7a | Countersunk Screw | 5x20, SS | 7C42-0520 | 2 | 2 | | | | | | | | |
| 8 | Door Lock Tumbler (includes Key 4A0460-01) | | 4A0462-01 | 1 | 1 | | | | | | | | |
| 9 | Door Lock Washer | | 4A0670-01 | 1 | 1 | | | | | | | | |
| 10 | Door Lock Stop Washer | | 4A0458-01 | 1 | 1 | | | | | | | | |
| 11 | Door Lock Cam | | 4A0228-01 | 1 | 1 | | | | | | | | |
| 12 | Door Lock Lock Washer | | 4A0459-01 | 1 | 1 | | | | | | | | |
| 13 | Door Lock Screw | | 4A0461-01 | 1 | 1 | | | | | | | | |
| 14 | Female Right Hinge Bottom Plate | | 4A0441-01 | 1 | 1 | | | | | | | | |
| 14a | Stop Plate Screw | | 4A0483-01 | 1 | 1 | | | | | | | | |
| 15 | Lower Right (LR) Door Hinge Bracket | | 3A1626-01 | 1 | 1 | | | | | | | | |
| 15a | Countersunk Screw | 5x20, SS | 7C42-0520 | 3 | 3 | | | | | | | | |
| 16 | Hinge Bushing Cover | | 4A0445-01 | 1 | 1 | | | | | | | | |
| 17 | Upper Right (UR) Door Hinge Bracket | | 3A1580-01 | 1 | 1 | | | | | | | | |
| 17a | Countersunk Screw | 5x20, SS | 7C42-0520 | 3 | 3 | | | | | | | | |
| 18 | Hinge Lock Washer | | 4A0553-01 | 1 | 1 | | | | | | | | |
| 19 | Top Hinge Pivot Pin | | 4A2179-01 | 1 | 1 | | | | | | | | |
| 20 | Top Hinge Stop Pin | | 4A2180-01 | 1 | 1 | | | | | | | | |
| 21 | Hinge Tension Screw | | 4A0446-01 | 1 | 1 | | | | | | | | |
| 22 | Truss Head Screw (filler) | 5x10, SS | 7C32-0510 | 6 | 6 | | | | | | | | |

## D. Door-Right Hinged
## Half Glass: RH1-SSE-HG

U-5 to E-5

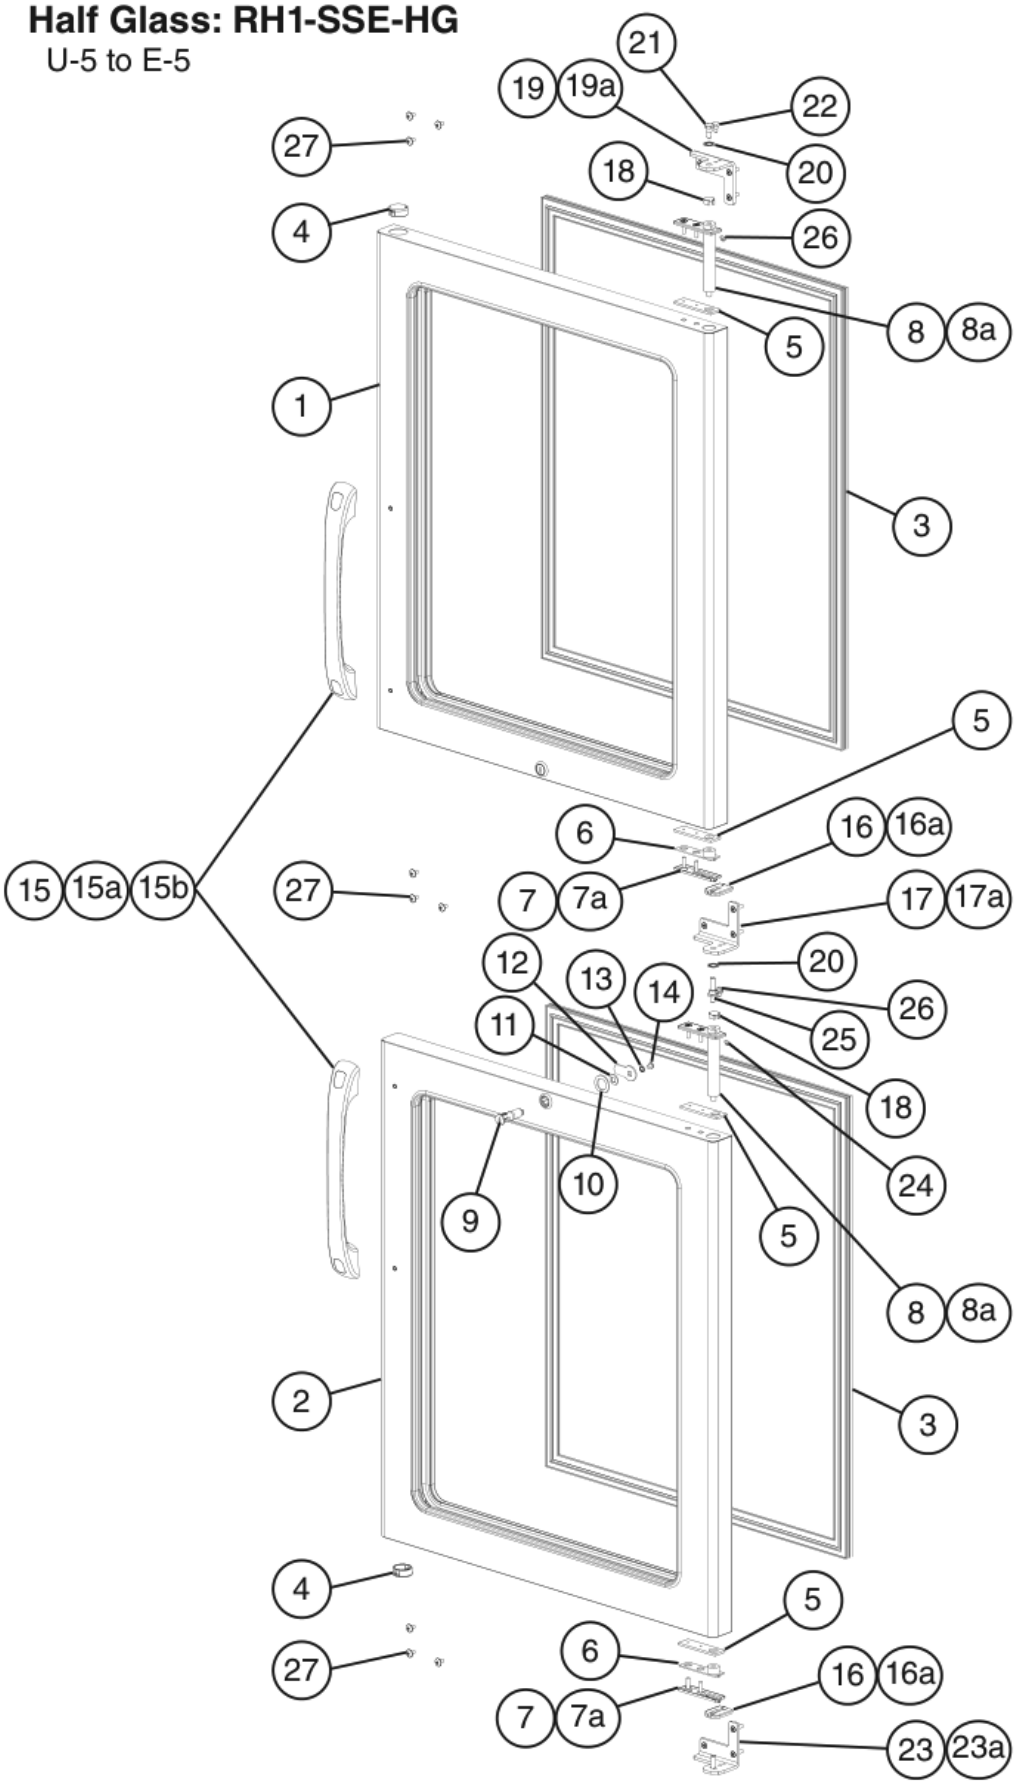

| Title: D. Door-Right Hinged Model: Half Glass: RH1-SSE-HG | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Index No. | Description | Material or Model Number | Part Number | Required Number | | | | | | | | | |
| | | | | U-5 to E-5 | | | | | | | | | |
| 1 | Upper Right Half Glass Door Assembly (Includes half the quantity of items 3 through 8a) | | 2A4419G01 | 1 | | | | | | | | | |
| 2 | Lower Right Half Glass Door Assembly (Includes half the quantity of items 3 through 8a) | | 2A4420G01 | 1 | | | | | | | | | |
| 3 | Door Gasket | | 3A0273-02 | 2 | | | | | | | | | |
| 4 | Locking Hole Plug | | 4A0586-06 | 2 | | | | | | | | | |
| 5 | Foam Pad | | 4A2257-01 | 4 | | | | | | | | | |
| 6 | Right Hinge Bottom Bushing | | 4A0439-01 | 2 | | | | | | | | | |
| 7 | Male Right Hinge Bottom Plate | | 4A0440-01 | 2 | | | | | | | | | |
| 7a | Countersunk Screw | 5x20, SS | 7C42-0520 | 4 | | | | | | | | | |
| 8 | Right Hinge Spring Cartridge | | 4A0438-01 | 2 | | | | | | | | | |
| 8a | Countersunk Screw | 5x20, SS | 7C42-0520 | 4 | | | | | | | | | |
| 9 | Door Lock Tumbler (includes Key 4A0460-01) | | 4A0462-01 | 2 | | | | | | | | | |
| 10 | Door Lock Washer | | 4A0670-01 | 2 | | | | | | | | | |
| 11 | Door Lock Stop Washer | | 4A0458-01 | 2 | | | | | | | | | |
| 12 | Door Lock Cam | | 4A0228-01 | 2 | | | | | | | | | |
| 13 | Door Lock Lock Washer | | 4A0459-01 | 2 | | | | | | | | | |
| 14 | Door Lock Screw | | 4A0461-01 | 2 | | | | | | | | | |
| 15 | Handle | | 115365-01 | 2 | | | | | | | | | |
| 15a | Bolt Screw | | 449879-08 | 4 | | | | | | | | | |
| 15b | Handle Cap | | 360643-01 | 4 | | | | | | | | | |
| 16 | Female Right Hinge Bottom Plate | | 4A0441-01 | 2 | | | | | | | | | |
| 16a | Stop Plate Screw | | 4A0483-01 | 2 | | | | | | | | | |
| 17 | Upper Left (UL) Door Hinge Bracket | | 3A1581-01 | 1 | | | | | | | | | |
| 17a | Countersunk Screw | | 7C42-0520 | 3 | | | | | | | | | |
| 18 | Hinge Bushing Cover | | 4A0445-01 | 2 | | | | | | | | | |
| 19 | Upper Right (UR) Door Hinge Bracket | | 3A1580-01 | 1 | | | | | | | | | |
| 19a | Countersunk Screw | 5x20, SS | 7C42-0520 | 3 | | | | | | | | | |
| 20 | Hinge Lock Washer | | 4A0553-01 | 2 | | | | | | | | | |
| 21 | Top Hinge Pivot Pin | | 4A2179-01 | 1 | | | | | | | | | |
| 22 | Top Hinge Stop Pin | | 4A2180-01 | 1 | | | | | | | | | |
| 23 | Lower Right (LR) Door Hinge Bracket | | 3A1626-01 | 1 | | | | | | | | | |
| 23a | Countersunk Screw | | 7C42-0520 | 3 | | | | | | | | | |
| 24 | Hinge Tension Screw | | 4A0446-01 | 2 | | | | | | | | | |
| 25 | Bottom HingePivot Pin | | 4A1735-01 | 1 | | | | | | | | | |
| 26 | Bottom Hinge Stop Pin | | 4A1734-01 | 1 | | | | | | | | | |
| 27 | Truss Head Screw (filler) | 5x10, SS | 7C32-0510 | 9 | | | | | | | | | |

## D. Door-Right Hinged
## Half Solid: RH1-SSE-HS

U-5 to F-5

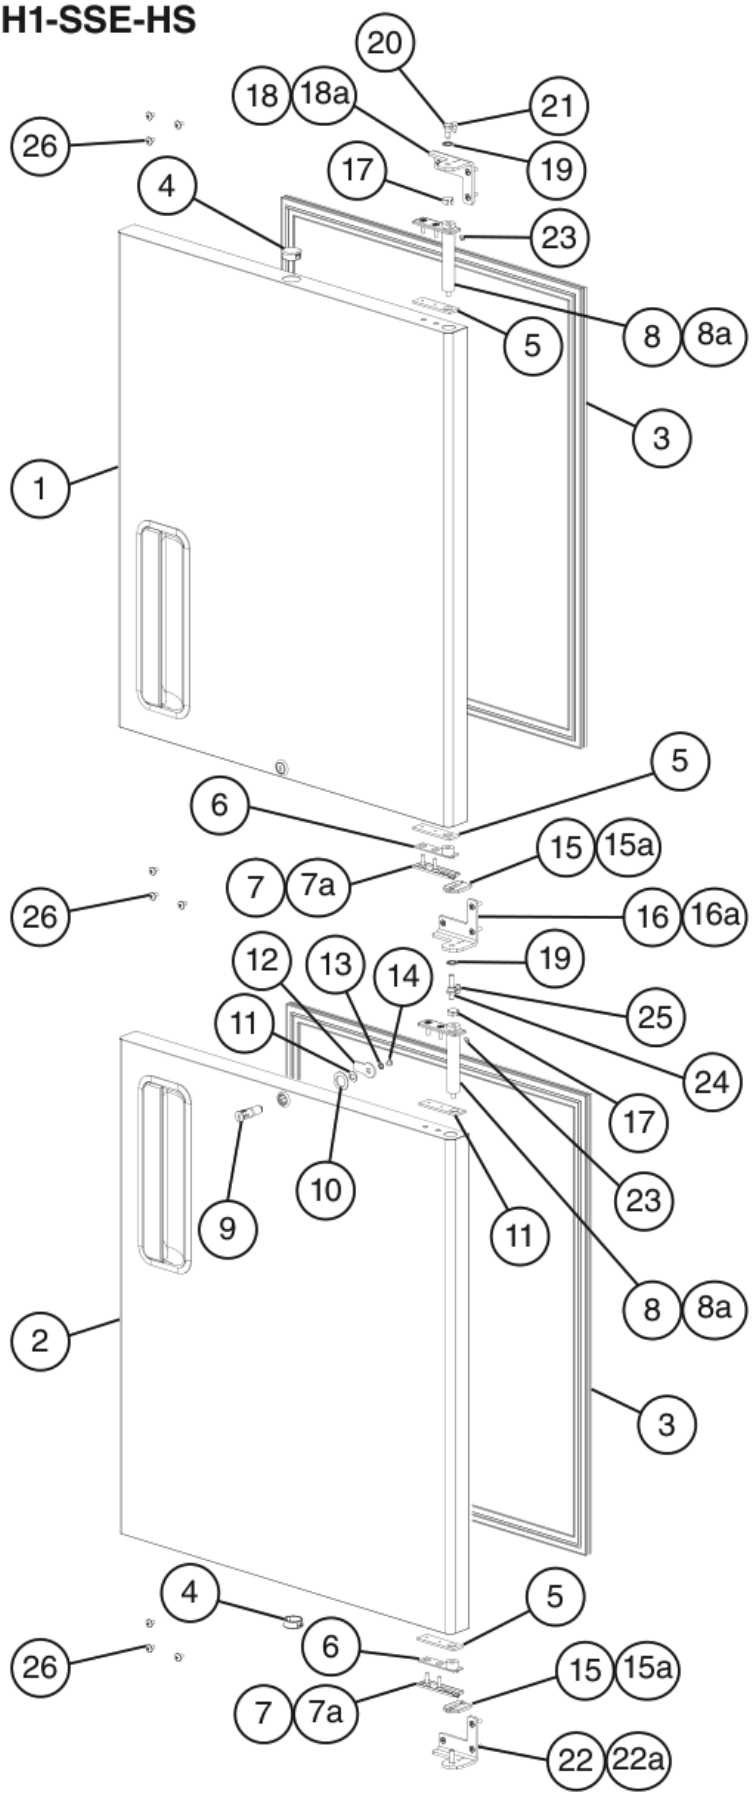

| Title: D. Door-Right Hinged Model: Half Solid: RH1-SSE-HS | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Index No. | Description | Material or Model Number | Part Number | Required Number | | | | | | | | | |
| | | | | U-5 to V-5 | A-5 to F-5 | | | | | | | | |
| 1 | Upper Right Half Solid Door Assembly (Includes half the quantity of items 3 through 8a) | **Upper Right** | 2A3934G01 | 1 | - | | | | | | | | |
| | | | 2A6549G01 | | 1 | | | | | | | | |
| 2 | Lower Right Half Solid Door Assembly (Includes half the quantity of items 3 through 8a) | **Lower Right** | 2A3935G01 | 1 | - | | | | | | | | |
| | | | 2A6550G01 | | 1 | | | | | | | | |
| 3 | Door Gasket | | 3A0273-02 | 2 | - | | | | | | | | |
| | | | 2A5192-08 | | 2 | | | | | | | | |
| 4 | Locking Hole Plug | | 4A0586-06 | 2 | 2 | | | | | | | | |
| 5 | Foam Pad | | 4A2257-01 | 4 | 4 | | | | | | | | |
| 6 | Right Hinge Bottom Bushing | | 4A0439-01 | 2 | 2 | | | | | | | | |
| 7 | Male Right Hinge Bottom Plate | | 4A0440-01 | 2 | 2 | | | | | | | | |
| 7a | Countersunk Screw | 5×20, SS | 7C42-0520 | 4 | 4 | | | | | | | | |
| 8 | Right Hinge Spring Cartridge | | 4A0438-01 | 2 | 2 | | | | | | | | |
| 8a | Countersunk Screw | 5×20, SS | 7C42-0520 | 4 | 4 | | | | | | | | |
| 9 | Door Lock Tumbler (includes Key 4A0460-01) | | 4A0462-01 | 2 | 2 | | | | | | | | |
| 10 | Door Lock Washer | | 4A0670-01 | 2 | 2 | | | | | | | | |
| 11 | Door Lock Stop Washer | | 4A0458-01 | 2 | 2 | | | | | | | | |
| 12 | Door Lock Cam | | 4A0228-01 | 2 | 2 | | | | | | | | |
| 13 | Door Lock Lock Washer | | 4A0459-01 | 2 | 2 | | | | | | | | |
| 14 | Door Lock Screw | | 4A0461-01 | 2 | 2 | | | | | | | | |
| 15 | Female Right Hinge Bottom Plate | | 4A0441-01 | 2 | 2 | | | | | | | | |
| 15a | Stop Plate Screw | | 4A0483-01 | 2 | 2 | | | | | | | | |
| 16 | Upper Left (UL) Door Hinge Bracket | | 3A1581-01 | 1 | 1 | | | | | | | | |
| 16a | Countersunk Screw | 5×20, SS | 7C42-0520 | 3 | 3 | | | | | | | | |
| 17 | Hinge Bushing Cover | | 4A0445-01 | 2 | 2 | | | | | | | | |
| 18 | Upper Right (UR) Door Hinge Bracket | | 3A1580-01 | 1 | 1 | | | | | | | | |
| 18a | Countersunk Screw | 5×20, SS | 7C42-0520 | 3 | 3 | | | | | | | | |
| 19 | Hinge Lock Washer | | 4A0553-01 | 2 | 2 | | | | | | | | |
| 20 | Top Hinge Pivot Pin | | 4A2179-01 | 1 | 1 | | | | | | | | |
| 21 | Hinge Stop Pin | | 4A2180-01 | 1 | 1 | | | | | | | | |
| 22 | Lower Right (LR) Door Hinge Bracket | | 3A1626-01 | 1 | 1 | | | | | | | | |
| 22a | Countersunk Screw | 5×20, SS | 7C42-0520 | 3 | 3 | | | | | | | | |
| 23 | Hinge Tension Screw | | 4A0446-01 | 2 | 2 | | | | | | | | |
| 24 | Bottom Hinge Pivot Pin | | 4A1735-01 | 1 | 1 | | | | | | | | |
| 25 | Bottom Hinge Stop Pin | | 4A1734-01 | 1 | 1 | | | | | | | | |
| 26 | Truss Head Screw (filler) | 5×10, SS | 7C32-0510 | 9 | 9 | | | | | | | | |

# E. Accessories & Labels

## RH1-SSE-XX

U-5 to F-5

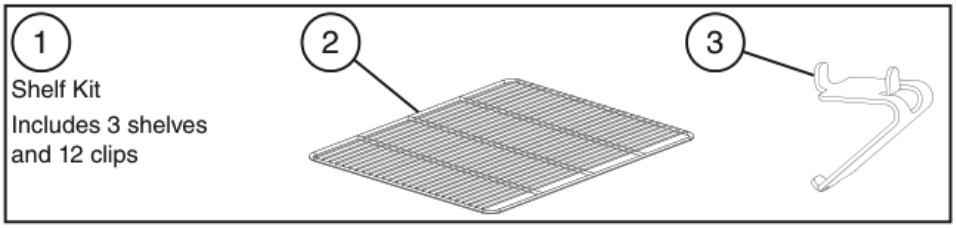


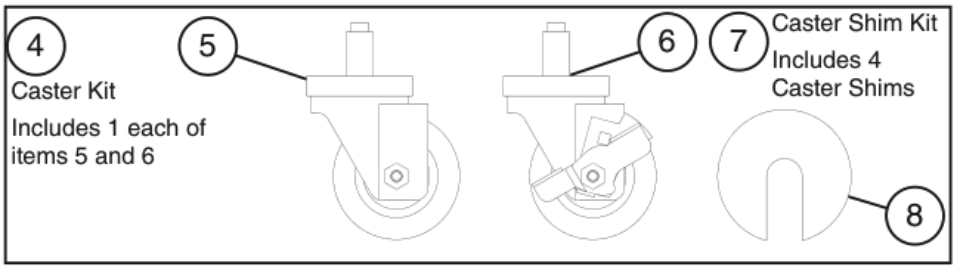


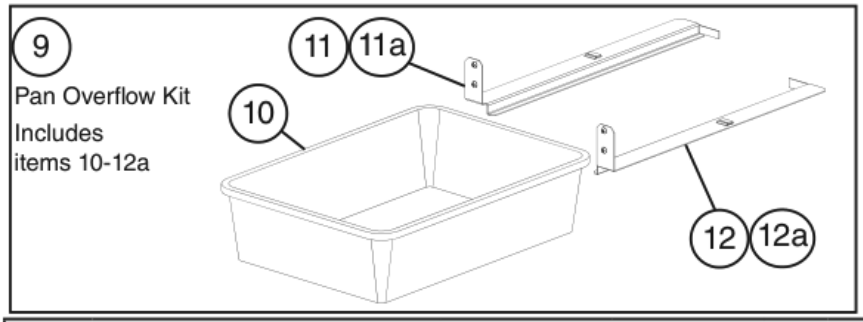


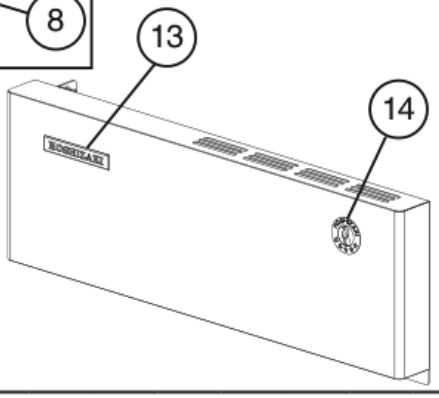


**Title: E. Accessories & Labels** **Model: RH1-SSE-XX**

| Index No. | Description | Material or Model Number | Part Number | Required Number | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | | U-5 to A-5 (H) | A-5 (J) to F-5 | | | | | | | |
| 1 | Shelf Kit (3 Pack) (Includes items 2 and 3) | HS-3508 | 3A1416A03 | 1 | 1 | | | | | | | |
| 2 | Shelf | | 3A1387-01 | 3 | 3 | | | | | | | |
| 3 | Shelf Clip | | 428957-01 | 12 | 12 | | | | | | | |
| 4 | Leg Kit (4 pack) | HS-3512 | 4A0930-01 | 1 | - | | | | | | | |
| | Caster Kit (Includes 2 each of items 5 and 6) | HS-3546 | 4A4712G01 | | 1 | | | | | | | |
| 5 | Caster | | 4A1347-01 | | 2 | | | | | | | |
| 6 | Brake Caster | | 4A1347-02 | | 2 | | | | | | | |
| 7 | Caster Shim Kit | HS-3590 | 4A3659A01 | | 1 | | | | | | | |
| 8 | Caster Shim | | 4A3658-01 | | 4 | | | | | | | |
| 9 | Pan Overflow Kit (includes items 9 through 11a) | HS-3521 | 3A1666A01 | 2 | 2 | | | | | | | |
| 10 | Overflow Pan | | 4A3419G01 | 1 | 1 | | | | | | | |
| 11 | Overflow Pan Bracket (A) | | 4A0878-01 | 1 | 1 | | | | | | | |
| 11a | T2 Screw | 4x8, SS | 7P32-0408 | 2 | 2 | | | | | | | |
| 12 | Overflow Pan Bracket (B) | | 4A0879-01 | 1 | 1 | | | | | | | |
| 12a | T2 Screw | 4x8, SS | 7P32-0408 | 2 | 2 | | | | | | | |
| 13 | Emblem | | 4A0560-01 | 1 | 1 | | | | | | | |
| 14 | Penguin Label | | 456246-02 | 1 | 1 | | | | | | | |