



HOSHIZAKI

Parts List

Counter Showcase

Model

HNC-120BA-L(R)-S

HNC-150BA-L(R)-S

HNC-180BA-L(R)-S

HNC-210BA-L(R)-S



hoshizakiamerica.com

Number: S041-3268
Issued: 1-2017

Auxiliary Codes

HNC-120BA-L(R)-S	U-1	October 2009
HNC-150BA-L(R)-S	A-1	March 2011
HNC-180BA-L(R)-S	C-1	December 2013
HNC-210BA-L(R)-S	D-1	January 2014
	D-2	January 2014
	G-1	January 2017

AUXILIARY CODE

The auxiliary code is the first two characters in the serial number. The first character indicates the year. Years progress or regress in alphabetical order. The series runs from "A" through "V" and the letters "I" and "O" are skipped. The second character indicates significant part changes within a year. Base is "0" and this number advances for each change. In cases where there is a letter in parentheses, this designates the month. This is the last character in the serial number. The series runs from "(A)" through "(M)" and the letter "(I)" is skipped. This designation is only included when identifying a parts change within an auxiliary code.

Note About Ordering Parts


Most assemblies cannot be ordered as complete units; parts in the assemblies generally must be ordered separately.

MARKS LOCATED UNDER THE AUXILIARY CODE

- = Part deleted.
- x = Part deleted and replaced by "o" part.
- o = New part in place of "x" part.

FASTENER PART NUMBER


SCREWS

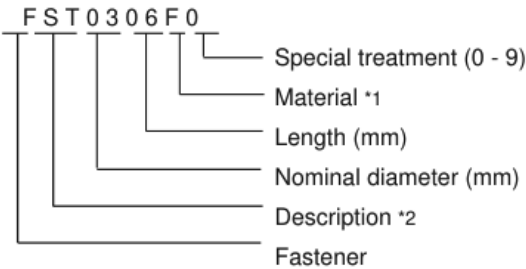

*1 Material

- F: Steel
- S: Austenitic stainless steel
- M: Martensitic stainless steel
- B: Copper alloy
- P: Polycarbonate
- N: Polyamide
- V: PVC
- A: ABS
- X: Polyacetal
- L: Aluminum

NUTS & WASHERS

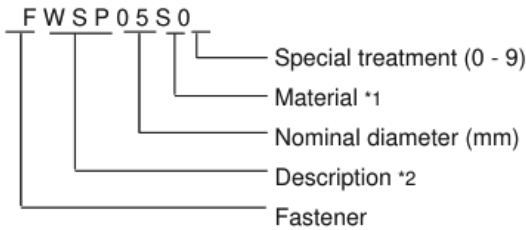


*2 Description

- First letter
- S: Machine screw
- T: Tapping screw
- M: Wood screw
- B: Bolt
- W: Washer
- N: Nut

HNC-120BA-L(R)-S
HNC-150BA-L(R)-S
HNC-180BA-L(R)-S
HNC-210BA-L(R)-S

A. GENERAL AY

(U-1) and later

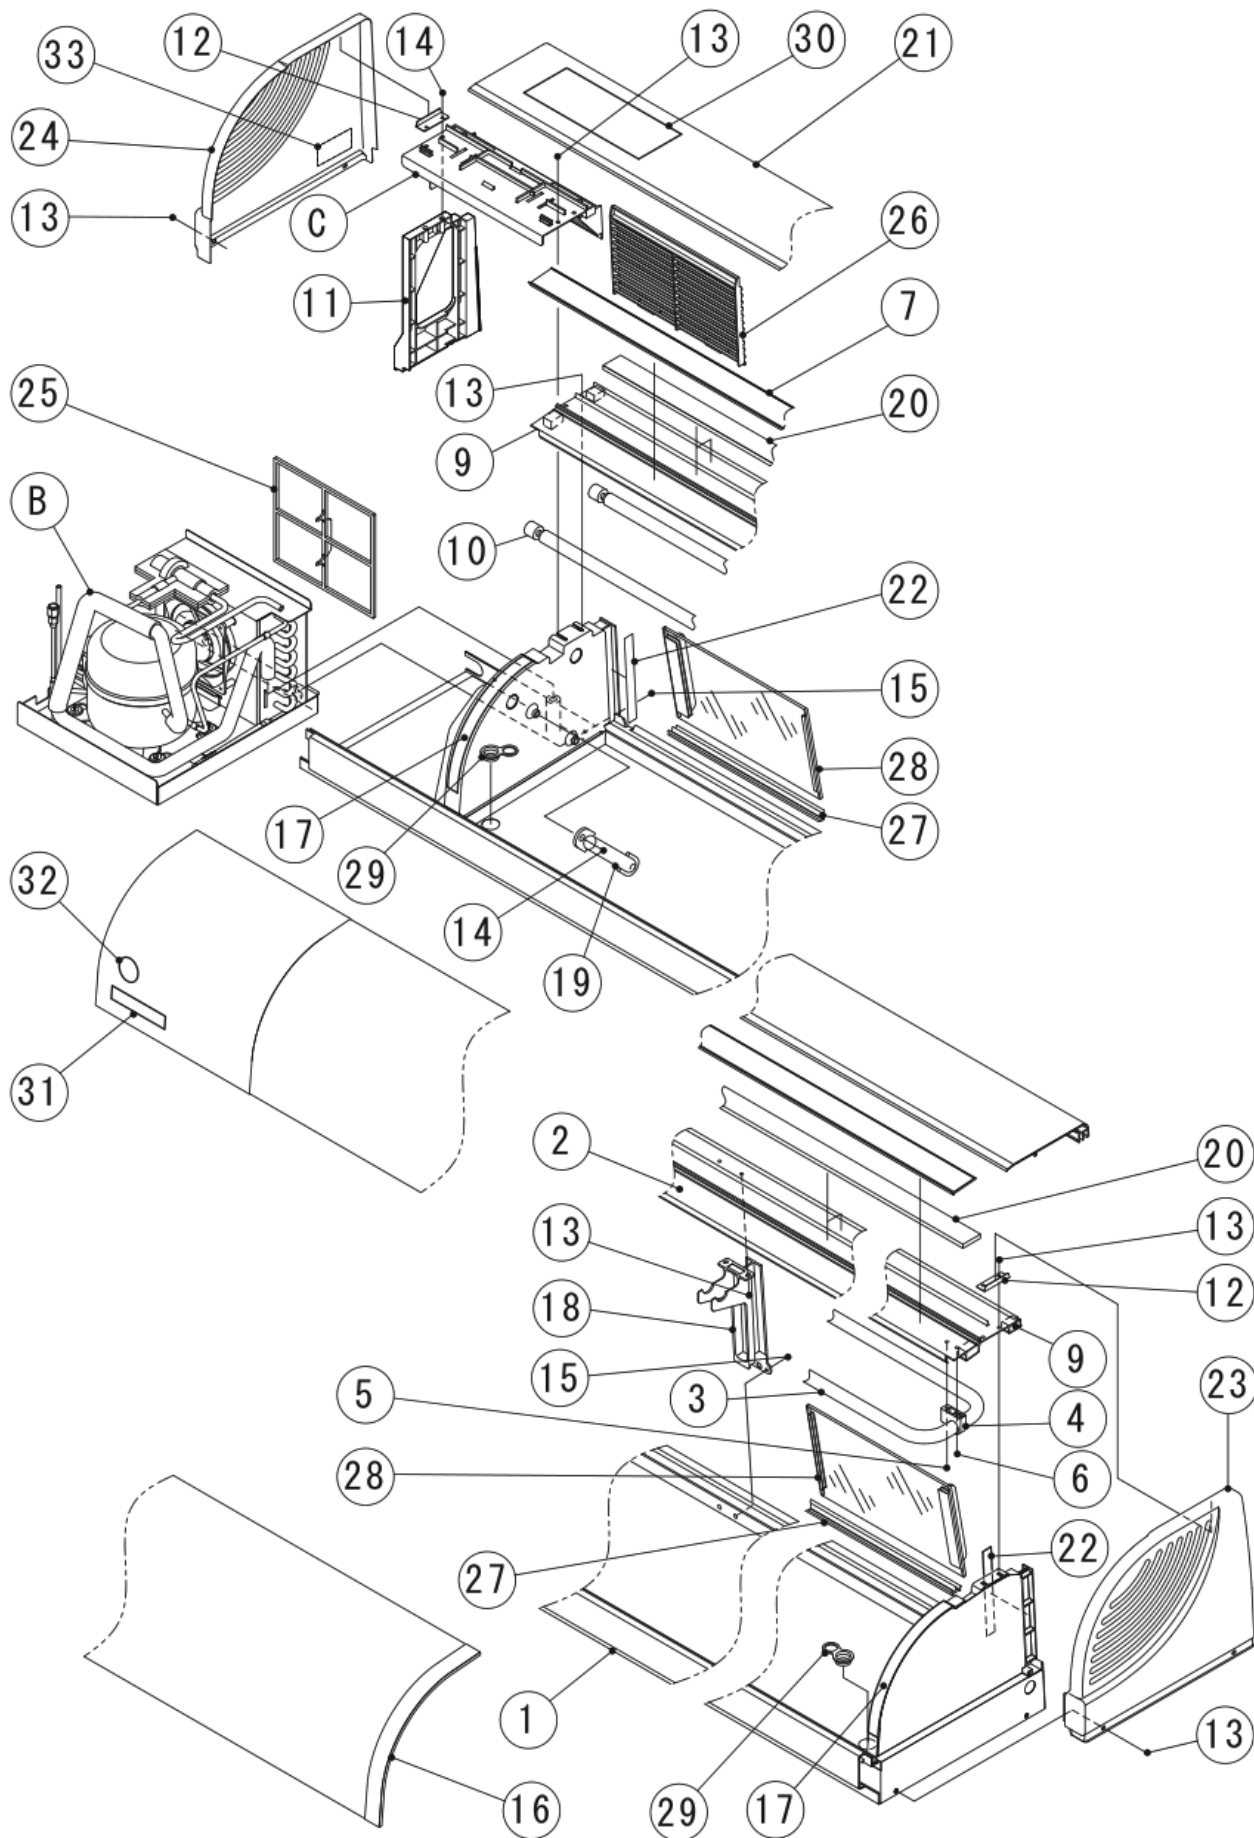

HA

MODEL: HNC-120BA-L(R)-S HNC-150BA-L(R)-S HNC-180BA-L(R)-S HNC-210BA-L(R)-S				TITLE: A.GENERAL AY			
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				U-1,A-0 A-1,B-0 C-0	C-1 D-1	D-2,E-0 F-0	G-1
B	REFRIGERATION AY/L		1R2495A01	1	-	-	-
			1R3586A01	-	1	1	-
		(120)(150)	1R3586A02	-	-	-	1
		(180)(210)	1R3586A03	-	-	-	1
	REFRIGERATION AY/R		1R2491A01	1	-	-	-
			1R3587A01	-	1	1	-
		(120)(150)	1R3587A02	-	-	-	1
		(180)(210)	1R3587A03	-	-	-	1
C	ELB BRACKET AY (L)		2R4570A01	1	-	-	-
			2R4570A02	-	1	1	-
		(120)(150)	2X2924A01	-	-	-	1
		(180)(210)	2X2924A02	-	-	-	1
	ELB BRACKET AY (R)		2R4569A01	1	-	-	-
			2R4569A02	-	1	1	-
		(120)(150)	2X2925A01	-	-	-	1
		(180)(210)	2X2925A02	-	-	-	1
D	ACCESSORIES	(120)	A01996-01	1	1	1	1
		(150)	A01991-01	1	1	1	1
		(180)	A01987-01	1	1	1	1
		(210)	A01983-01	1	1	1	1
1	BASE AY/12L	(120BA-L)	1R2487G01	1	-	-	-
			1R2487G02	-	1	1	1
	BASE AY/12R	(120BA-R)	1R2483G01	1	-	-	-
			1R2483G02	-	1	1	1
	BASE AY/15L	(150BA-L)	1R2488G01	1	-	-	-
			1R2488G02	-	1	1	1
	BASE AY/15R	(150BA-R)	1R2484G01	1	-	-	-
			1R2484G02	-	1	1	1
	BASE AY/18L	(180BA-L)	1R2489G01	1	-	-	-
			1R2489G02	-	1	1	1

HA

MODEL: HNC-120BA-L(R)-S HNC-150BA-L(R)-S HNC-180BA-L(R)-S HNC-210BA-L(R)-S				TITLE: A.GENERAL AY			
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				U-1,A-0 A-1,B-0 C-0	C-1 D-1	D-2,E-0 F-0	G-1
1	BASE AY/18R	(180BA-R)	1R2485G01	1	-	-	-
			1R2485G02	-	1	1	1
	BASE AY/21L	(210BA-L)	1R2490G01	1	-	-	-
			1R2490G02	-	1	1	1
	BASE AY/21R	(210BA-R)	1R2486G01	1	-	-	-
			1R2486G02	-	1	1	1
2	TOP FRAME (L) - 12	(120BA-L)	2R4464M05	1	1	1	1
	TOP FRAME (R) - 12	(120BA-R)	2R4464M01	1	1	1	1
	TOP FRAME (L) - 15	(150BA-L)	2R4464M06	1	1	1	1
	TOP FRAME (R) - 15	(150BA-R)	2R4464M02	1	1	1	1
	TOP FRAME (L) - 18	(180BA-L)	2R4464M07	1	1	1	1
	TOP FRAME (R) - 18	(180BA-R)	2R4464M03	1	1	1	1
	TOP FRAME (L) - 21	(210BA-L)	2R4464M08	1	1	1	1
	TOP FRAME (R) - 21	(210BA-R)	2R4464M04	1	1	1	1
3	PIPE UP/EVAP12	(120)	3R5151G02	1	-	-	-
			P02942-02	-	1	1	1
	PIPE UP/EVAP15	(150)	3R5151G03	1	-	-	-
			P02942-03	-	1	1	1
	PIPE UP/EVAP18	(180)	3R5151G04	1	-	-	-
			P02942-04	-	1	1	1
	PIPE UP/EVAP21	(210)	3R5151G05	1	-	-	-
			P02942-05	-	1	1	1
4	HOLDER ASSY		4R2804A01	1	1	1	1
5	TRUSS HEAD TAPPING SCREW T2		FT20430M0	1	1	1	1
6	TRUSS HEAD TAPPING SCREW T2		FT20410M0	1	1	1	1
7	TOP GASKET - 12	(120)	3S1630P01	1	1	1	1
	TOP GASKET - 15	(150)	3S1630P02	1	1	1	1
	TOP GASKET - 18	(180)	3S1630P03	1	1	1	1
	TOP GASKET - 21	(210)	3S1630P04	1	1	1	1
9	INSULATION - TOP FRAME		4R5131P01	4	4	4	4

HA

MODEL: HNC-120BA-L(R)-S HNC-150BA-L(R)-S HNC-180BA-L(R)-S HNC-210BA-L(R)-S				TITLE: A.GENERAL AY			
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				U-1,A-0 A-1,B-0 C-0	C-1 D-1	D-2,E-0 F-0	G-1
10	SEAL A/EVAP		4R2368-01	2	-	-	-
	SEAL C/EVAP		4R2368Z04	-	2	2	2
11	SIDE FRAME (L)	(L)	2R4504P02	1	1	1	1
	SIDE FRAME (R)	(R)	2R4504P01	1	1	1	1
12	HOOK		4R5121M01	2	2	2	2
13	TRUSS HEAD TAPPING SCREW T2	(120)	FT20408M0	10	-	-	-
			FT20410M0	-	10	10	10
		(150,180,210)	FT20408M0	12	-	-	-
			FT20410M0	-	12	12	12
14	TRUSS HEAD TAPPING SCREW T1		FT10416M0	4	4	4	4
15	TAPPING SCREW-BLACK	(120)	433954-01	2	2	2	2
		(150,180,210)		4	4	4	4
16	FRONT GLASS - 12	(120)	P01641-02	1	1	1	1
	FRONT GLASS - 15	(150)	P01641-03	1	1	1	1
	FRONT GLASS - 18	(180)	P01641-04	1	1	1	1
	FRONT GLASS - 21	(210)	P01641-05	1	1	1	1
17	SOFT SEAL (A)		4R5133P01	2	2	2	2
18	CENTER FRAME AY	(150,180,210)	2R4566G01	1	1	1	1
19	THERMOMETER		461083-01	1	1	1	1
20	INSULATION (B)	(120)	4R5132P02	2	2	2	2
	INSULATION (C)	(150)	4R5132P03	2	2	2	2
	INSULATION (D)	(180)	4R5132P04	4	4	4	4
	INSULATION (E)	(210)	4R5132P05	4	4	4	4
21	SUS TOP COVER - 12	(120)	2R4597G01	1	1	1	1
	SUS TOP COVER - 15	(150)	2R4578G01	1	1	1	1
	SUS TOP COVER - 18	(180)	2R4587G01	1	1	1	1
	SUS TOP COVER - 21	(210)	2R4565G01	1	1	1	1
22	CUSHION-SIDE PANEL		4R5123R01	2	2	2	2


HA

MODEL: HNC-120BA-L(R)-S HNC-150BA-L(R)-S HNC-180BA-L(R)-S HNC-210BA-L(R)-S								TITLE: A.GENERAL AY							
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER											
				U-1,A-0 A-1,B-0 C-0	C-1 D-1	D-2,E-0 F-0	G-1								
23	SIDE COVER R AY	(L)	3S1787G01	1	1	1	1								
		(R)	3S1783G01	1	-	-	-								
			3S1783G02	-	1	1	-								
			3S1783G03	-	-	-	1								
24	SIDE COVER L AY	(L)	3S1788G01	1	-	-	-								
			3S1788G02	-	1	1	-								
			3S1788G03	-	-	-	1								
		(R)	3S1781G01	1	1	1	1								
25	AIR FILTER		3S1695G01	1	1	1	1								
26	LOUVER-UNIT		2R4506P01	1	1	1	1								
27	SLIDER/12	(120)	4R2254-02	1	1	1	1								
	SLIDER/15	(150)	4R2254-03	2	2	2	2								
	SLIDER/18	(180)	4R2254-04	2	2	2	2								
	SLIDER/21	(210)	4R2254-05	2	2	2	2								
28	SLIDING DOOR	(120)	3R5019G06	2	2	2	2								
		(150)	3R5019G07	4	4	4	4								
		(180)	3R5019G08	4	4	4	4								
		(210)	3R5019G09	4	4	4	4								
29	CAP-DRAIN		4R2260-01	2	2	2	2								
30	MAINTENANCE LABEL		257431L01	1	1	1	1								
31	NAME PLATE (S)		431136-01	1	1	1	1								
32	CARACTER LABEL-PENGUIN	(L)	448818-02	1	1	1	1								
		(R)	448818-01	1	1	1	1								
33	WIRING LABEL		4R5128L01	1	-	-	-								
			4R6154L01	-	1	1	-								
			4Y9523L01	-	-	-	1								

HNC-120BA-L(R)-S
HNC-150BA-L(R)-S
HNC-180BA-L(R)-S
HNC-210BA-L(R)-S

B. REFRIGERATION AY/L(R)

(U-1) and later

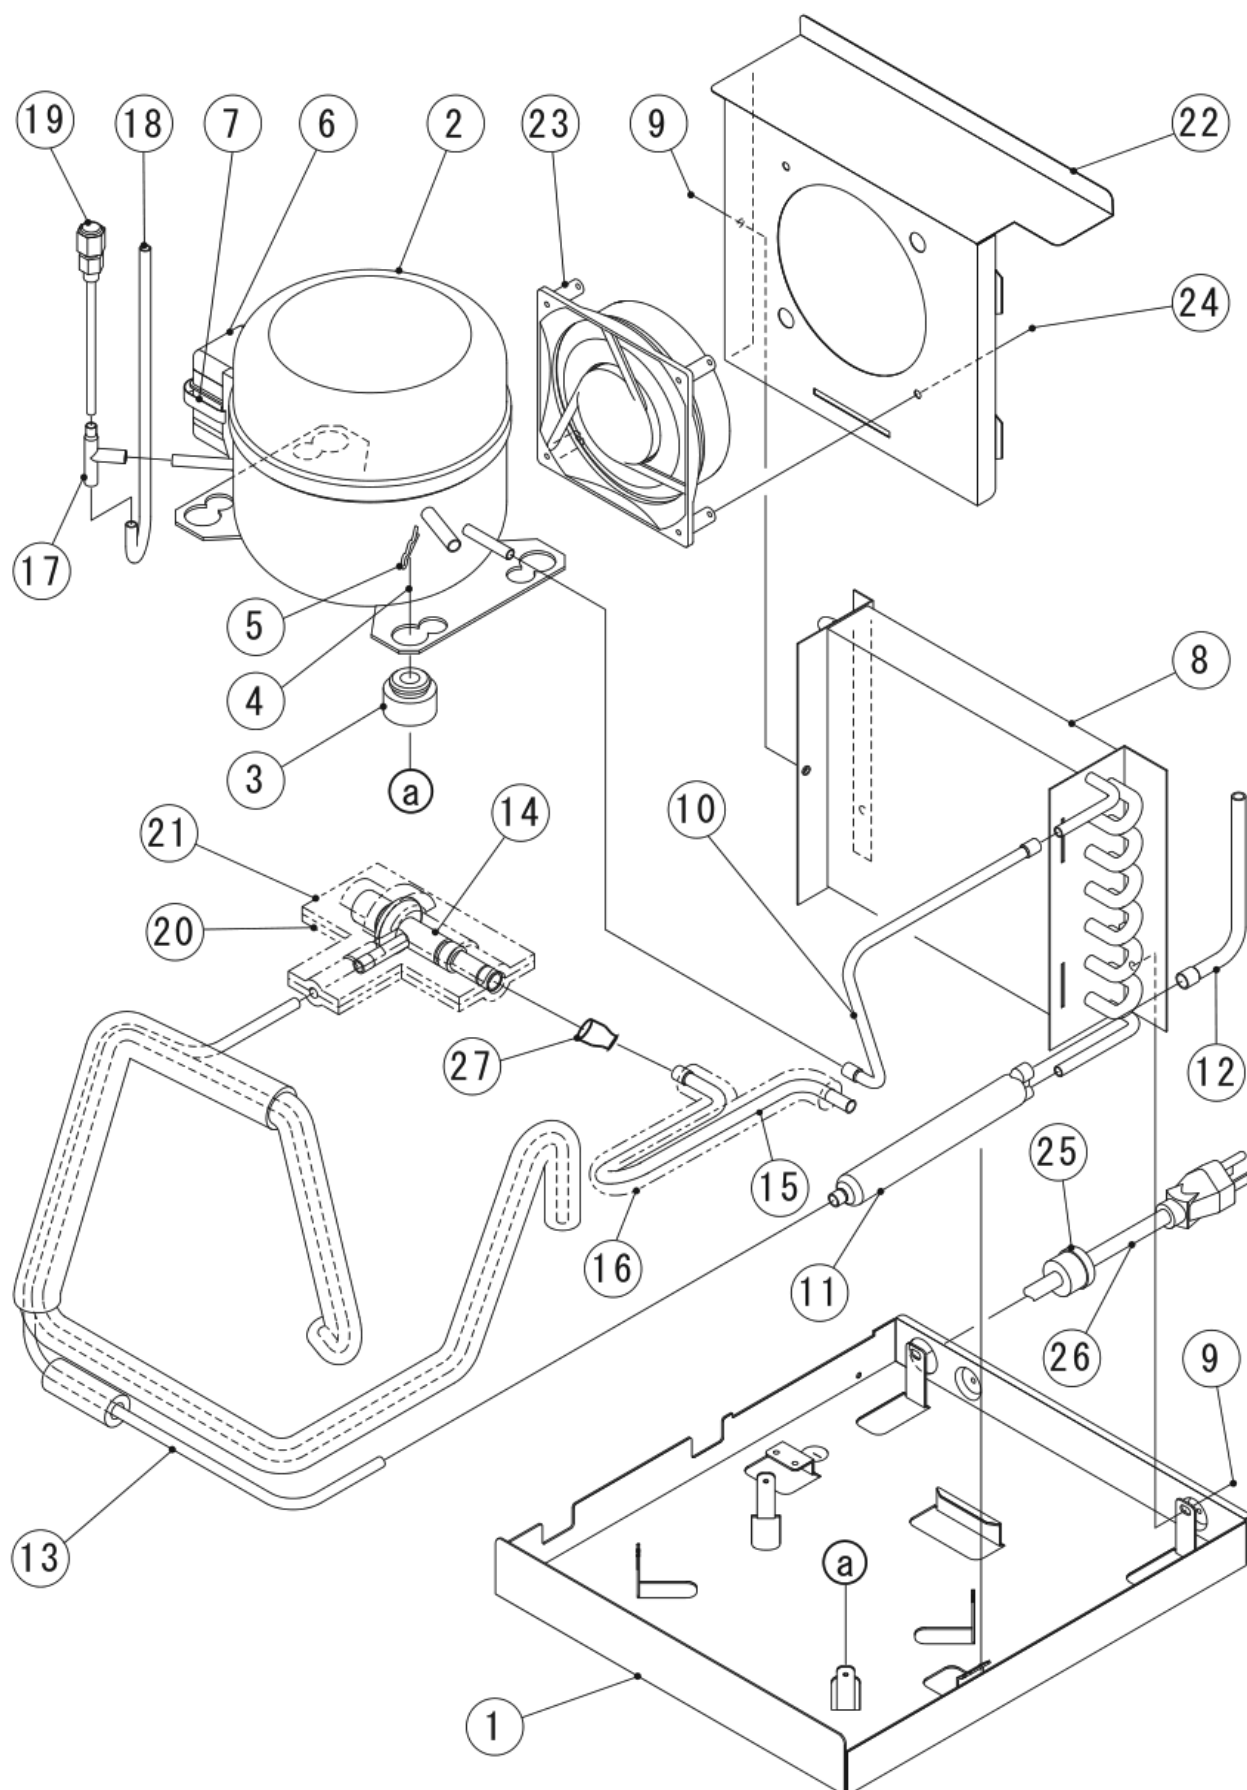


HA

MODEL: HNC-120BA-L(R)-S HNC-150BA-L(R)-S HNC-180BA-L(R)-S HNC-210BA-L(R)-S				TITLE: B. REFRIGERATION AY L(R)			
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				U-1,A-0 A-1,B-0 C-0	C-1 D-1	D-2,E-0 F-0	G-1
1	BASE/UNIT	(L)	2R4551M02	1	–	–	–
			2R6594M04	–	1	1	1
		(R)	2R4551M01	1	–	–	–
			2R6594M03	–	1	1	1
2	COMPRESSOR	CE56Y-1ZU	460658-01	1	–	–	–
		FL1152-PD	P03156-01	–	1	1	–
		(120)(150) FL0528 - PB	P04220-01	–	–	–	1
		(180)(210) FL0739 - PJ	P04221-01	–	–	–	1
3	RUBBER GROMMET		443695-01	4	–	–	–
			P02013-01	–	4	4	4
4	FLAT WASHER		FWPL10S0	2	2	2	2
5	SNAP PIN		715S-0010	2	2	2	2
6	TERMINAL COVER		434797-01	1	–	–	–
			451040-01	–	1	1	1
7	COVER BAND		434798-01	1	–	–	–
			451041-01	–	1	1	1
8	CONDENSER		P01558-01	1	1	1	1
9	TRUSS HEAD TAPPING SCREW (S-TITE)		FTS0408M0	3	4	4	4
10	COPPER TUBE A/HI L	(L)	3S1773M02	1	–	–	–
	COPPER TUBE A/HI		4R6329M01	–	1	1	1
	COPPER TUBE A/HI R	(R)	3S1773M01	1	–	–	–
	COPPER TUBE A/HI		4R6117M01	–	1	1	1
11	DRIER	DY-15QHD-9	458772-01	1	1	1	1
12	COPPER TUBE (K)		4R5252M02	1	1	1	1
13	HEAT EXCHANGER L	(L)	2R4572G01	1	–	–	–
			2R7137G01	–	1	1	1
	HEAT EXCHANGER R	(R)	2R4559G01	1	–	–	–
			2R7141G01	–	1	1	1
14	EXPANSION VALVE	HYP2-5QHD-5	447283-04	1	1	1	1

HNC-120BA-L(R)-S
HNC-150BA-L(R)-S
HNC-180BA-L(R)-S
HNC-210BA-L(R)-S

C. ELB BRACKET AY


(U-1) to (C-0)

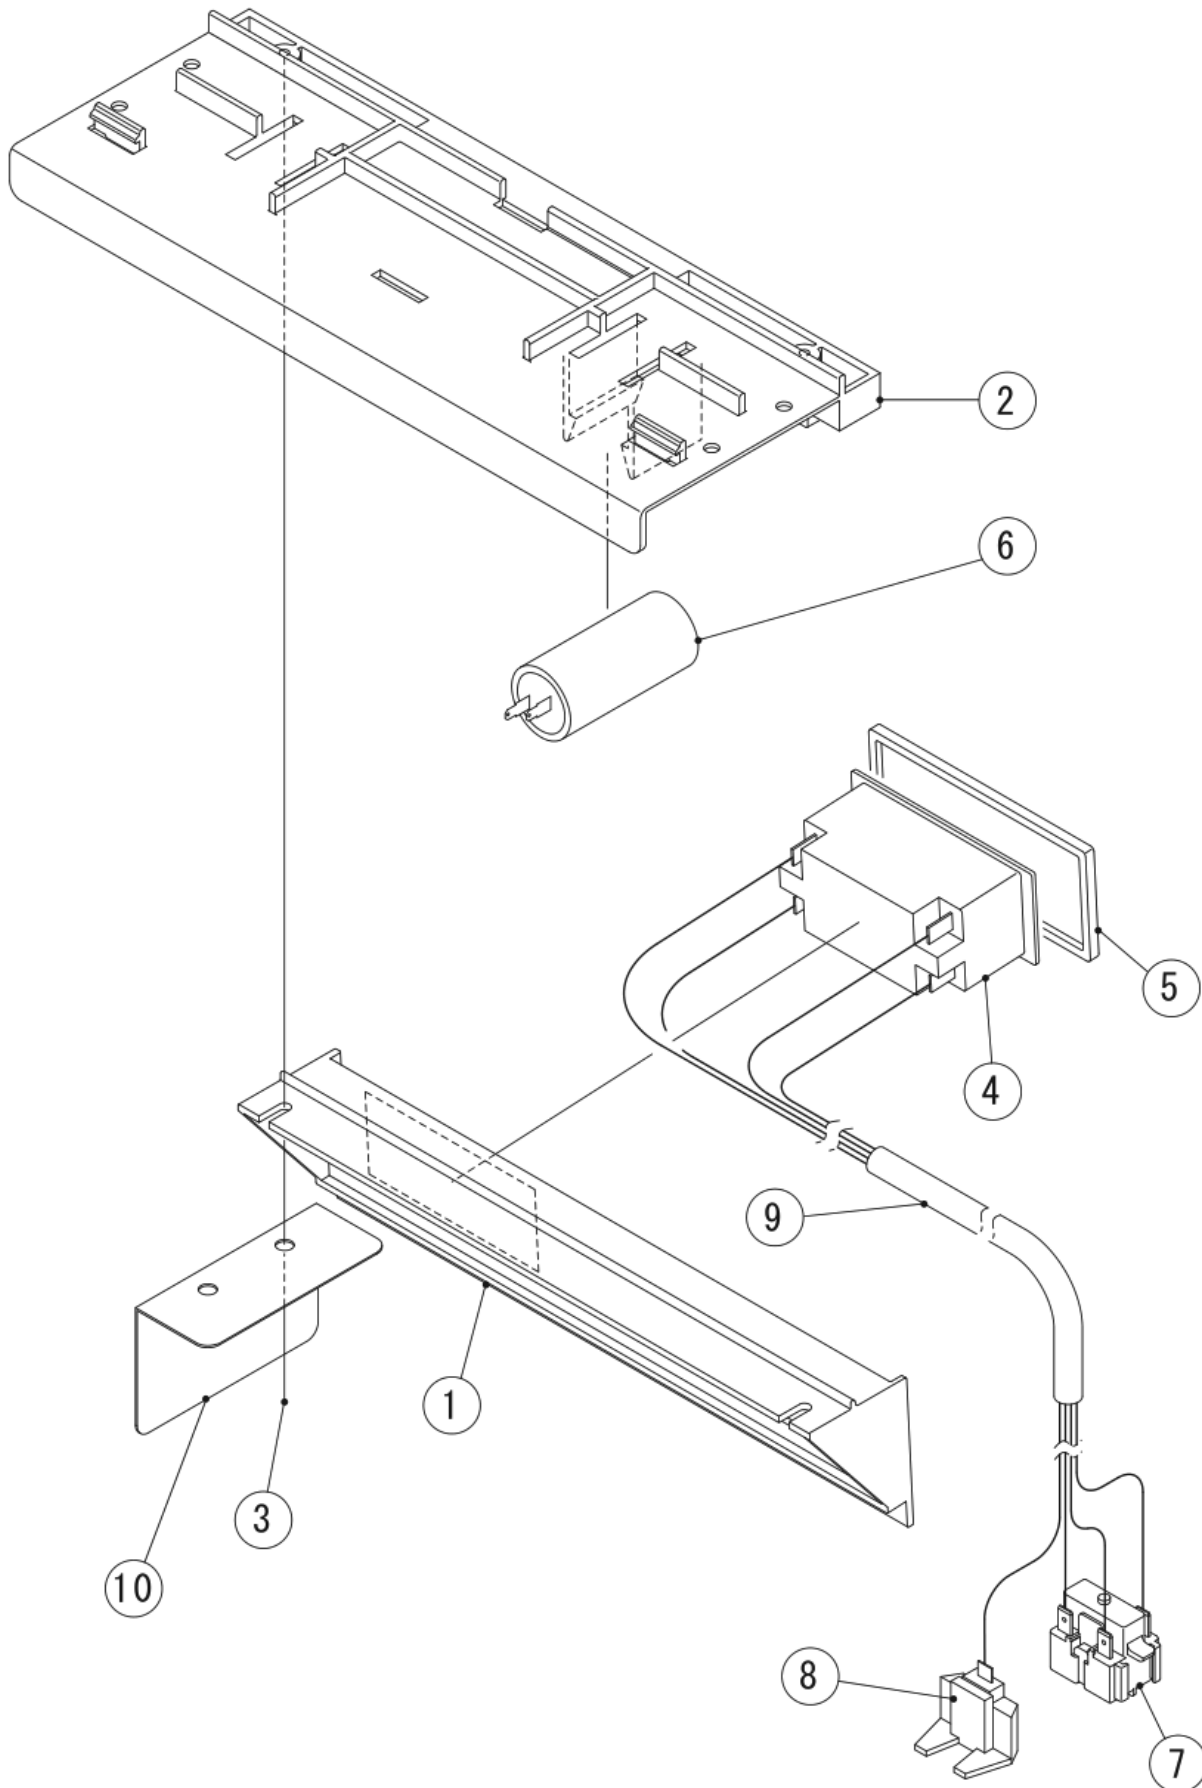

HNC-120BA-L(R)-S
HNC-150BA-L(R)-S
HNC-180BA-L(R)-S
HNC-210BA-L(R)-S


C. ELB BRACKET AY

(C-1) and later

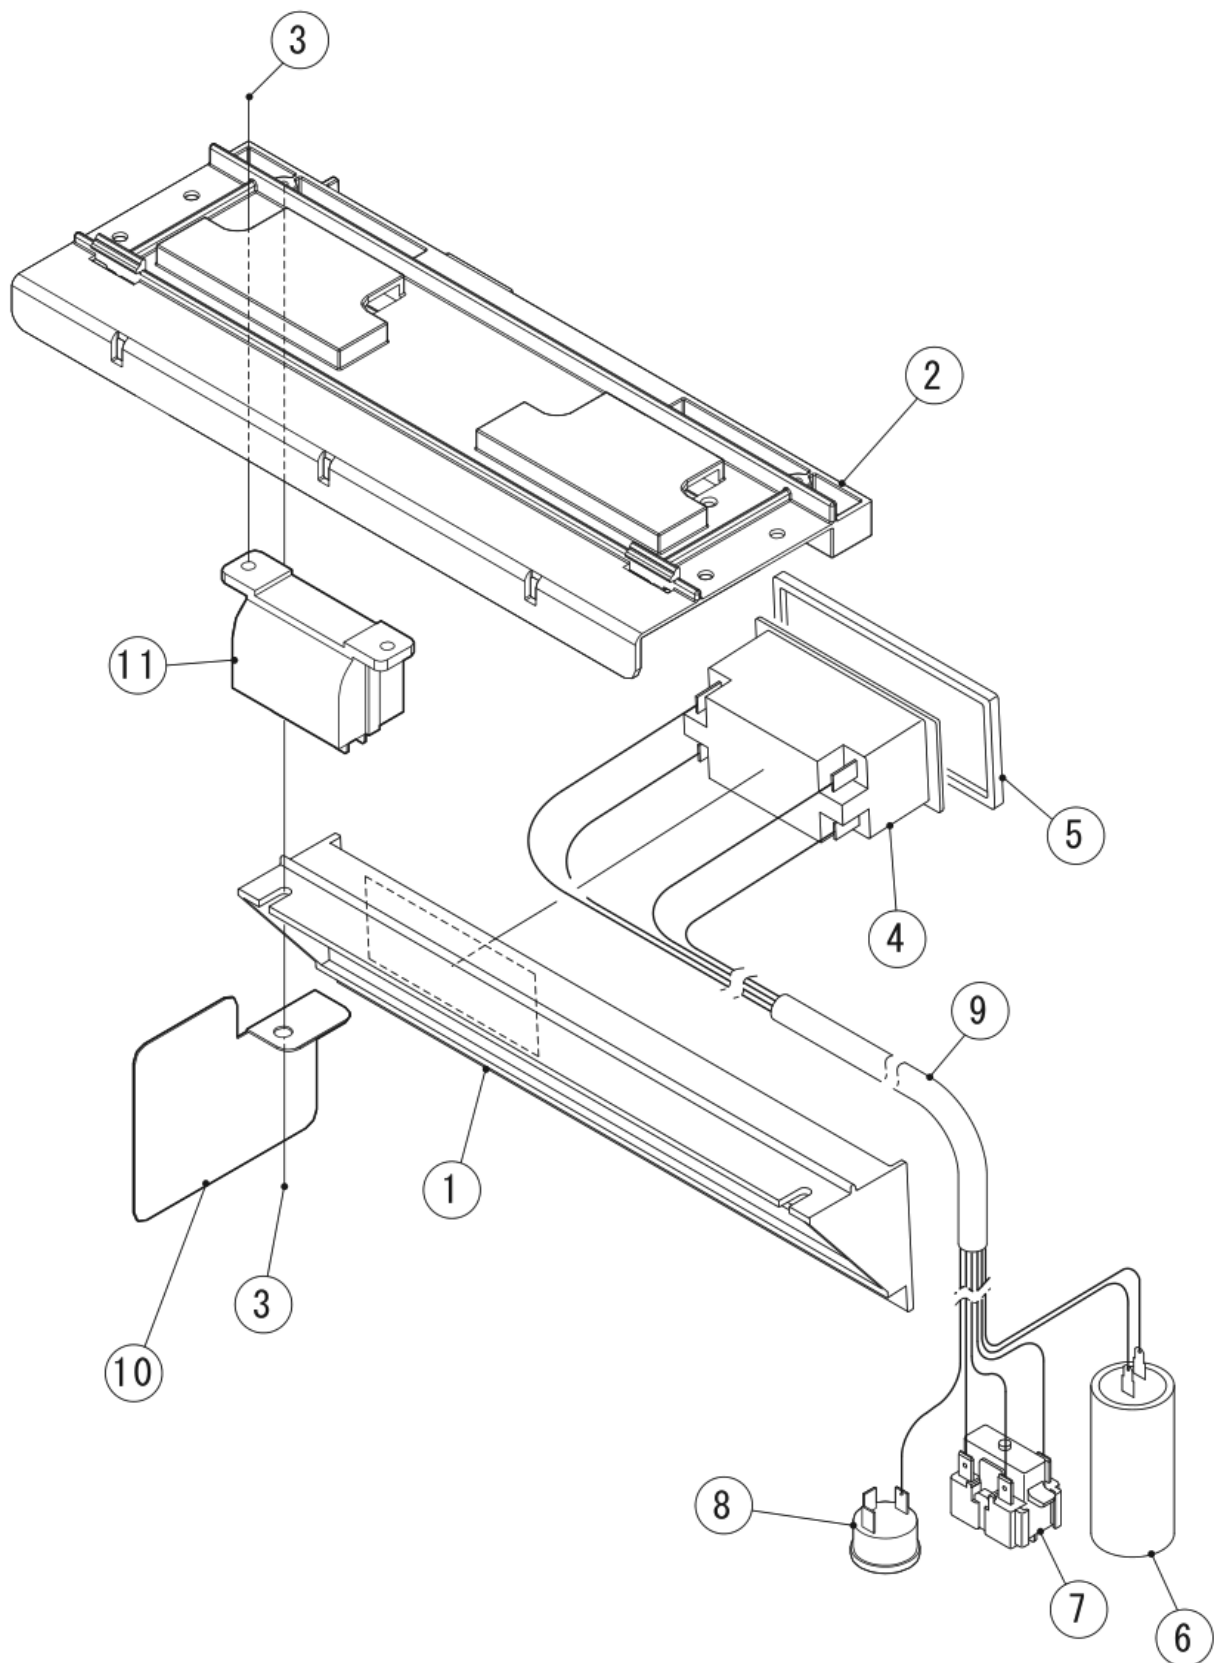

HA

MODEL: HNC-120BA-L(R)-S HNC-150BA-L(R)-S HNC-180BA-L(R)-S HNC-210BA-L(R)-S				TITLE: C.ELB BRACKET AY			
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				U-1,A-0 A-1,B-0 C-0	C-1 D-1	D-2,E-0 F-0	G-1
1	ELB BRACKET	(L)	2R4479P02	1	1	1	1
		(R)	2R4479P01	1	1	1	1
2	TOP FRAME/UNIT		2R4478P01	1	-	-	-
			2R4478P02	-	1	1	-
			2X2919P01	-	-	-	1
3	TRUSS HEAD TAPPING SCREW T1		FT10416M0	2	2	2	4
4	LEAK BREAKER		461853-01	1	1	1	1
5	COVER - ELB		461854-01	1	1	1	1
6	START CAPACITOR		432250-01	1	-	-	-
			464579-01	-	1	1	1
7	STARTER		446798-01	1	-	-	-
			P02643-01	-	1	1	-
			P02960-01	-	-	-	1
8	MOTOR PROTECTOR		446791-01	1	-	-	-
		3.6C36C1	451038-02	-	1	1	-
		(120)(150) 1.4C36C1	P04222-01	-	-	-	1
		(180)(210) 1.8C36C3	P04416-01	-	-	-	1
10	PROTECTION PLATE		4R5268M01	1	1	1	-
	BARRIER L	(L)	4Y9521M01	-	-	-	1
	BARRIER R	(R)	4Y9521M02	-	-	-	1
11	RUN CAPACITOR		P03955-01	-	-	-	1

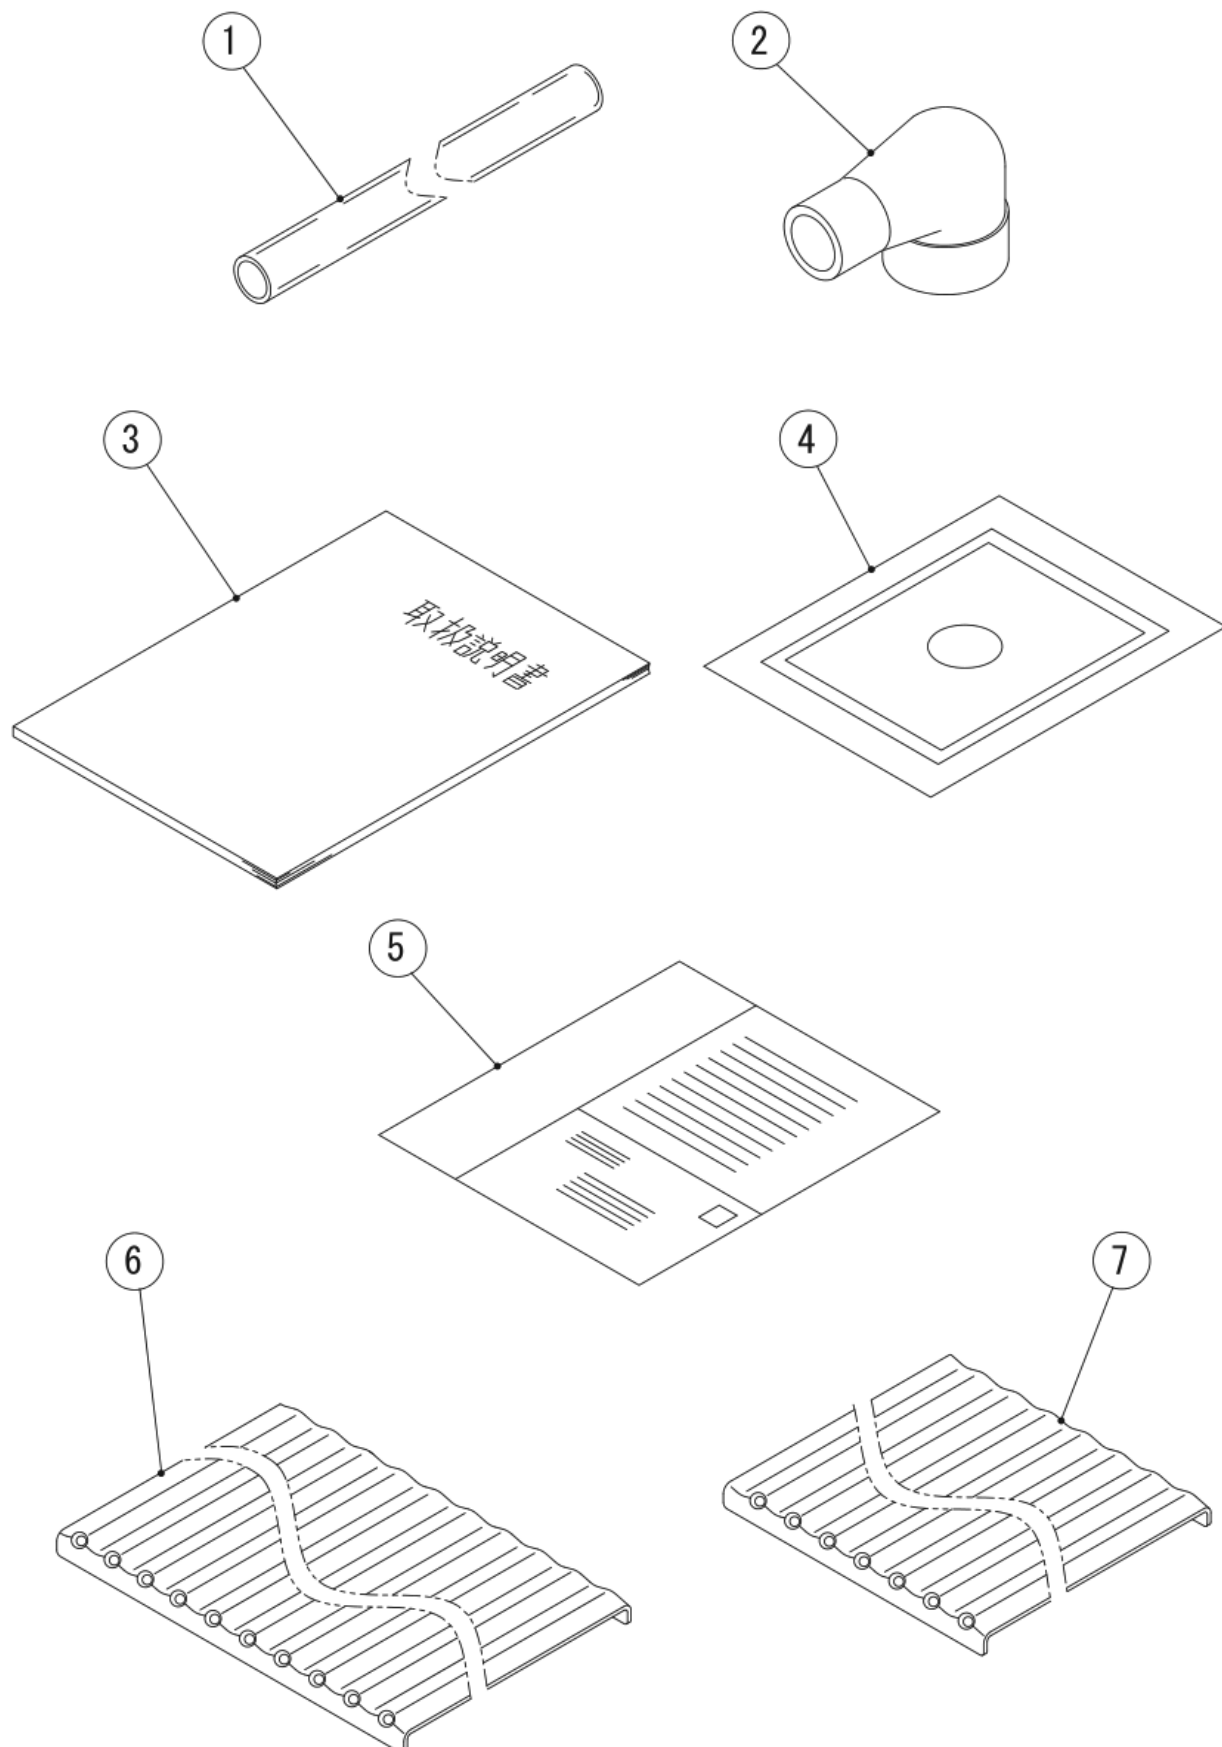

HA

MODEL: HNC-120BA-L(R)-S HNC-150BA-L(R)-S HNC-180BA-L(R)-S HNC-210BA-L(R)-S								TITLE: D.ACCESSORIES AY							
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER											
				U-1,A-0 A-1,B-0 C-0	C-1 D-1	D-2,E-0 F-0	G-1								
1	PVC HOSE	(1500mm)	HA1519H15	1	1	1	1								
2	ELBOW		3R5082-01	2	2	2	2								
3	INSTRUCTION MANUAL		L1S014102	1	1	1	1								
4	CERTIFICATE - WARRNTY		209760-01	1	1	1	1								
5	REGISTRATION CARD		2A2894-01	1	1	1	1								
6	FOOD MAT A	(120)	2R1393-03	2	2	2	2								
		(150)	2R1393-03	3	3	3	3								
		(180)	2R1393-03	4	4	4	4								
		(210)	2R1393-03	5	5	5	5								
7	FOOD MAT B		2R1393-04	1	1	1	1								