



HOSHIZAKI

Parts List

Counter Showcase

Model

HNC-120BA-L/R-SL

HNC-150BA-L/R-SL

HNC-180BA-L/R-SL

HNC-210BA-L/R-SL



hoshizakiamerica.com

Number: S086-4248
Issued: 11-2018

Auxiliary Codes

HNC-120BA-L/R-SL	G-0	June 2017
HNC-150BA-L/R-SL		
HNC-180BA-L/R-SL		
HNC-210BA-L/R-SL		

AUXILIARY CODE

The auxiliary code is the first two characters in the serial number. The first character indicates the year. Years progress or regress in alphabetical order. The series runs from "A" through "V" and the letters "I" and "O" are skipped. The second character indicates significant part changes within a year. Base is "0" and this number advances for each change. In cases where there is a letter in parentheses, this designates the month. This is the last character in the serial number. The series runs from "(A)" through "(M)" and the letter "(I)" is skipped. This designation is only included when identifying a parts change within an auxiliary code.

Note About Ordering Parts


Most assemblies cannot be ordered as complete units; parts in the assemblies generally must be ordered separately.

MARKS LOCATED UNDER THE AUXILIARY CODE

- = Part deleted.
- x = Part deleted and replaced by "o" part.
- o = New part in place of "x" part.

FASTENER PART NUMBER


SCREWS

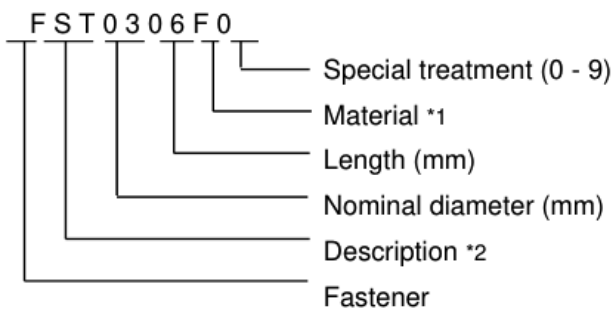

*1 Material

F: Steel
S: Austenitic stainless steel
M: Martensitic stainless steel
B: Copper alloy
P: Polycarbonate
N: Polyamide
V: PVC
A: ABS
X: Polyacetal
L: Aluminum

NUTS & WASHERS

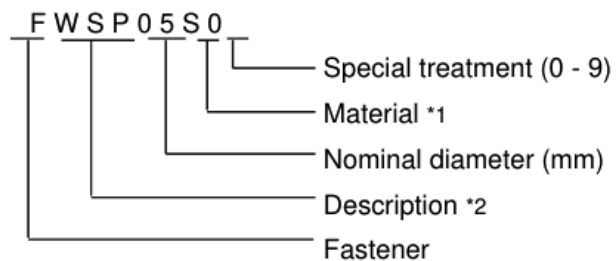


*2 Description

First letter
S: Machine screw
T: Tapping screw
M: Wood screw
B: Bolt
W: Washer
N: Nut

HNC-120BA-L/R-SL
HNC-150BA-L/R-SL
HNC-180BA-L/R-SL
HNC-210BA-L/R-SL

A. GENERAL AY

(G-0) and later

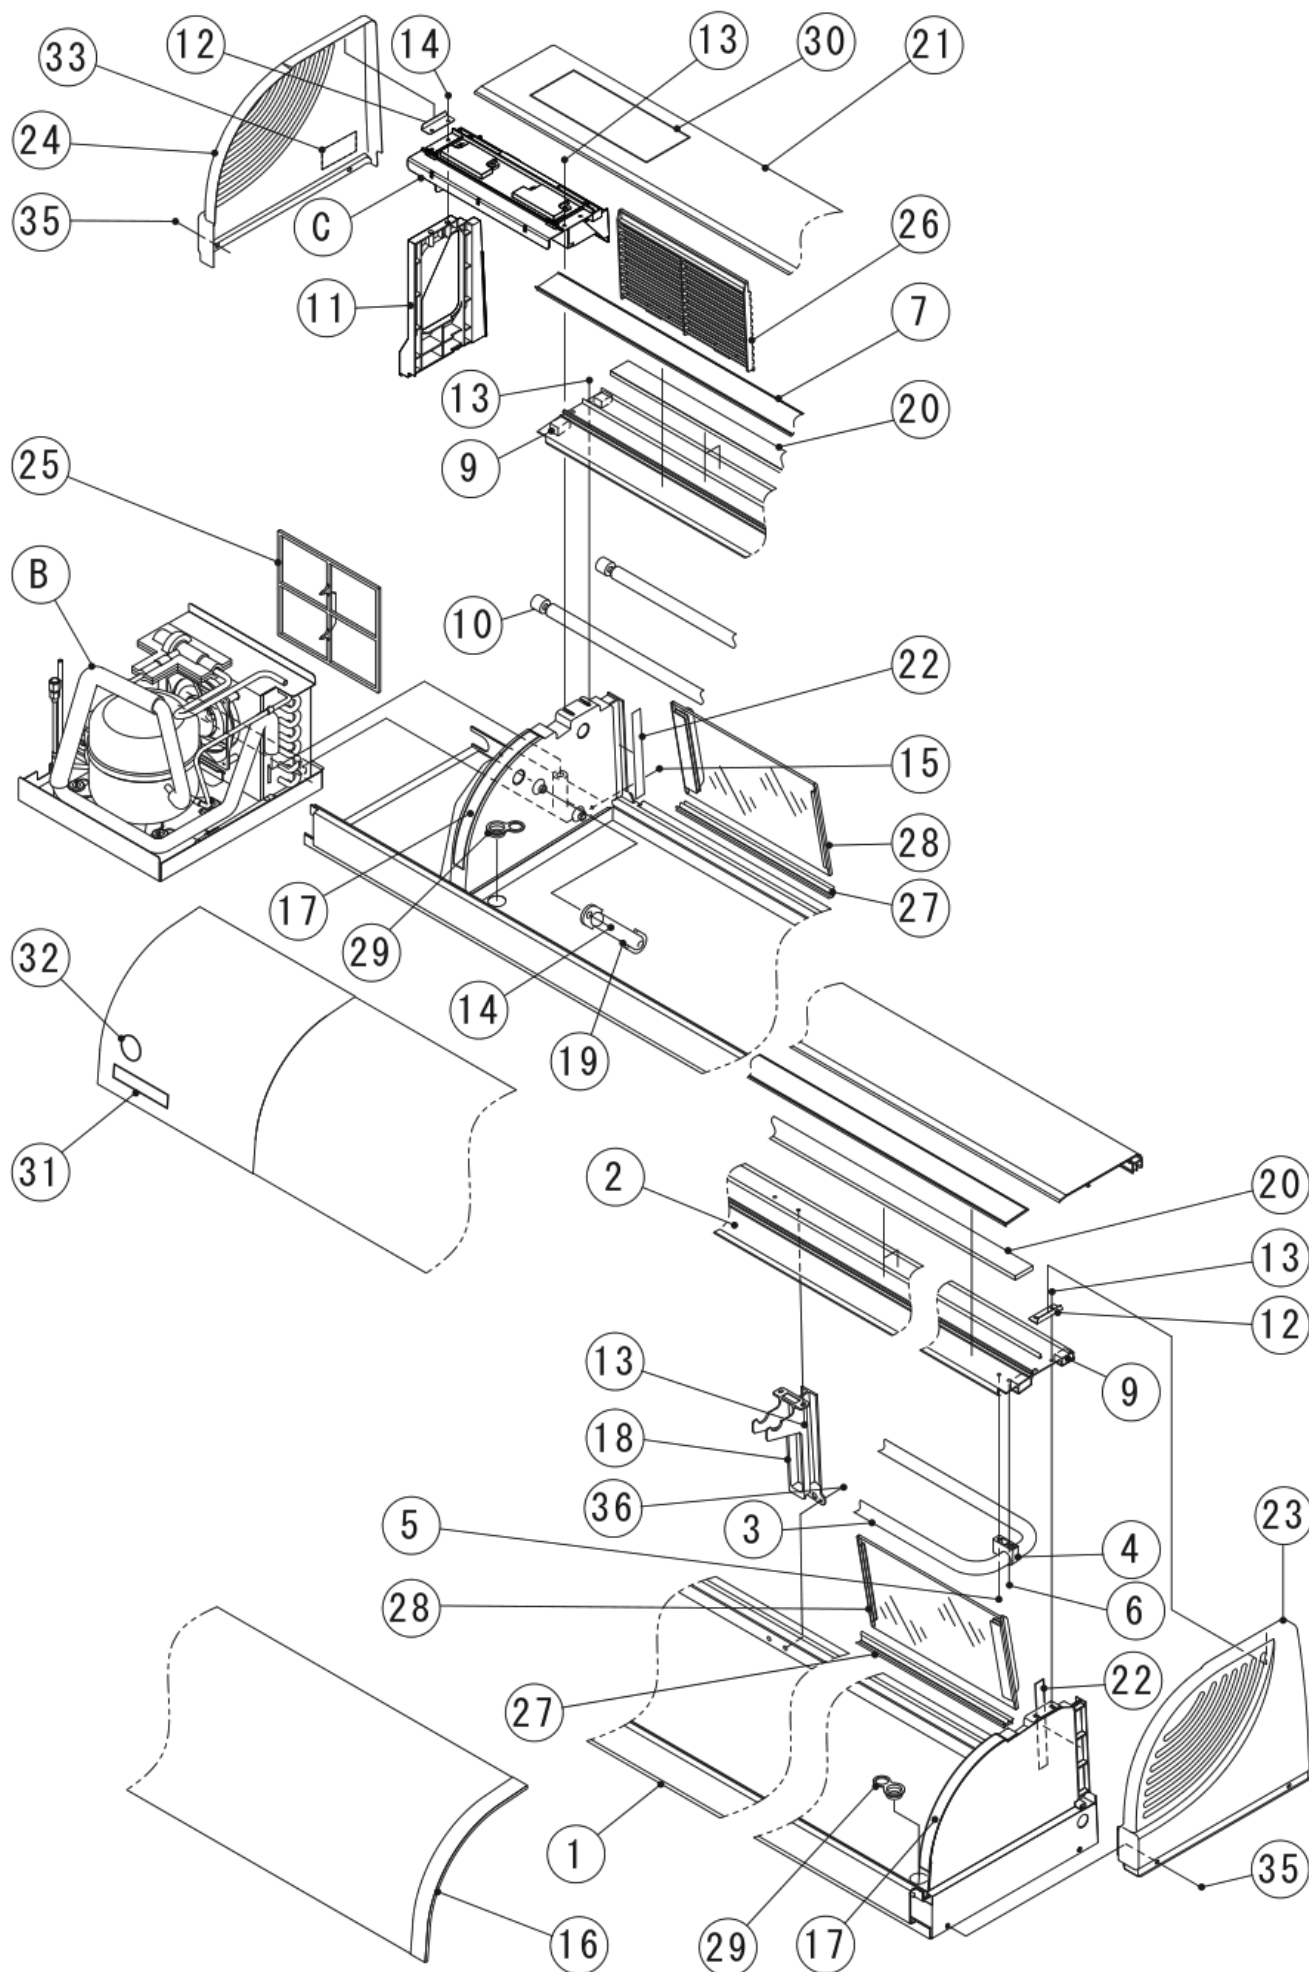

HA


MODEL: HNC-120BA-L/R-SL HNC-150BA-L/R-SL HNC-180BA-L/R-SL HNC-210BA-L/R-SL		TITLE: A.GENERAL AY					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				G-0			
B	REFRIGERATION AY - L	(120)(150)	1R3586A02	1			
		(180)(210)	1R3586A03	1			
	REFRIGERATION AY - R	(120)(150)	1R3587A02	1			
		(180)(210)	1R3587A03	1			
C	ELB BRACKET AY - L	(120)(150)	2X3011A01	1			
		(180)(210)	2X3011A02	1			
	ELB BRACKET AY - R	(120)(150)	2X3012A01	1			
		(180)(210)	2X3012A02	1			
D	ACCESSORIES	(120)	A03422-01	1			
		(150)	A03423-01	1			
		(180)	A03424-01	1			
		(210)	A03425-01	1			
1	BASE AY - 12L	(120BA-L)	1H5879G01	1			
	BASE AY - 12R	(120BA-R)	1H5880G01	1			
	BASE AY - 15L	(150BA-L)	1H5881G01	1			
	BASE AY - 15R	(150BA-R)	1H5882G01	1			
	BASE AY - 18L	(180BA-L)	1H5883G01	1			
	BASE AY - 18R	(180BA-R)	1H5884G01	1			
	BASE AY - 21L	(210BA-L)	1H5885G01	1			
	BASE AY - 21R	(210BA-R)	1H5886G01	1			
2	TOP FRAME (L) - 12	(120BA-L) (includes LED)	3Z1331G01	1			
	TOP FRAME (R) - 12	(120BA-R) (includes LED)	3Z1332G01	1			
	TOP FRAME (L) - 15	(150BA-L) (includes LED)	3Z1333G01	1			
	TOP FRAME (R) - 15	(150BA-R) (includes LED)	3Z1334G01	1			
	TOP FRAME (L) - 18	(180BA-L) (includes LED)	3Z1335G01	1			
	TOP FRAME (R) - 18	(180BA-R) (includes LED)	3Z1336G01	1			
	TOP FRAME (L) - 21	(210BA-L) (includes LED)	3Z1337G01	1			
	TOP FRAME (R) - 21	(210BA-R) (includes LED)	3Z1338G01	1			

HA

MODEL: HNC-120BA-L/R-SL HNC-150BA-L/R-SL HNC-180BA-L/R-SL HNC-210BA-L/R-SL								TITLE: A.GENERAL AY			
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER							
				G-0							
3	PIPE UP/EVAP12	(120)	P02942-02	1							
	PIPE UP/EVAP15	(150)	P02942-03	1							
	PIPE UP/EVAP18	(180)	P02942-04	1							
	PIPE UP/EVAP21	(210)	P02942-05	1							
4	HOLDER ASSY		4R2804A01	1							
5	TRUSS HEAD TAPPING SCREW T2		FT20430M0	1							
6	TRUSS HEAD TAPPING SCREW T2		FT20410M0	1							
7	TOP GASKET - 12	(120)	3S1630P01	1							
	TOP GASKET - 15	(150)	3S1630P02	1							
	TOP GASKET - 18	(180)	3S1630P03	1							
	TOP GASKET - 21	(210)	3S1630P04	1							
9	INSULATION - TOP FRAME		4R5131P01	4							
10	SEAL C/EVAP		4R2368Z04	2							
11	SIDE FRAME (L)	(L)	2R4504P02	1							
	SIDE FRAME (R)	(R)	2R4504P01	1							
12	HOOK		4R5121M01	2							
13	TRUSS HEAD TAPPING SCREW T2	(120)	FT20410M0	6							
		(150,180,210)	FT20410M0	8							
14	TRUSS HEAD TAPPING SCREW T1		FT10416M0	4							
15	TAPPING SCREW-BLACK		433954-01	2							
16	FRONT GLASS - 12	(120)	P01641-02	1							
	FRONT GLASS - 15	(150)	P01641-03	1							
	FRONT GLASS - 18	(180)	P01641-04	1							
	FRONT GLASS - 21	(210)	P01641-05	1							
17	SOFT SEAL (A)		4R5133P01	2							
18	CENTER FRAME AY	(150,180,210)	2R4566G01	1							
19	THERMOMETER		461083-01	1							

HA

MODEL: HNC-120BA-L/R-SL HNC-150BA-L/R-SL HNC-180BA-L/R-SL HNC-210BA-L/R-SL								TITLE: A.GENERAL AY			
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER							
				G-0							
20	INSULATION (B)	(120)	4R5132P02	2							
	INSULATION (C)	(150)	4R5132P03	2							
	INSULATION (D)	(180)	4R5132P04	4							
	INSULATION (E)	(210)	4R5132P05	4							
21	SUS TOP COVER - 12	(120)	2R4597G01	1							
	SUS TOP COVER - 15	(150)	2R4578G01	1							
	SUS TOP COVER - 18	(180)	2R4587G01	1							
	SUS TOP COVER - 21	(210)	2R4565G01	1							
22	CUSHION-SIDE PANEL		4R5123R01	2							
23	SIDE COVER R AY	(L)	3S1787G01	1							
		(R)	3S1783G04	1							
24	SIDE COVER L AY	(L)	3S1788G04	1							
		(R)	3S1781G01	1							
25	AIR FILTER		3S1695G01	1							
26	LOUVER-UNIT		2R4506P01	1							
27	SLIDER/12	(120)	4R2254-02	1							
	SLIDER/15	(150)	4R2254-03	2							
	SLIDER/18	(180)	4R2254-04	2							
	SLIDER/21	(210)	4R2254-05	2							
28	SLIDING DOOR	(120)	3R5019G06	2							
		(150)	3R5019G07	4							
		(180)	3R5019G08	4							
		(210)	3R5019G09	4							
29	CAP-DRAIN		4R2260-01	2							
30	MAINTENANCE LABEL		257431L01	1							
31	NAME PLATE (S)		431136-01	1							
32	CARACTER LABEL-PENGUIN	(L)	448818-02	1							
		(R)	448818-01	1							
33	WIRING LABEL		3Y9818L01	1							
35	TRUSS HEAD TAPPING SCREW T2		FT20408M0	4							
36	SCREW	(150,180,210)	4Y1683-05	2							

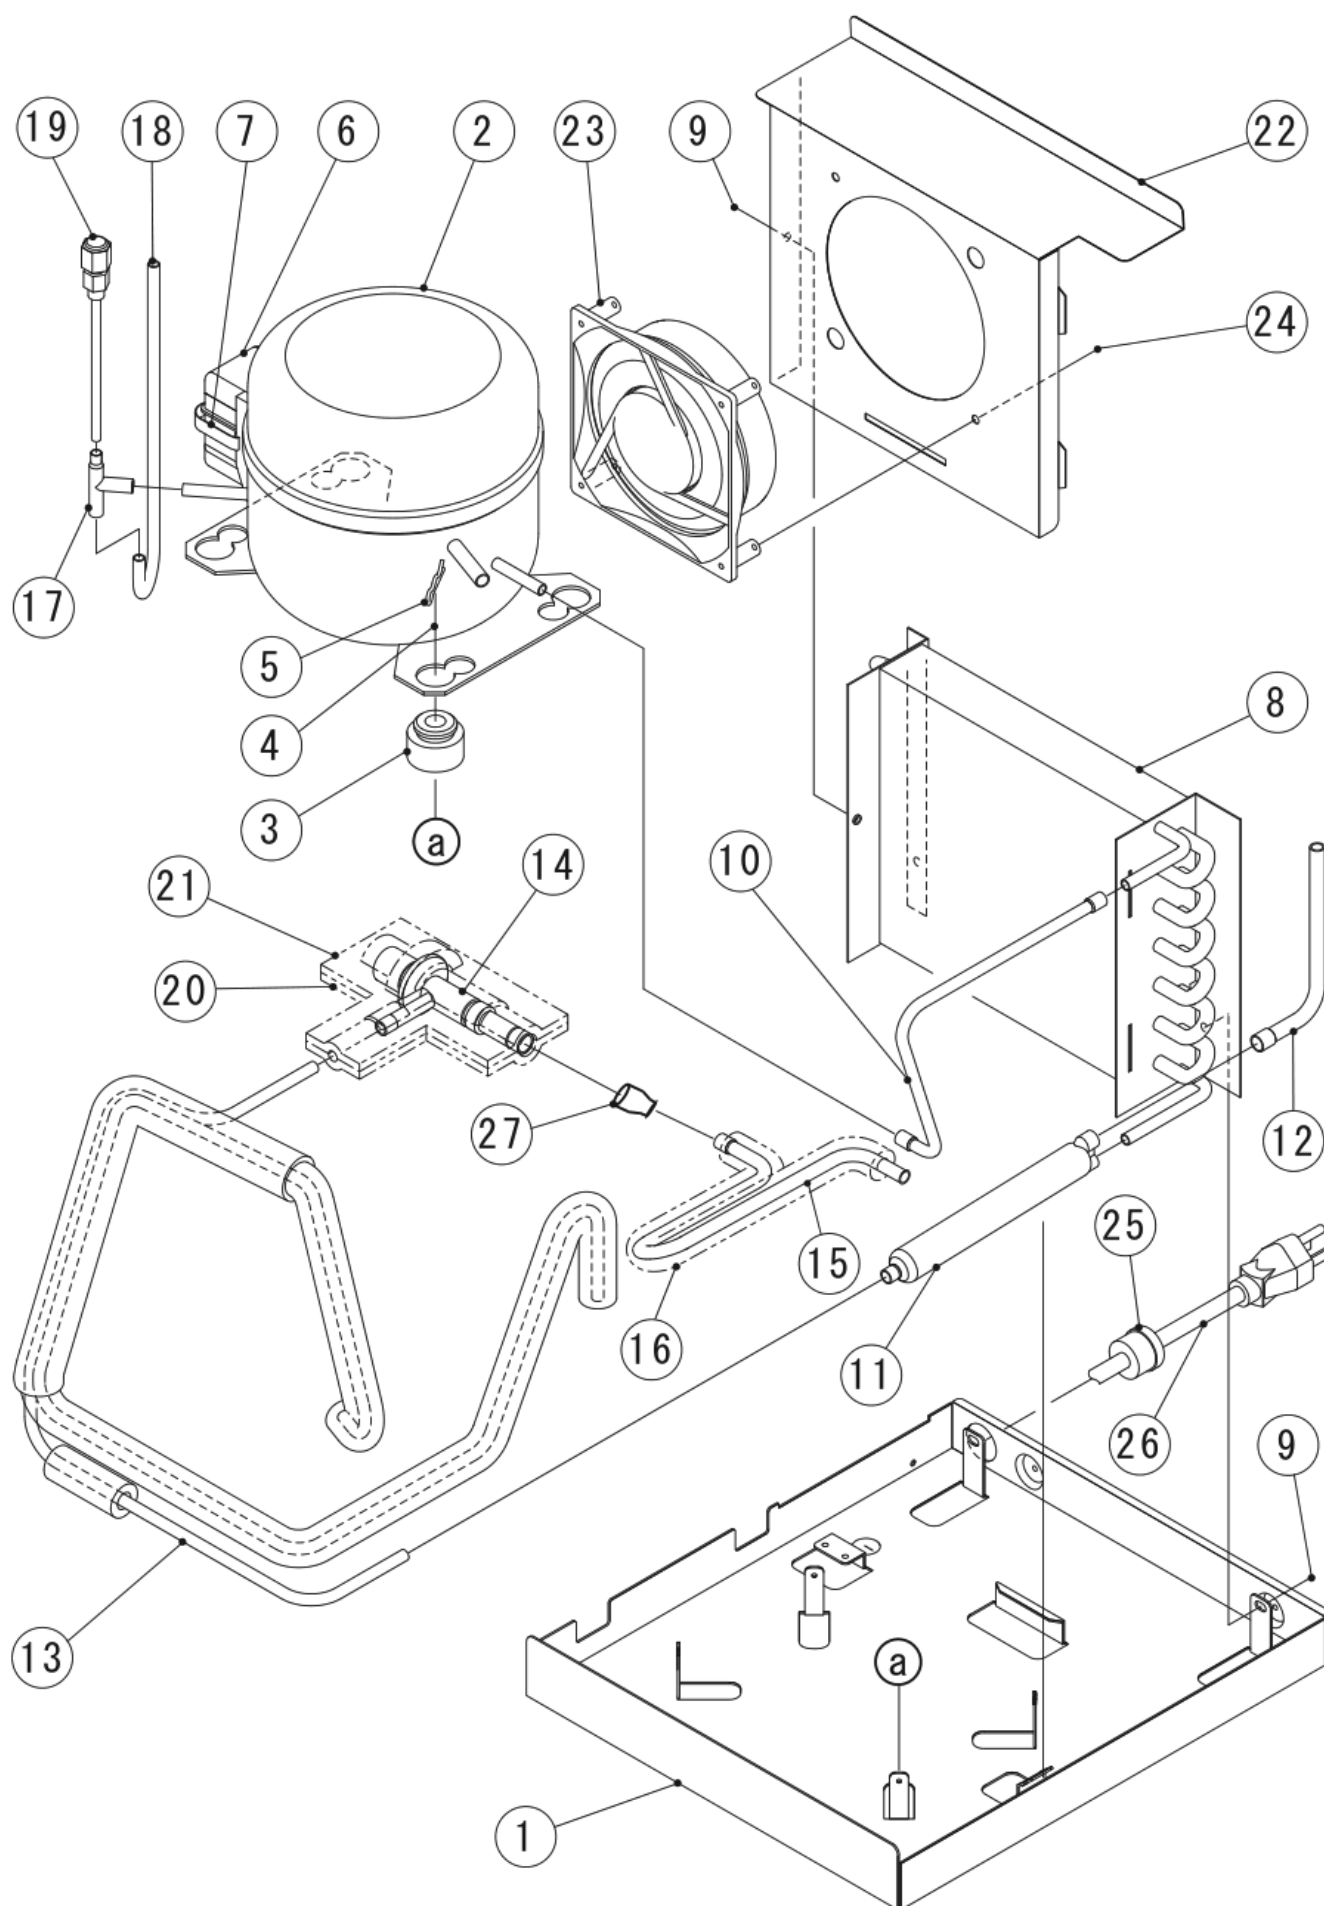

HA

MODEL: HNC-120BA-L/R-SL HNC-150BA-L/R-SL HNC-180BA-L/R-SL HNC-210BA-L/R-SL				TITLE: B.REFRIGERATION AY			
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				G-0			
1	BASE/UNIT	(L)	2R6594M04	1			
		(R)	2R6594M03	1			
2	COMPRESSOR	(120)(150) FL0528 - PB	P04220-01	1			
		(180)(210) FL0739 - PJ	P04221-01	1			
3	RUBBER GROMMET		P02013-01	4			
4	FLAT WASHER		FWPL10S0	2			
5	SNAP PIN		715S-0010	2			
6	TERMINAL COVER		451040-01	1			
7	COVER BAND		451041-01	1			
8	CONDENSER		P01558-01	1			
9	TRUSS HEAD TAPPING SCREW (S-TITE)		FTS0408M0	3			
10	COPPER TUBE A/HI	(L)	4R6329M01	1			
		(R)	4R6117M01	1			
11	DRIER	DY-15QHD-9	458772-01	1			
12	COPPER TUBE (K)		4R5252M02	1			
13	HEAT EXCHANGER L HEAT EXCHANGER R	(L)	2R7137G01	1			
		(R)	2R7141G01	1			
14	EXPANSION VALVE	HYP2-5QHD-5	447283-04	1			
15	COPPER TUBE -EVAPORATOR	(L)	3S4055M01	1			
		(R)	3S4055M02	1			
16	INSULATION TUBE	(400mm)	3S3791P04	1			
17	TEE		420041-21	1			
18	COPPER TUBE - PROCESS	(L)	4R6121M01	1			
		(R)	4R6120M01	1			
19	ACCESS VALUE		455119-01	1			
20	COVER A/EXPV		321949-07	1			
21	COVER B/EXPV		321949-08	1			
22	SHROUD	(L)	3S1772M02	1			
		(R)	3S1772M01	1			
23	FAN MOTOR	11938MB-A1M-SA-01	P03371-01	1			
24	TRUSS HEAD TAPPING SCREW T2		FT20410M0	2			


HA

MODEL: HNC-120BA-L/R-SL HNC-150BA-L/R-SL HNC-180BA-L/R-SL HNC-210BA-L/R-SL				TITLE: B.REFRIGERATION AY			
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				G-0			
25	BUSHING	SR-7K-2	420472-02	1			
26	POWER SUPPLY CORD/ASSY		4R5126A01	1			
27	REDUCER		420915-11	1			

HNC-120BA-L/R-SL
HNC-150BA-L/R-SL
HNC-180BA-L/R-SL
HNC-210BA-L/R-SL

C. ELB BRACKET AY

(G-0) and later

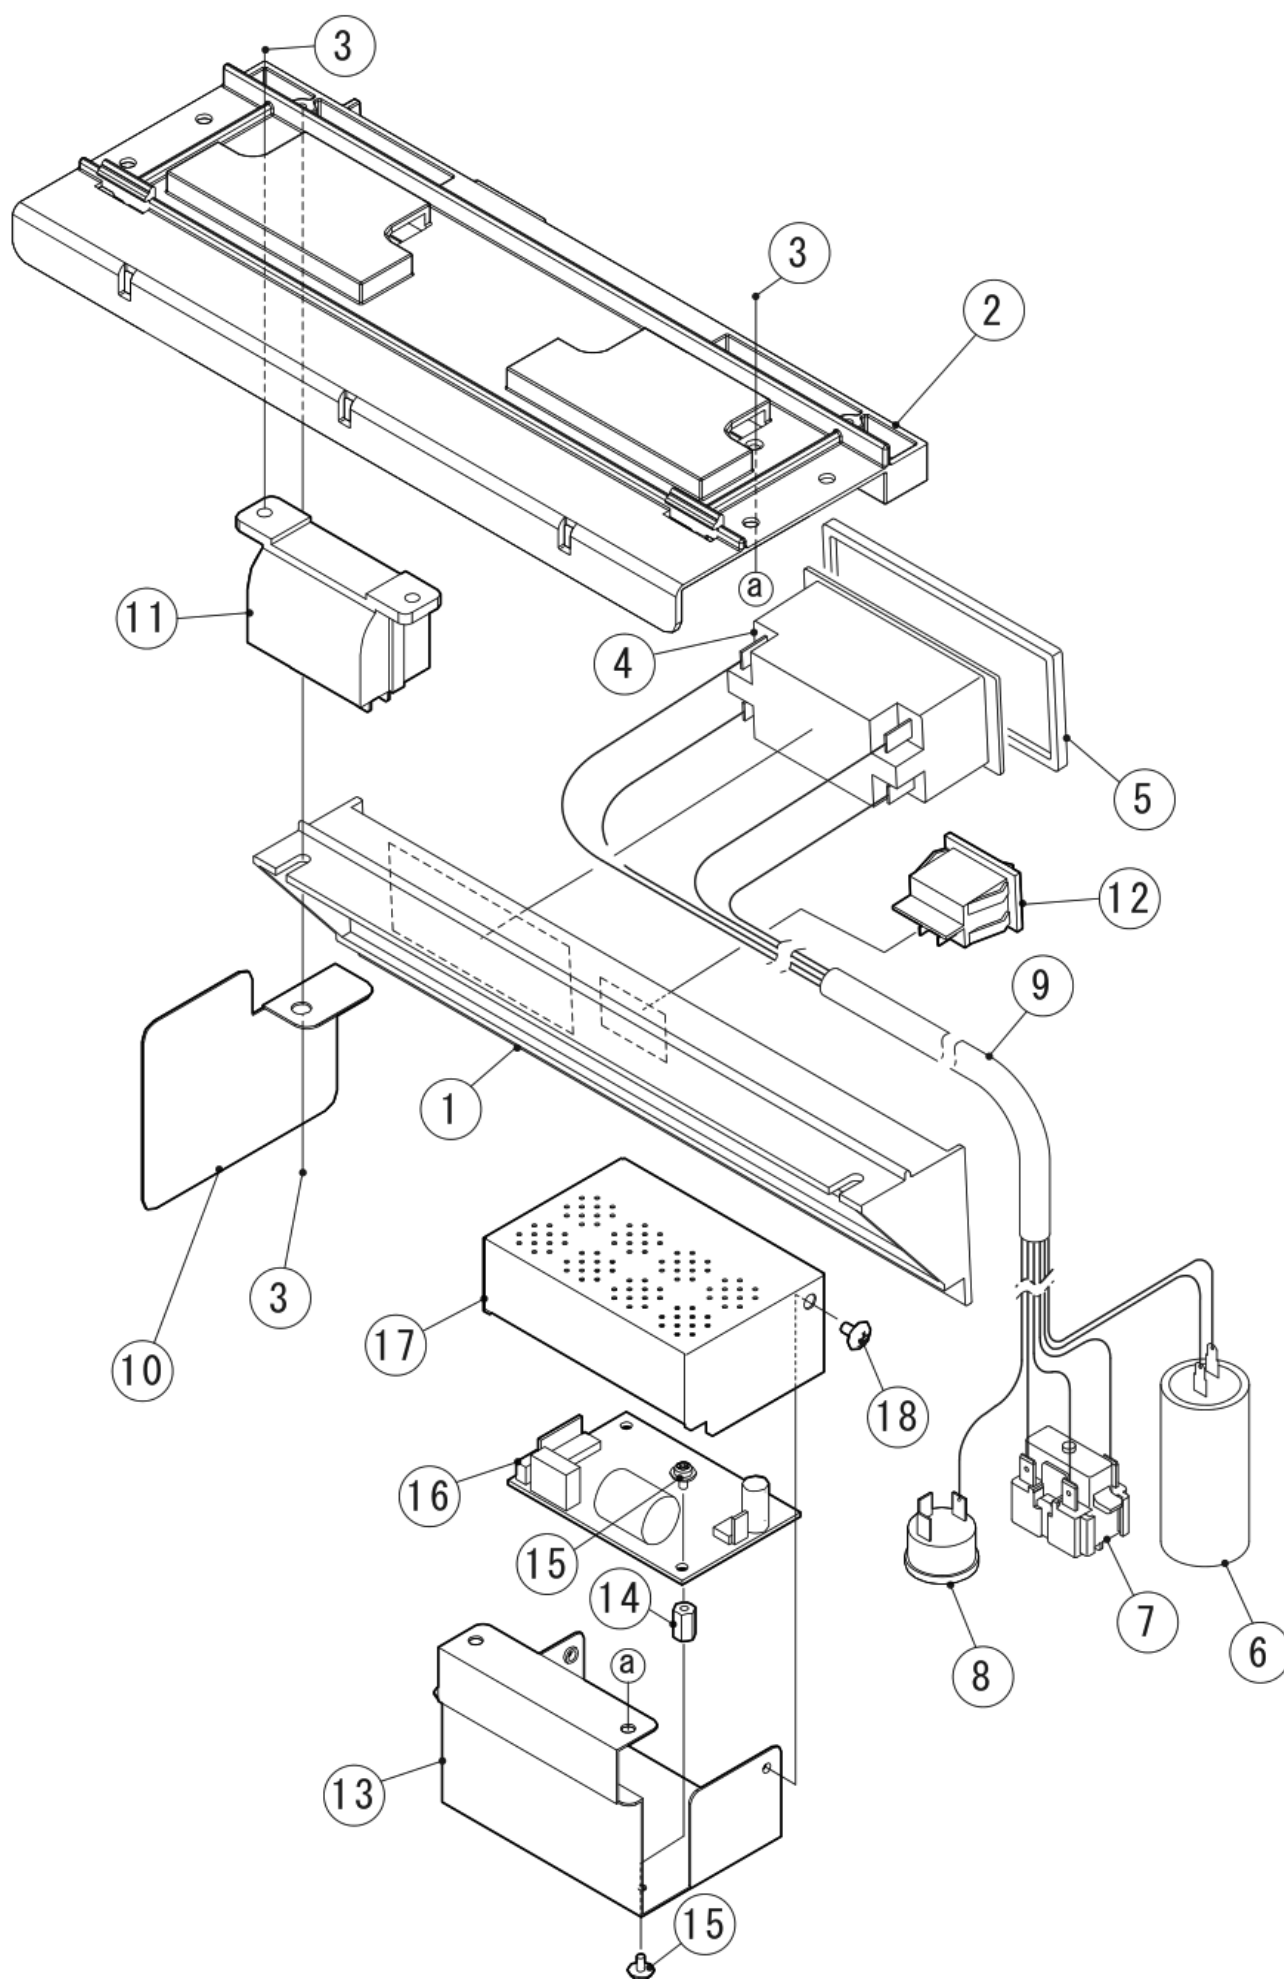


HA

MODEL: HNC-120BA-L/R-SL HNC-150BA-L/R-SL HNC-180BA-L/R-SL HNC-210BA-L/R-SL							
				TITLE: C.ELB BRACKET AY			
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				G-0			
1	ELB BRACKET	(L)	2R4479P06	1			
		(R)	2R4479P05	1			
2	TOP FRAME - UNIT		2X2919P01	1			
3	TRUSS HEAD TAPPING SCREW T1		FT10416M0	6			
4	LEAK BREAKER		461853-01	1			
5	COVER - ELB		461854-01	1			
6	START CAPACITOR		464579-01	1			
7	STARTER		P02960-01	1			
8	MOTOR PROTECTOR	(120)(150) 1.4C36C1	P04222-01	1			
		(180)(210) 1.8C36C3	P04416-01	1			
10	BARRIER (L)	(L)	4Y9521M01	1			
	BARRIER (R)	(R)	4Y9521M02	1			
11	RUN CAPACITOR		P03955-01	1			
12	ROCKER SWITCH		462161-03	1			
13	BRACKET - SR		4Y9701M01	1			
14	SUPPORT		428599-01	2			
15	PAN HEAD SCREW SW		FSK0306F0	4			
16	SWITCHING REGULATOR		P04326-01	1			
17	COVER - SR		3Y9911M01	1			
18	TRUSS HEAD SCREW		FST0406F0	2			

HNC-120BA-L/R-SL
HNC-150BA-L/R-SL
HNC-180BA-L/R-SL
HNC-210BA-L/R-SL

D. ACCESSORIES

(G-0) and later

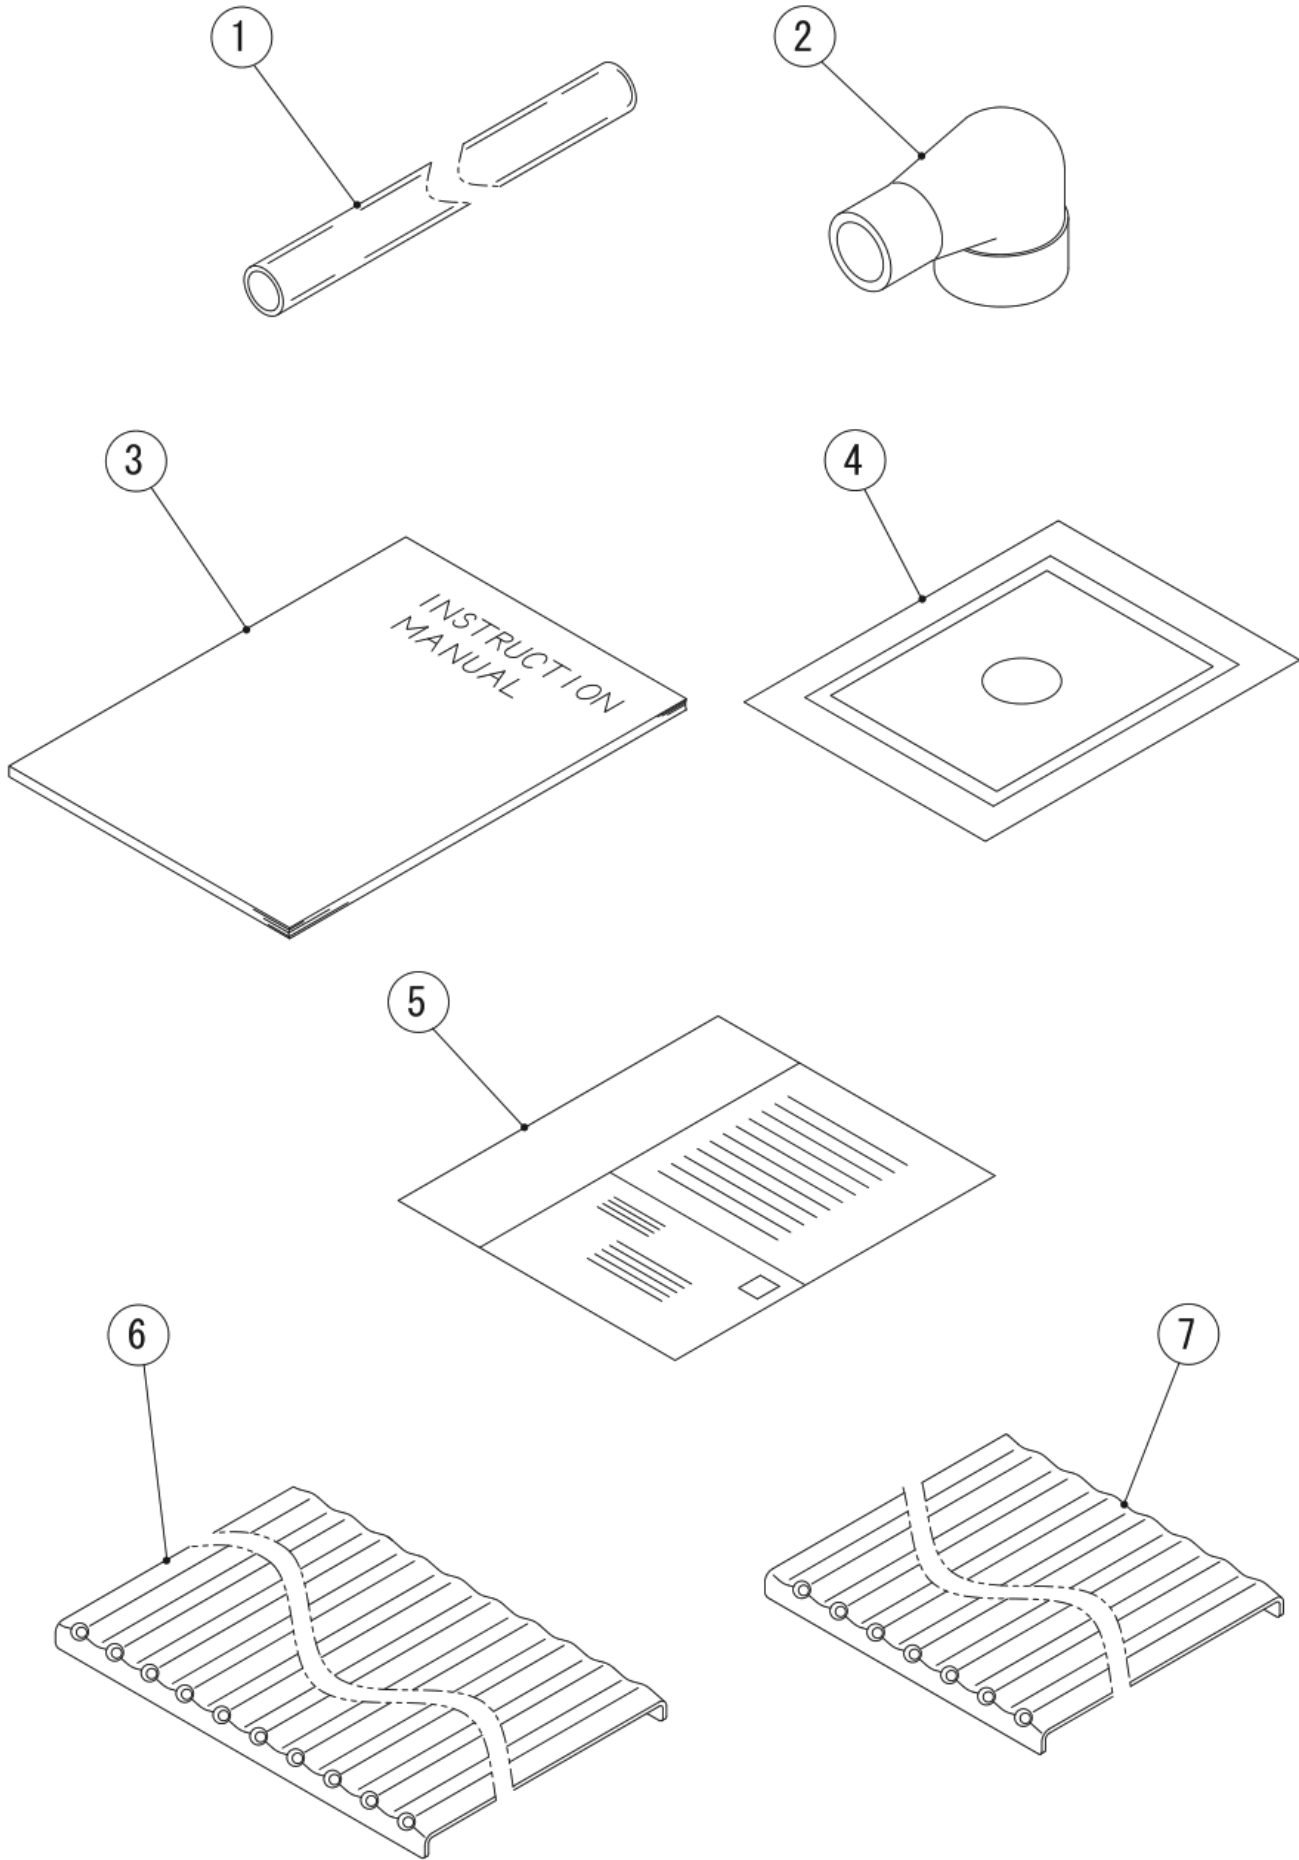

HA

MODEL: HNC-120BA-L/R-SL HNC-150BA-L/R-SL HNC-180BA-L/R-SL HNC-210BA-L/R-SL				TITLE: D.ACCESSORIES AY			
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				G-0			
1	PVC HOSE	(1500mm)	HA1519H15	1			
2	ELBOW		3R5082-01	2			
3	INSTRUCTION MANUAL		L1S086101	1			
4	CERTIFICATE - WARRNTY		209760-01	1			
5	REGISTRATION CARD		2A2894-01	1			
6	FOOD MAT A	(120)	2R1393-03	2			
		(150)	2R1393-03	3			
		(180)	2R1393-03	4			
		(210)	2R1393-03	5			
7	FOOD MAT B		2R1393-04	1			