Hoshizaki America, Inc.

Dishwasher

Models
JWE-2400CUA-L-25B
JWE-2400CUA-R-25B

"A Superior Degree of Reliability"

www.hoshizaki.com

PARTS LIST

Number: J002-3446
Issued: 3 -1 - 2011
Revised: 10-26-2012

Auxiliary Codes

JWE-2400CUA-L-25B
JWE-2400CUA-R-25B

A-1	March	2011
B-0	January	2012
B-1	April	2012

Auxiliary Code Breakdown

The auxiliary code is the first two characters in the serial number. The first character indicates the year. Years progress or regress in alphabetical order. The series runs from "A" through "V" and the letters "I" and "O" are skipped. The second character indicates significant part changes within a year. Base is "0" and this number advances for each change. In cases where there is a letter in parentheses, this designates the month. This is the last character in the serial number. The series runs from "(A)" through "(M)" and the letter "(I)" is skipped. This designation is only included when identifying a parts change within an auxiliary code.

Note About Ordering Parts

Most assemblies cannot be ordered as complete units; parts in the assemblies generally must be ordered separately.

JWE-2400CUA-L-25B

A. DISHWASHER ASSY

(A-1) and later

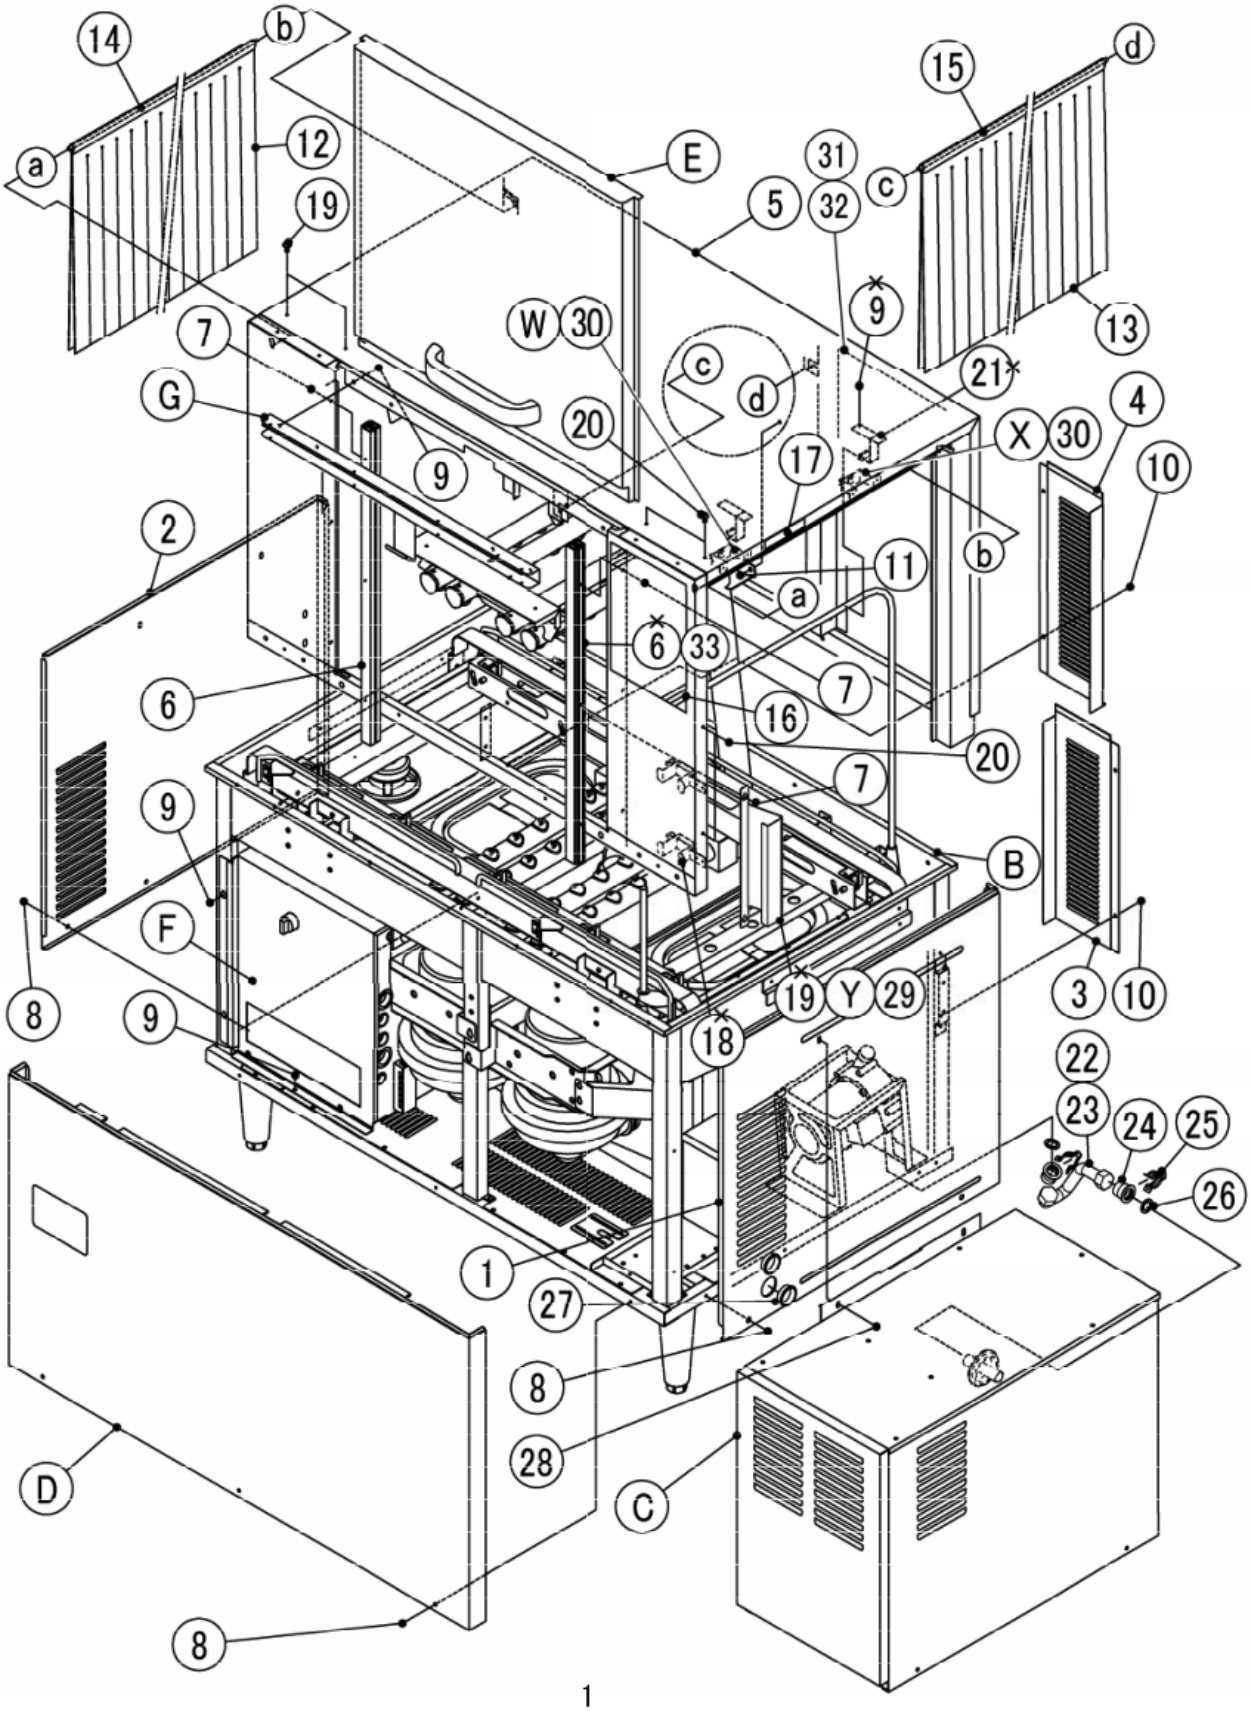

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **A. DISHWASHER ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
B	TANK ASSY	-	1H4641007	1	1		
C	BOOSTER ASSY	-	1H4673A01	1	1		
D	FRONT PANEL ASSY	-	2H9952A01	1	1		
E	SERVICE PANEL ASSY	-	2H8185A02	1	1		
F	CONTROL BOX ASSY	-	1H4674A01	1	1		
G	HOOK ASSY	-	3Y2348A01	1	1		
W	RINSE BRACKET A - ASSY		3Y6625A01		1		
X	RINSE BRACKET B - ASSY		3Y6626A01		1		
Y	RINSE BRACKET C - ASSY		3Y6629A01		1		
Z	ACCESSORIES	-	A02280-01	1	1		
1	SIDE PANEL (R-L)	S.S	3Y5367G01	1	1		
2	SIDE PANEL (L-L)	S.S	3Y5342A01	1	1		
3	REAR PANEL (R-L)	S.S	3Y5052M01	1	1		
4	REAR PANEL (L-L)	S.S	3Y5379M01	1	1		
5	TOP PANEL (L)	S.S	1H4675G01	1	-		
			1H5149G01		1		
6	RAIL	PVC	3Y2211P01	2	1		
7	TRUSS HEAD TAPPING SCREW	S.S	FT20408M0	6	6		
8	TRUSS HEAD MACHINE SCREW	S.S	P01647-01	7	7		
9	HEX HEAD BOLT W/ WASHERS	S.S	FBK0408S0	13	9		
10	FLANGE BOLT	S.S	FTF0408S0	4	4		
11	HEX HEAD BOLT W/ WASHERS	S.S	FBK0512S0	24	24		
12	CURTAIN (S)	TPE	2X0869P01	2	2		
13	CURTAIN (L)	TPE	2X0870P01	1	1		
14	SHAFT-CURTAIN	S.S	4Y4129M01	2	2		
15	SHAFT-CURTAIN	S.S	4Y4129M02	1	1		
16	MAINTENANCE LABEL	-	373615L01	1	1		
17	WARNING LABEL	-	474626L01	2	2		
18	SUPPORT-RINSE BRACKET	S.S	4Y4497M02	2	-		
19	GUARD-RINSE (L)	S.S	3Y5377M01	1	-		
20	HEX HEAD BOLT W/ WASHERS	S.S	FBK0412S0	2	2		
21	BRACKET - RINSE PIPE	S.S	4Y6884G01	2	-		

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **A. DISHWASHER ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
22	FLEXIBLE PIPE	S.S	442363-12	1	1		
23	PACKING	-	442363F01	2	2		
24	BUSH - BOOSTER (OUT)	S.S	4Y6911M01	2	2		
25	QUICK FASTENER	16B-R3	456912-07	2	2		
26	U-PACKING	EPDM	4Y3371-03	2	2		
27	BUSHING	SB-1500-21	420470-06	2	2		
28	HEX HEAD BOLT W/ WASHERS	S.S	FBK0510S0	2	2		
29	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0408S1		4		
30	SCREW		4Y1319-05		4		
31	GUARD - REAR		3Y6612M01		1		
32	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0510S1		6		
33	RAIL		3Y6624P01		1		

B. TANK ASSY (1／2)

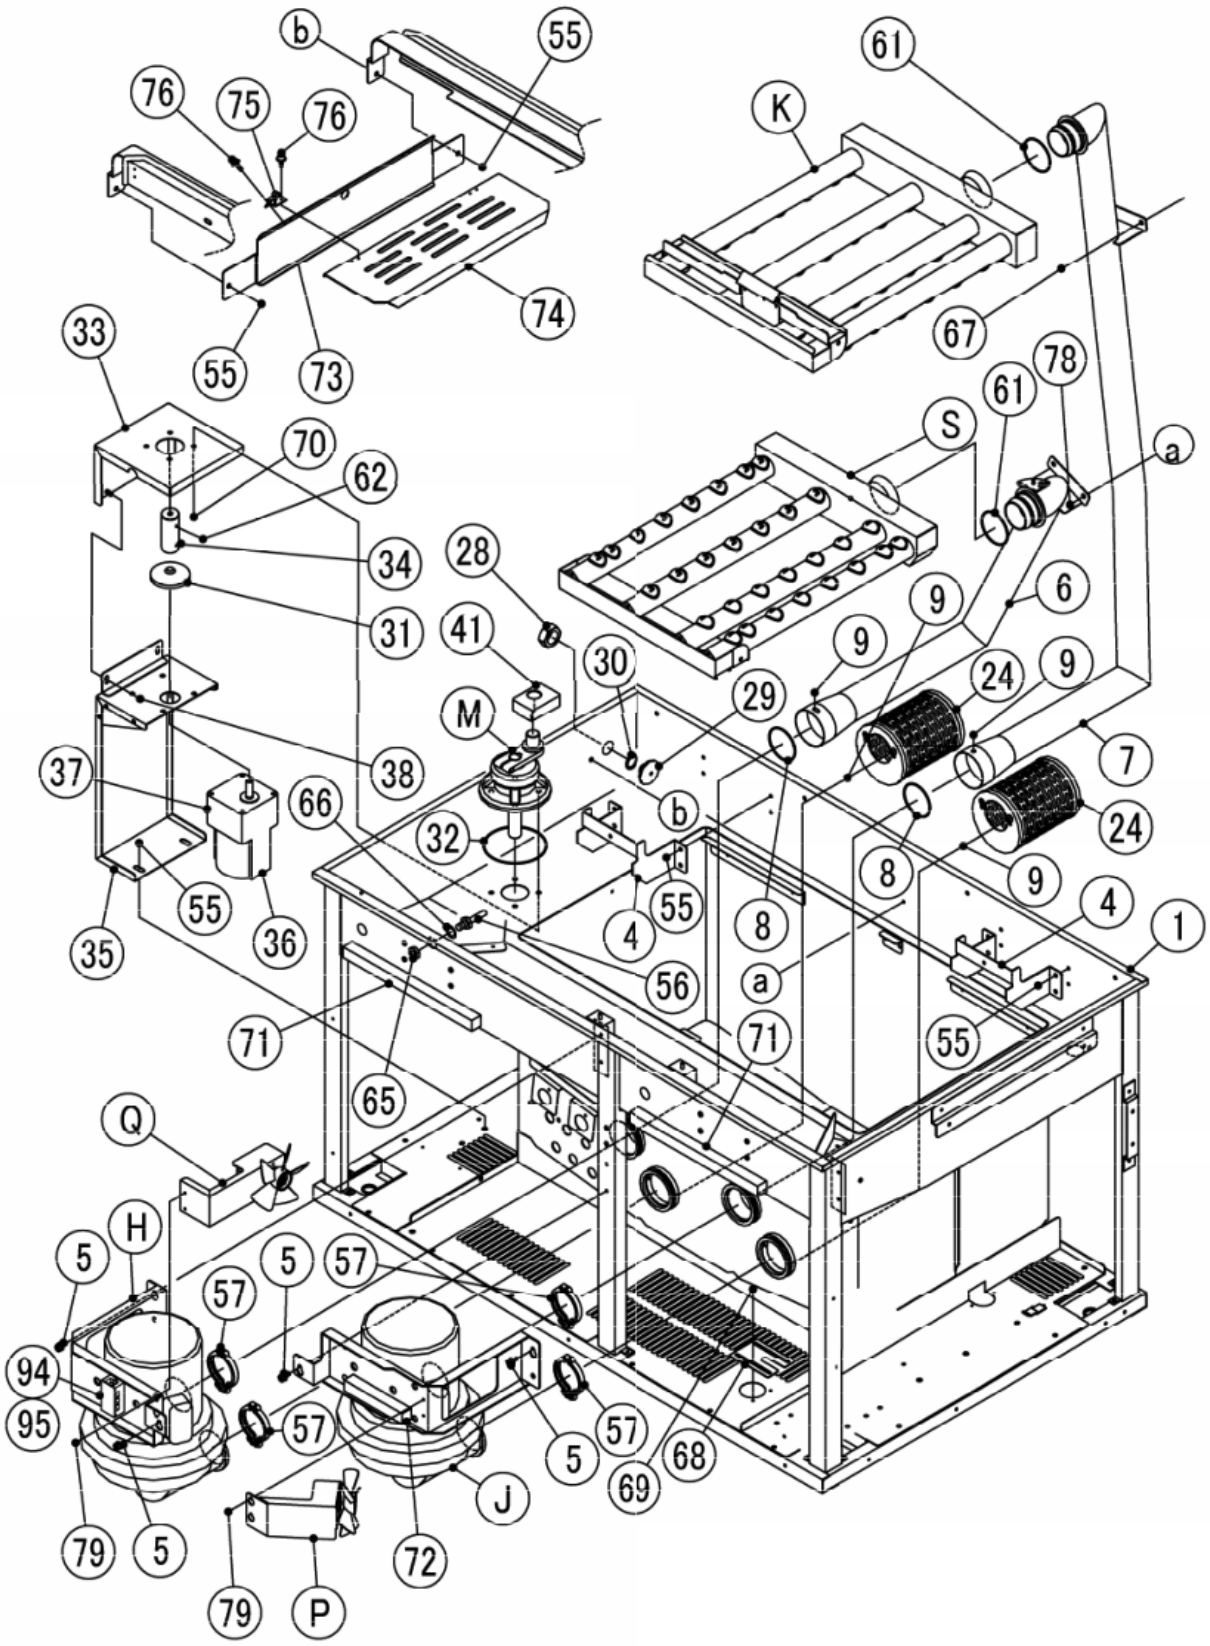

B. TANK ASSY (2/2)

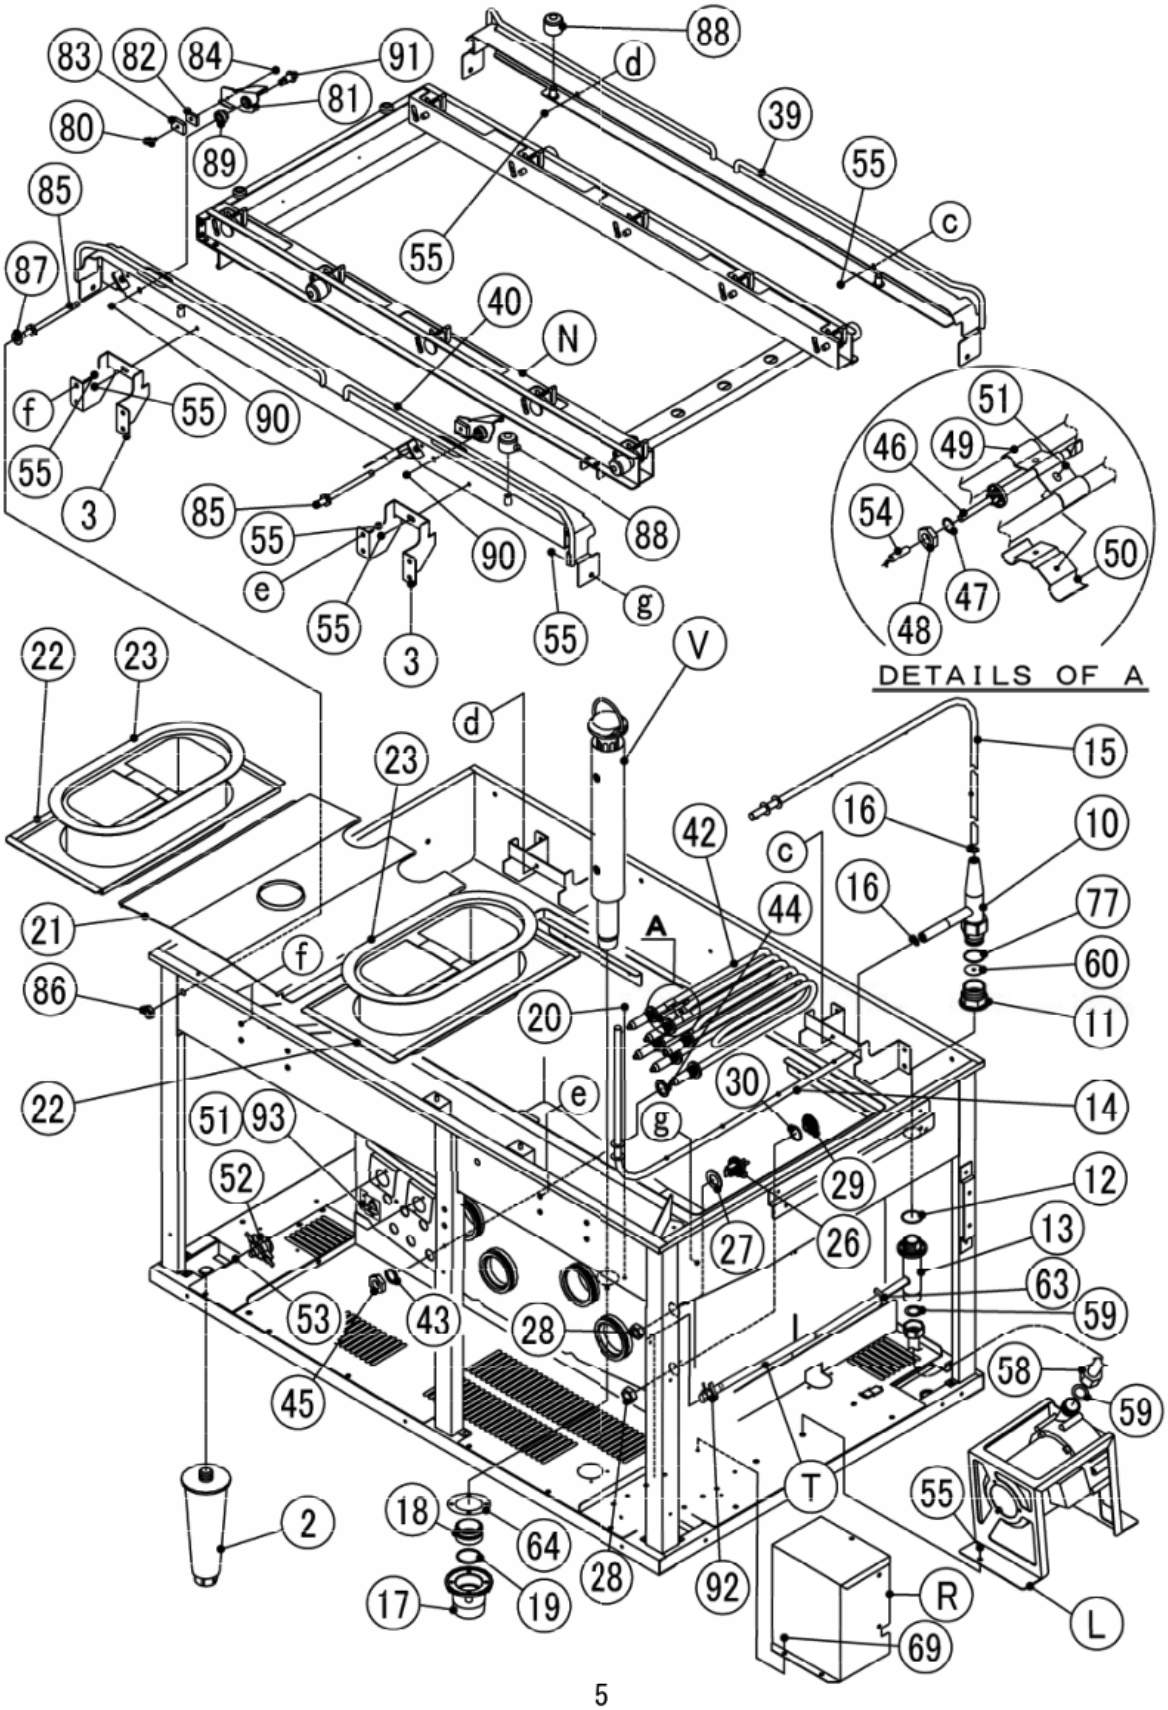

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **B. TANK ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
H	WASH PUMP (B) ASSY	-	3Y2257A02	1	1		
J	WASH PUMP (A) ASSY	-	3Y2256A02	1	1		
K	SPRAY ARM (UP) ASSY	-	3Y2572A02	1	1		
L	RINSE PUMP ASSY	-	3Y5396A01	1	1		
M	CRANK UNIT ASSY	-	2X0331A02	1	1		
N	CONVEYOR RAIL ASSY	-	1H4648A02	1	1		
P	FAN MOTOR ASSY	-	4Y4175A02	1	1		
Q	FAN MOTOR (B) ASSY	-	4Y4242A02	1	1		
R	FAN MOTOR (C) ASSY	-	4Y6603A01	1	1		
S	SPRAY ARM (LO) ASSY	-	3Y2573A02	1	1		
T	HOSE - CLEANSER ASSY	-	4Y4186A02	1	1		
V	OVERFLOW PIPE ASSY		3Y6607A01	1	1		
1	FLUSH TANK (L)	S.S	1H4736G01	1	1		
2	ADJUSTABLE LEG	SD-240HF-D	P01591-01	4	4		
3	BRACKET (B) - RAIL	S.S	4Y6418M02	2	2		
4	BRACKET (A) - RAIL	S.S	4Y6417M02	2	2		
5	HEX HEAD BOLT W/ WASHERS	S.S	FBK0512S1	6	6		
6	WASH PIPE (LO)	S.S	2H8701G02	1	1		
7	WASH PIPE (UP)	S.S	2H8155G02	1	1		
8	O-RING	NBR	7611-G055	2	2		
9	HEX HEAD BOLT W/ WASHERS	S.S	FBK0408S0	6	6		
10	CLEAN PIPE (C)	S.S	3Y2820G01	1	1		
11	JOINT - CLEAN PIPE	S.S	4Y4548M01	1	1		
12	O-RING	NBR	7611-P028	1	1		
13	CLEAN PIPE (B)	S.S	4Y6919G01	1	1		
14	RINSE PIPE (LO)	S.S	3Y2223G01	1	-		
			3Y6568G01		1		
15	RINSE PIPE (UP)	S.S	3Y2225G01	1	-		
			3Y6567G01		1		
16	U-PACKING	EPDM	4Y3371-04	2	2		
17	DRAIN PIPE	S.S	3Y5054M01	1	1		
18	JOINT - OVERFLOW	PE	4Y3176-01	1	1		

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **B. TANK ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
19	O-RING	NBR	7611-G050	1	1		
20	SCREW	S.S	4Y1319-06	4	4		
21	SEPARATOR (A)	S.S	2H8101M02	1	1		
22	SEPARATOR (B)	S.S	3Y2237M02	2	2		
23	TANK FILTER	S.S	3Y0673G02	2	2		
24	PUMP GUARD	S.S	4Y3344G01	2	2		
25	OVERFLOW PIPE	S.S	3Y5804G01	-	-		
26	LEVEL SENSOR		3X4140G01	1	1		
27	PACKING (B) - SENSOR	SI.R	4X5112-01	1	1		
28	NUT	M22	4Y3670-01	3	3		
29	CAP	PPS	4Y3177-01	2	2		
30	O-RING	EPDM	7614-G025	2	2		
31	FRINGER	NBR	4Y6567R01	1	1		
32	O-RING	NBR	7611-P070	1	1		
33	BRACKET (A) - GM	S.S	4Y7052G02	1	1		
34	COUPLING (B)	S.S	4Y7051M01	1	1		
35	BRACKET (J) - GM	S.S	3Y3094G02	1	1		
36	GEARMOTOR	M9MX40G4YG	P01695-01	1	1		
37	GEARHEAD	MX9G60B	P01696-01	1	1		
38	U-NUT	S.S	FNU106S0	2	2		
39	RACK RAIL (B-L)	S.S	3Y4825G02	1	1		
40	RACK RAIL (A-L)	S.S	3Y4824G01	1	1		
41	SLIDE BLOCK	PE	4Y4138P01	1	1		
42	SHEATH HEATER	HU23280D	P01721-01	6	6		
43	WASHER	S.S	P01721F01	12	12		
44	PACKING	SI.R	P01721F02	12	12		
45	NUT	S.S	P01721F03	12	12		
46	THERMISTOR PIPE - WELD	S.S	4Y3183G01	1	1		
47	O-RING	EPDM	7614-P007	1	1		
48	NUT	S.S	FNH106S0	1	1		
49	THERMOSTAT PLATE (UP)	S.S	4Y3164-01	4	4		
50	THERMOSTAT PLATE (LO)	S.S	4Y3163-01	4	4		

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **B. TANK ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
51	PAN HEAD MACHINE SCREW W/ WASHERS	S.S	FSK0305S0	10	10		
52	THERMOSTAT	CR-1	4Y1929-02	4	4		
53	PAN HEAD MACHINE SCREW W/ WASHERS	S.S	FSK0408S0	8	8		
54	THERMISTOR (A) - ASSY	NTFC-51F-H20-2	449758-02	1	1		
55	HEX HEAD BOLT W/ WASHERS	S.S	FBK0612S1	27	27		
56	REED SWITCH	HC10	P00205-01	1	1		
57	BAND - PUMP	S.S	4Y7714A02	4	4		
58	FLEXIBLE PIPE	S.S	442363-13	1	1		
59	PACKING - TUBE		4H9792-01	3	3		
60	SPACER (B) - RINSE PUMP	S.S	4Y4549M02	1	1		
61	O-RING	NBR	7611-P045	2	2		
62	HEX SOCKET SET SCREW (FLAT PO	S.S	FSC0505S0	4	4		
63	HOSE CLAMP	SNP-7	435947-01	1	1		
64	PACKING - JOINT	EPDM	4Y3165-01	1	1		
65	NUT	S.S	P00205F01	1	1		
66	PACKING	SI.R	P00205F02	1	1		
67	HEX HEAD BOLT W/ WASHERS	S.S	FBK0512S0	2	2		
68	SLIDE COVER	S.S	447336-01	1	1		
69	FLANGE BOLT	S.S	FBF0408S0	5	5		
70	HEX HEAD BOLT W/ WASHERS	S.S	FBK0512S1	4	4		
71	CUSHION (A)	PE	4Y4369P01	2	2		
72	CUSHION (B)	PE	4Y4370P01	1	1		
73	COVER (A) - FRAME	S.S	3Y2618M02	1	1		
74	COVER (B) - FRAME	S.S	3Y2619M02	1	1		
75	HINGE	S.S	443721-01	2	2		
76	SCREW	S.S	4Y4752M01	8	8		
77	O-RING	NBR	7611AP022	1	1		
78	HEX HEAD BOLT W/ WASHERS	S.S	FBK0512S0	2	2		
79	HEX HEAD BOLT W/ WASHERS	S.S	FBK0412S1	4	4		
80	SCREW	S.S	4Y1319-06	2	2		
81	SWITCH PLATE (L)	S.S	4Y6424G01	2	2		
82	MAGNET		P00206-01	2	2		

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **B. TANK ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
83	MAGNET BRACKET (C)	S.S	4Y6427M01	2	2		
84	U-NUT	S.S	FNU104S0	2	2		
85	REED SWITCH	HC20	P01709-01	2	2		
86	NUT	S.S	P01709F01	2	2		
87	PACKING	SI.R	P01709F02	2	2		
88	ROLLER - CONVEYOR RAIL	PE	4Y4137P01	4	4		
89	SLEEVE (A) - HOOK	PE	4Y4136P01	2	2		
90	CAPPED U NUT	S.S	FNC108S0	2	2		
91	SHAFT - SWITCH PLATE	S.S	4Y6428M01	2	2		
92	CLAMP	4253	427902-05	1	1		
93	THERMOSTAT	05N-V035-090	P02207-01	1	1		
94	TERMINAL BLOCK	T3052-1-3P-CL1S	P01375-01	1	1		
95	TRUSS HEAD MACHINE SCREW	S.S	FST0410S0	2	2		

C. BOOSTER ASSY

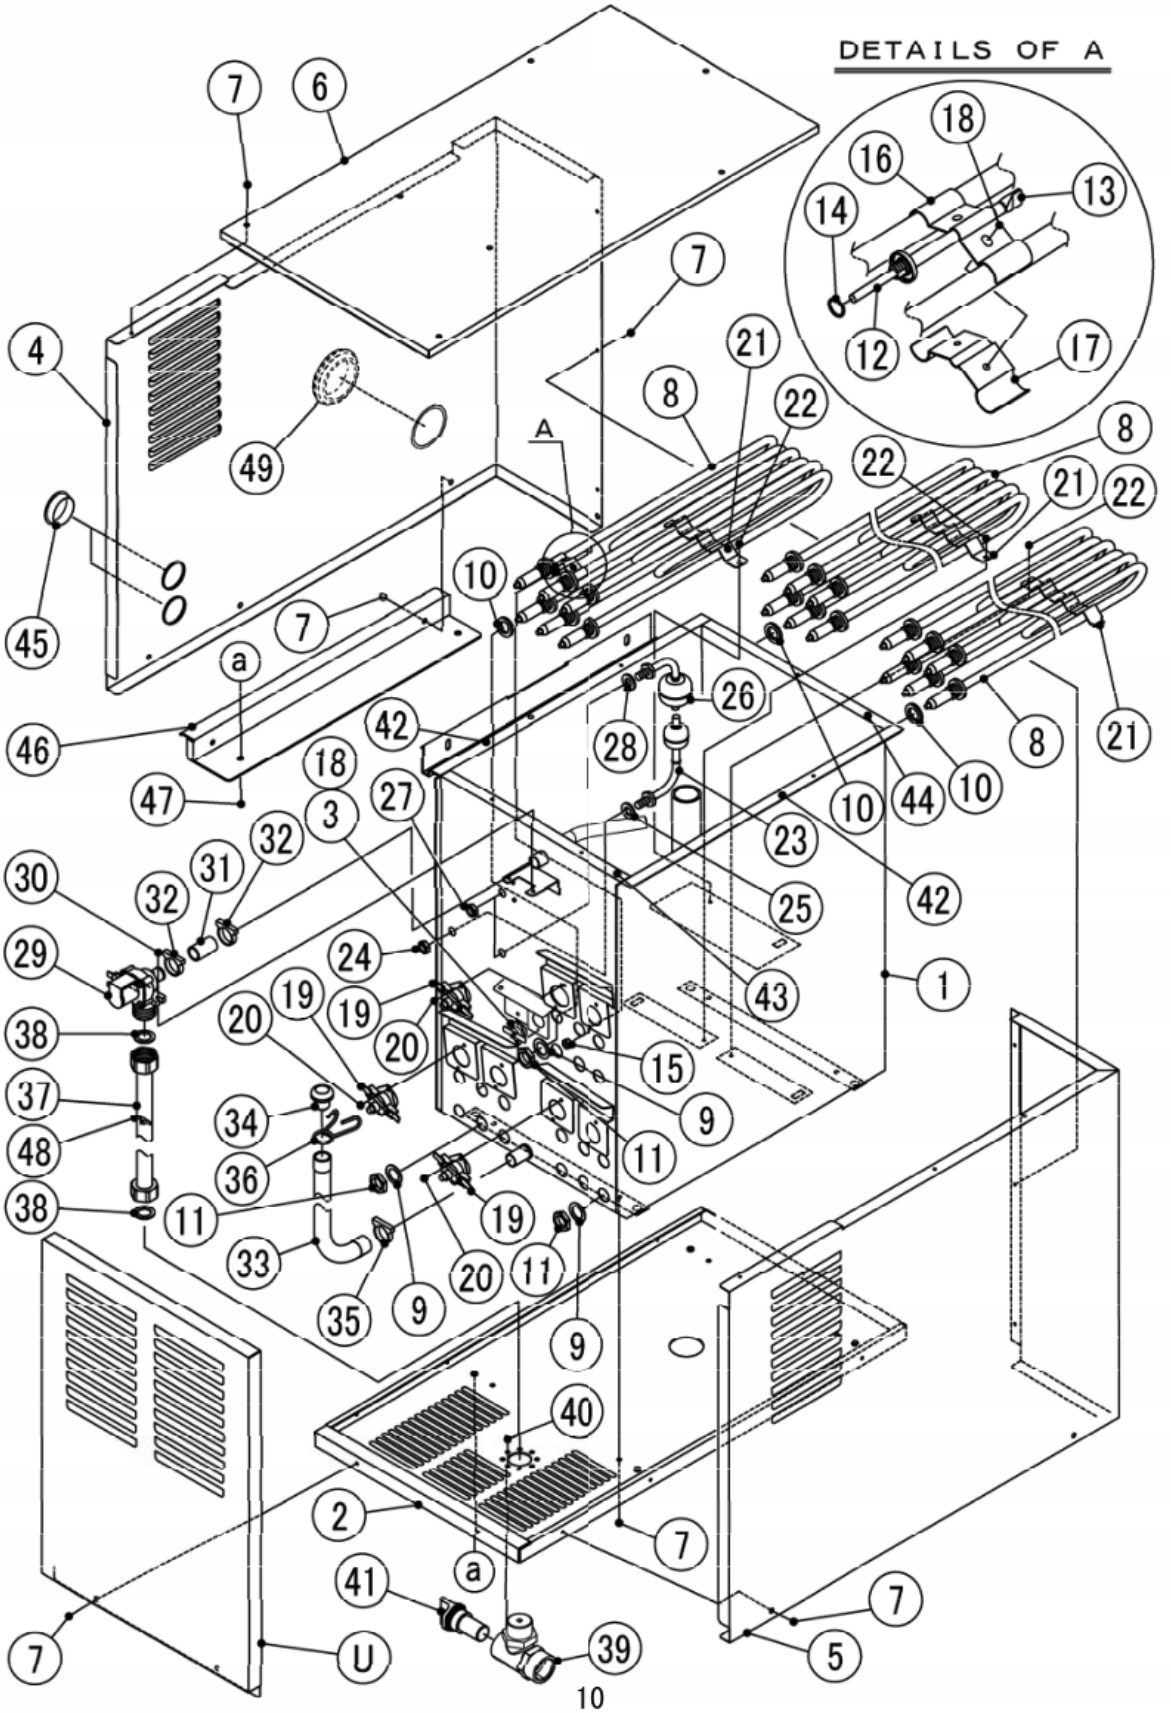

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **C. BOOSTER ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
U	FRONT PANEL - BOOSTER	-	3Y5363A01	1	1		
1	BOOSTER TANK	S.S	3Y5055G01	1	1		
2	BASE - BOOSTER	S.S	3Y5056M01	1	1		
3	THERMOSTAT	05N-V035-090	P02207-01	1	1		
4	SIDE PANEL (R) - BOOSTER	S.S	2H9955M01	1	1		
5	SIDE PANEL (L) - BOOSTER	S.S	2H9956M01	1	1		
6	TOP PANEL - BOOSTER	S.S	3Y5057M01	1	1		
7	TRUSS HEAD MACHINE SCREW	S.S	FST0408S0	19	19		
8	SHEATH HEATER	HV-23280D	P01721-01	9	9		
9	WASHER	S.S	P01721F01	18	18		
10	PACKING	SI.R	P01721F02	18	18		
11	NUT	S.S	P01721F03	18	18		
12	THERMISTOR (C) - ASSY	NTFC-51F-H5-2	P00574-01	1	1		
13	THERMISTOR PIPE - WELD	S.S	4Y3183G01	1	1		
14	O-RING	EPDM	7614-P007	1	1		
15	NUT	S.S	FNH106S0	1	1		
16	THERMOSTAT PLATE (UP)	S.S	4Y3164-01	1	1		
17	THERMOSTAT PLATE (LO)	S.S	4Y3163-01	1	1		
18	PAN HEAD MACHINE SCREW W/ WASHERS	S.S	FSK0305S0	4	4		
19	THERMOSTAT	CR-1	4Y1929-02	6	6		
20	PAN HEAD MACHINE SCREW W/ WASHERS	S.S	FSK0408S0	12	12		
21	BAND - HEATER	S.S	4Y6604M01	3	3		
22	HEX HEAD BOLT W/ WASHERS	S.S	FBK0408S1	3	3		
23	FLOAT SWITCH	OLV-20-E	449401-01	1	1		
24	NUT	S.S	449401F01	1	1		
25	PACKING	SI.R	449401F02	1	1		
26	FLOAT SWITCH	OLV-20-C1	4Y2820-01	2	2		
27	NUT	S.S	4Y2820F01	2	2		
28	PACKING	SI.R	4Y2820F02	2	2		
29	WATER VALVE	J248-076F	456461-01	1	1		
30	TRUSS HEAD MACHINE SCREW	S.S	FST0410S0	2	2		
31	HOSE - WV		4Y3492-01	1	1		

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **C. BOOSTER ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
32	HOSE CLAMP	SNP-14-HSO	P00728-01	2	2		
33	HOSE (B) - RESERVOIR	EPDM	4X4283-01	1	1		
34	CAP (A)	EPDM	4X3337-01	1	1		
35	HOSE CLAMP	SNP-16-HSO	P00728-02	1	1		
36	HOSE BAND	S.S	427443-06	1	1		
37	PIPE - WV	S.S	3Y5058G01	1	1		
38	PACKING - TUBE		4H9792-01	2	2		
39	STRAINER	S.S	3Y3522M01	1	1		
40	FLANGE BOLT (C-TITE)	S.S	FTR0408M0	2	2		
41	FILTER		442086F01	1	1		
42	PACKING (A)	SI.R	4Y6605R01	2	2		
43	PACKING (B)	SI.R	4Y6606R01	1	1		
44	PACKING (C)	SI.R	4Y6607R01	1	1		
45	BUSHING	SB-1500-21	420470-06	2	2		
46	BRACKET (B) - BOOSTER	S.S	3Y5059M01	1	1		
47	HEX HEAD BOLT W/ WASHERS	S.S	FBK0612S0	2	2		
48	CABLE TIE	CV-150A	7920-0021	1	1		
49	GROMMET	EPDM	410666-17	1	1		

D. FRONT PANEL ASSY

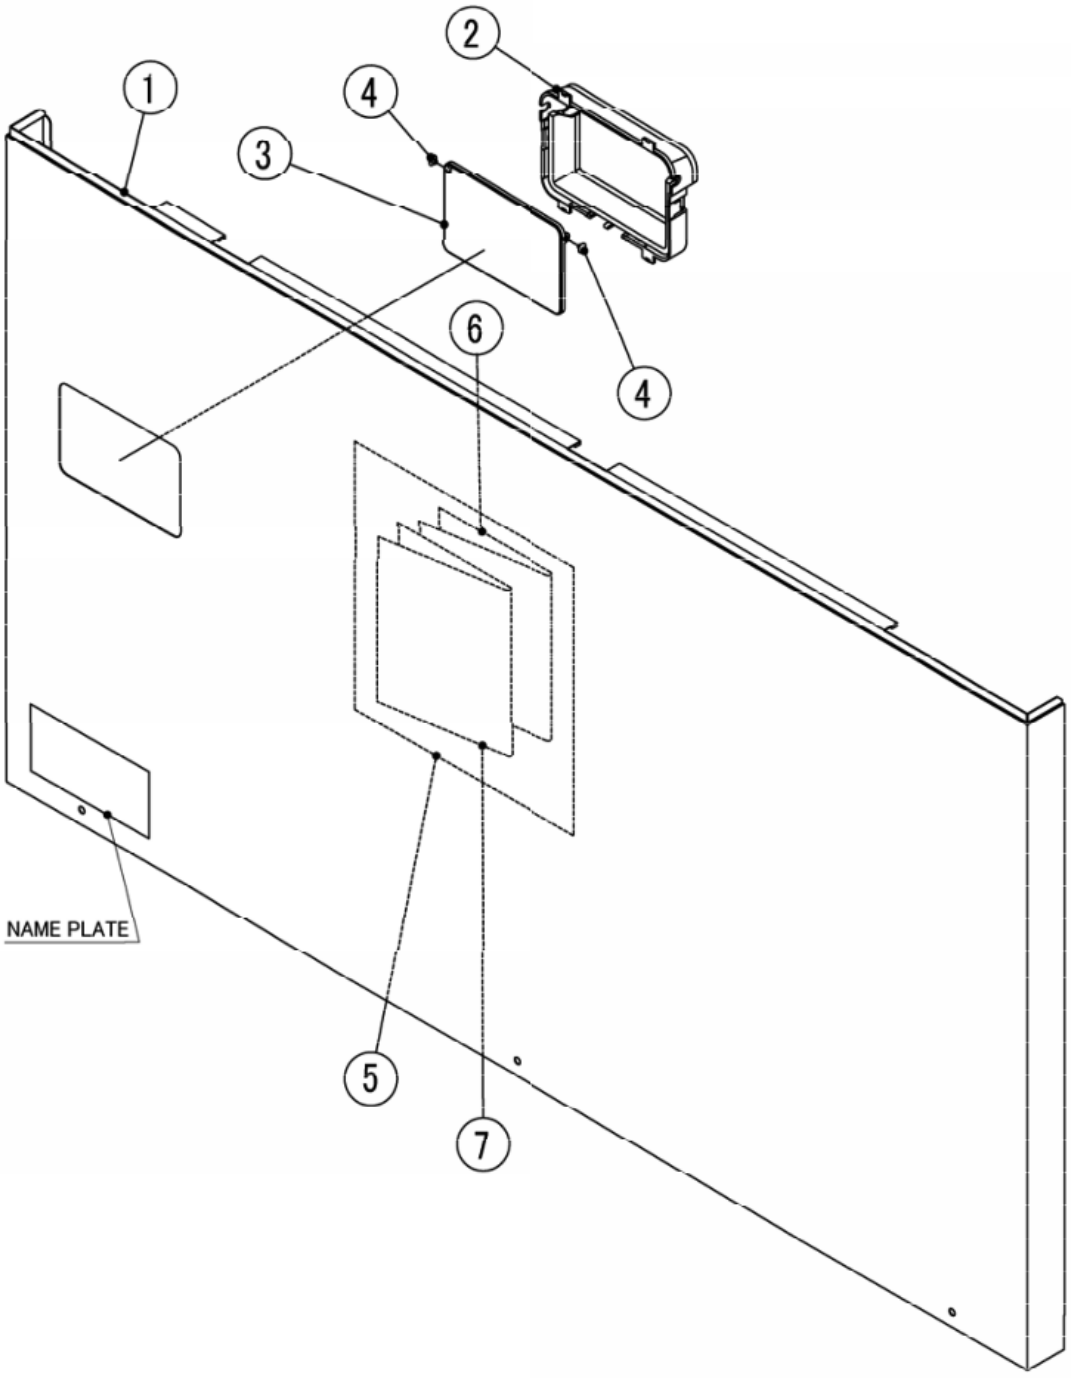

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **D. FRONT PANEL ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	FRONT PANEL	S.S	1H4677M01	1	1		
2	GUIDE FRAME	ABS	114731-02	1	1		
3	COVER - GFCI	S.S	3Y0753-01	1	1		
4	PUSH RIVET	PA	411399-07	2	2		
5	VINYL CASE	PE	4X0420-01	1	1		
6	WIRING LABEL		2H9957L01	1	1		
7	LABEL - CONTROLLER		253215L01	1	1		

E. SERVICE PANEL ASSY

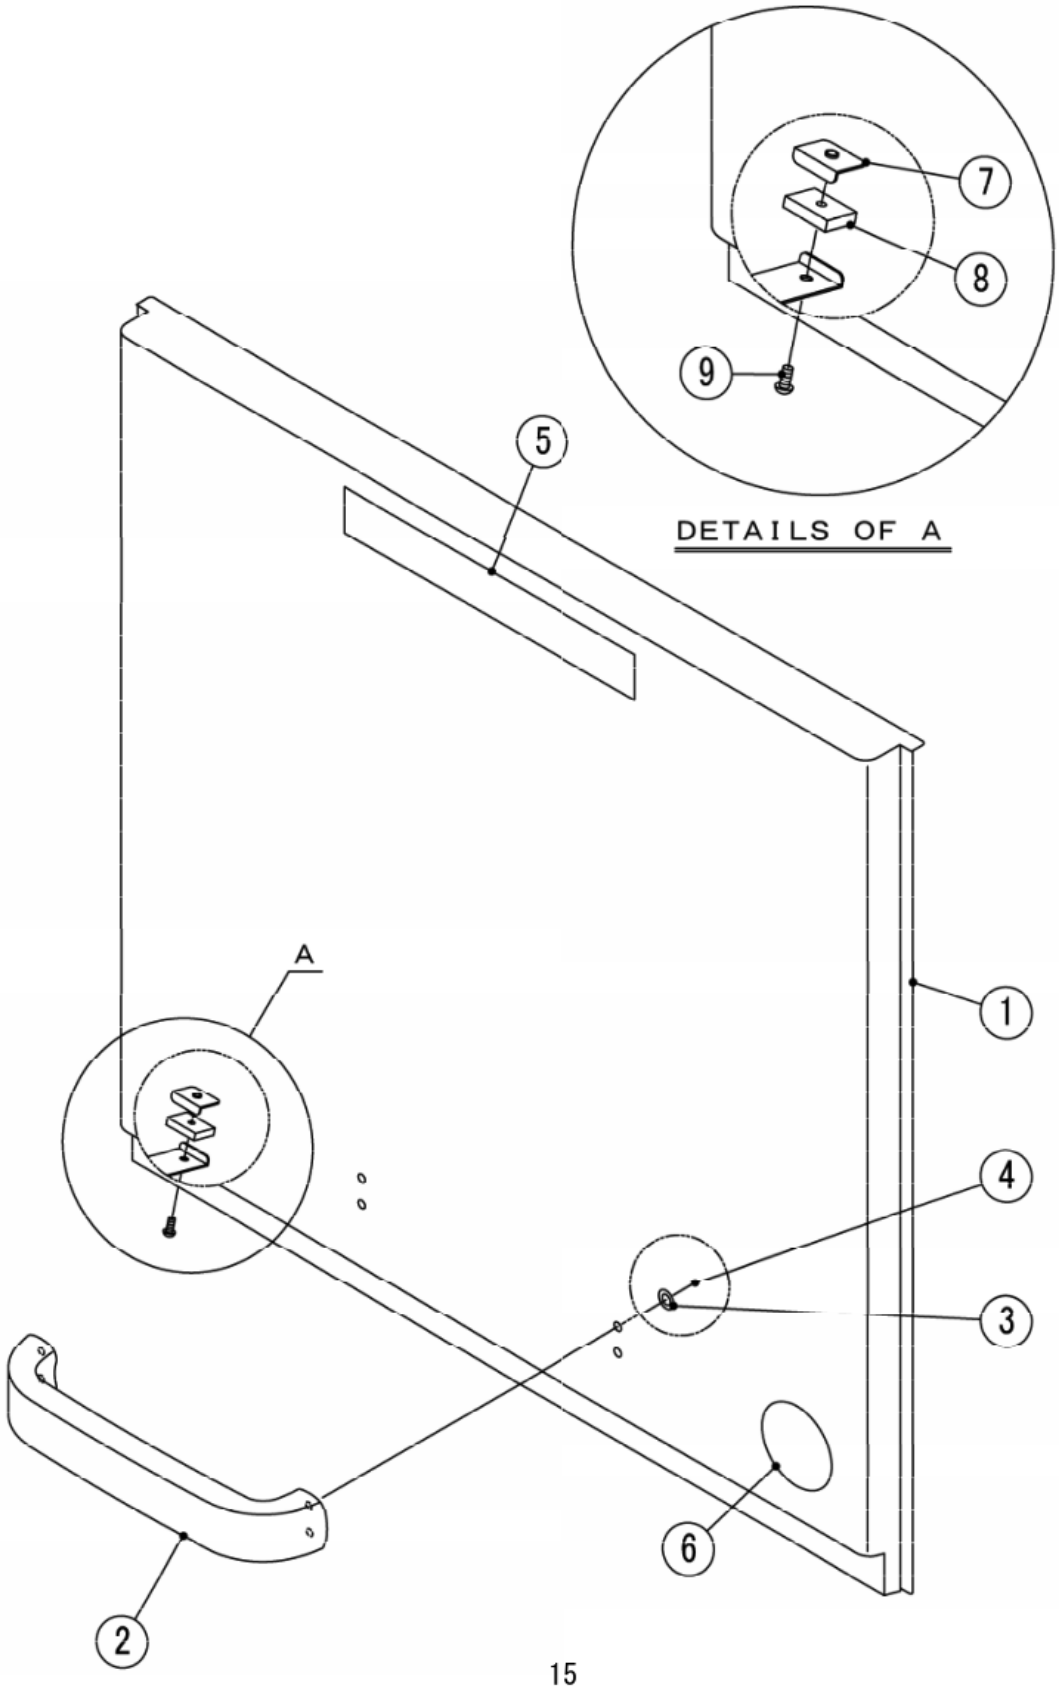

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **E. SERVICE PANEL ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	SERVICE PANEL	S.S	2H8363G02	1	1		
2	HANDLE	PA	2H2403G01	1	1		
3	SEAL WASHER		437306-01	4	4		
4	HEX HEAD BOLT W/ WASHERS	S.S	FBK0516S0	4	4		
5	EMBLEM		340842-01	1	1		
6	LABEL - PENGUIN		453783-01	1	1		
7	MAGNET BRACKET (B)	S.S	4Y4222M01	1	1		
8	MAGNET		P00206-01	1	1		
9	SCREW	S.S	4Y1319-06	1	1		

F. CONTROL BOX ASSY

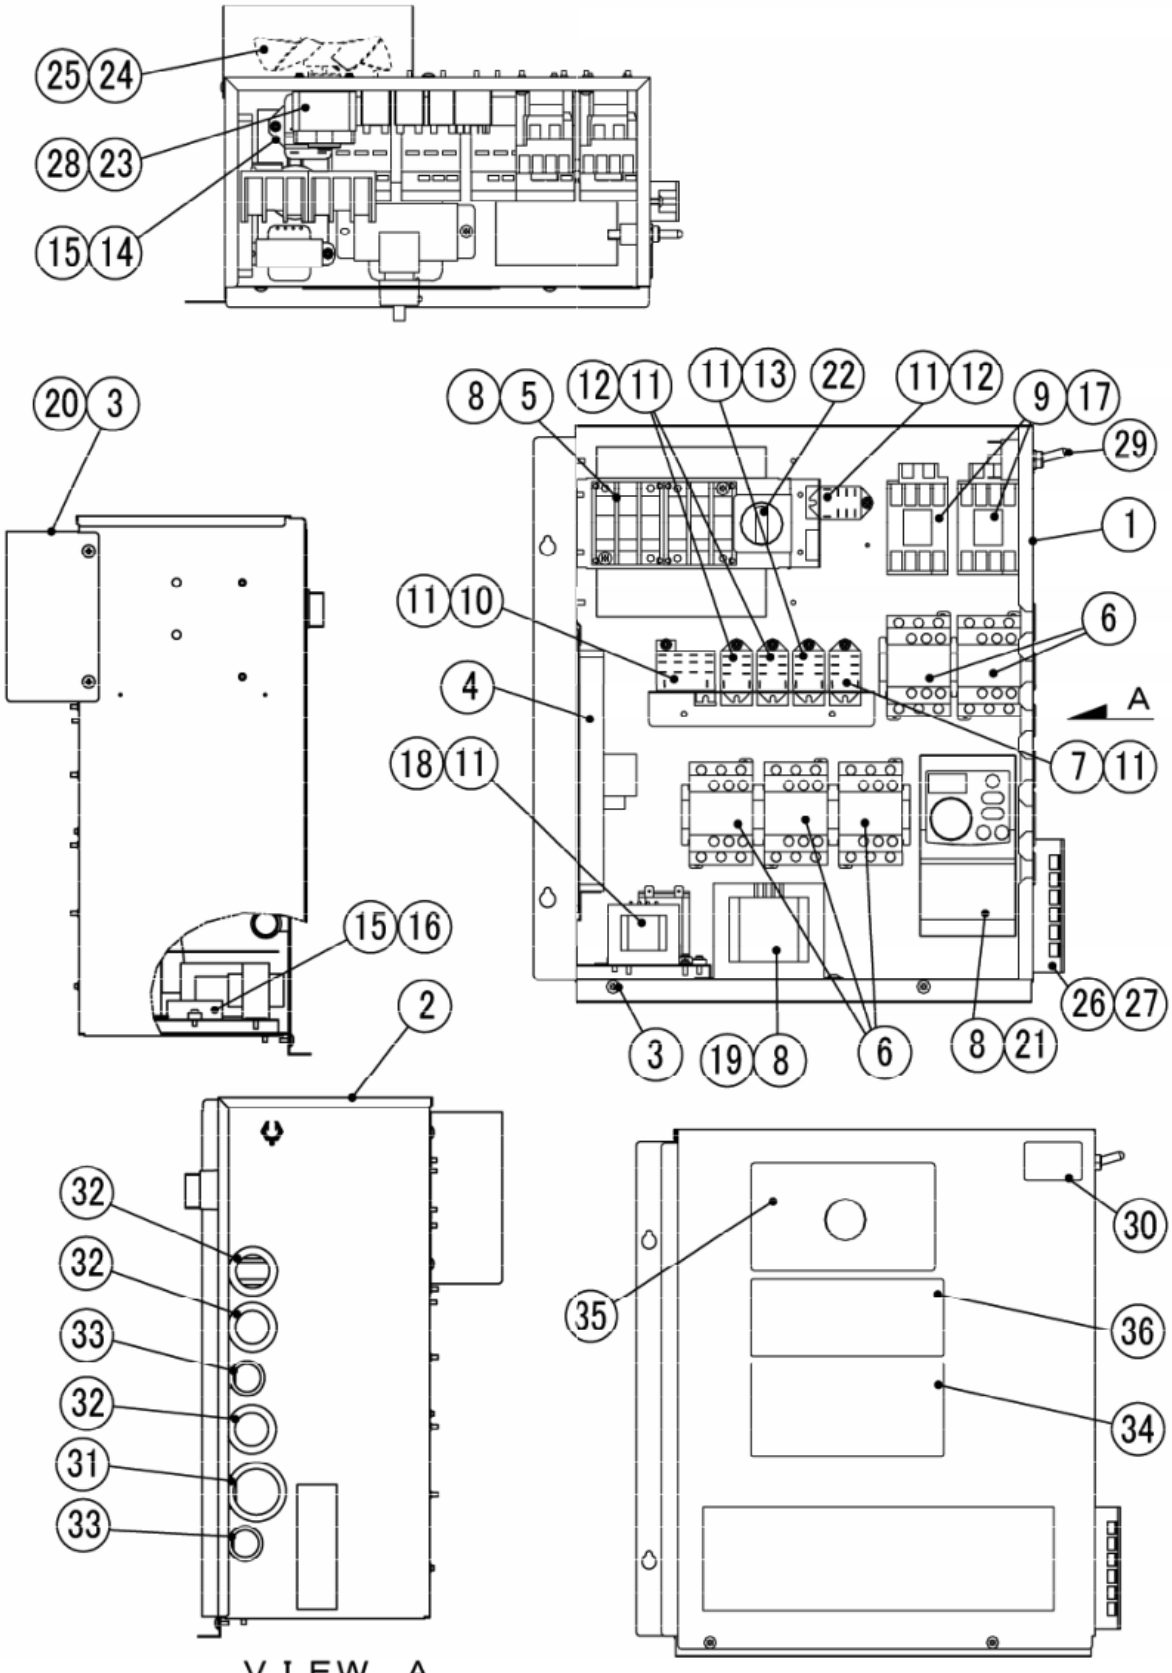

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **F. CONTROL BOX ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	CONTROL BOX	S.S	2H9958G01	1	1		
2	COVER - CONTROL BOX	S.S	3Y5060G01	1	1		
3	TRUSS HEAD TAPPING SCREW	S.S	FT20408M0	6	6		
4	CONTROLLER BOARD	HSTZZD0095	P01831-01	1	1		
5	TERMINAL BLOCK	1413400	4A5358-01	2	2		
6	MAGNETIC CONTACTOR	LC1D186L7-HS	4Y2392-02	5	5		
7	RELAY	LY2ZF	406132-05	1	1		
8	TRUSS HEAD MACHINE SCREW	S.S	FST0408S0	6	6		
9	MAGNETIC CONTACTOR	S-N11	4Y3365-01	2	2		
10	RELAY	LY4F	406133-02	1	1		
11	TP TAPPING SCREW	S.S	431415-01	7	7		
12	RELAY	LY1F	418271-02	3	3		
13	RELAY	LY2F	406132-02	1	1		
14	RELAY - PHASE REVERSAL	RDR-S230-M	P01000-01	1	1		
15	TP TAPPING SCREW	S.S	431415-03	4	4		
16	BUZZER	PKB5-3A24-ASSY	463024-01	1	1		
17	TRUSS HEAD MACHINE SCREW	S.S	FST0416S0	4	4		
18	TRANSFORMER	10012	P01763-01	1	1		
19	TRANSFORMER	HO4118-000	P02049-01	1	1		
20	COVER (C) -FAN MOTOR	S.S	4Y4264M01	1	1		
21	INVERTER	FR-D720-0.1K-60	P01775-01	1	1		
22	SELECT SWITCH	A22-3M	P00202-01	1	1		
23	FAN MOTOR	F3042R	P01203-01	1	1		
24	FAN	PP	449942-01	1	1		
25	SPEED NUT	S.S	449942F01	1	1		
26	TERMINAL BLOCK	T3052-1-6P-CS	P01375-04	1	1		
27	TRUSS HEAD MACHINE SCREW	S.S	FST0412S0	2	2		
28	PAN HEAD MACHINE SCREW W/ WASHERS	S.S	FSK0308S0	2	2		
29	VOLTAGE TAP SWITCH	WD11019F	P01446-01	1	1		
30	LABEL-VOLTAGE TAP		474063L01	1	1		
31	BUSHING	SB-1375-16	420470-04	2	2		
32	BUSHING	OCB-1000	428394-05	3	3		

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **F. CONTROL BOX ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
33	BUSHING	OCB-875	428394-04	2	2		
34	WARNING LABEL - SERVICE		472727L01	1	1		
35	LABEL-CONVEYOR		373595L01	1	1		
36	WARNING LABEL		375198L01	1	1		

G. HOOK ASSY

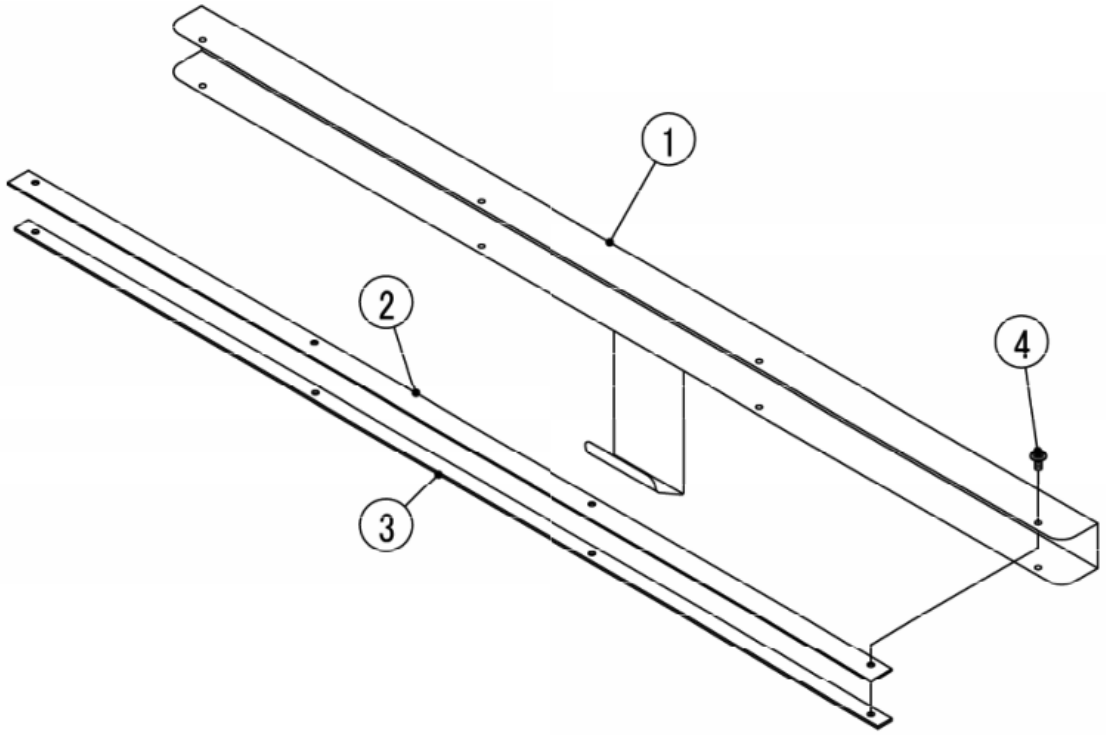

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **G. HOOK ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	HOOK - TOP PANEL	S.S	3Y2276G01	1	1		
2	GASKET - PANEL	SI.R	4Y4245P01	1	1		
3	PLATE - GASKET	S.S	4Y4246M01	1	1		
4	SCREW	S.S	4Y1319-05	4	4		

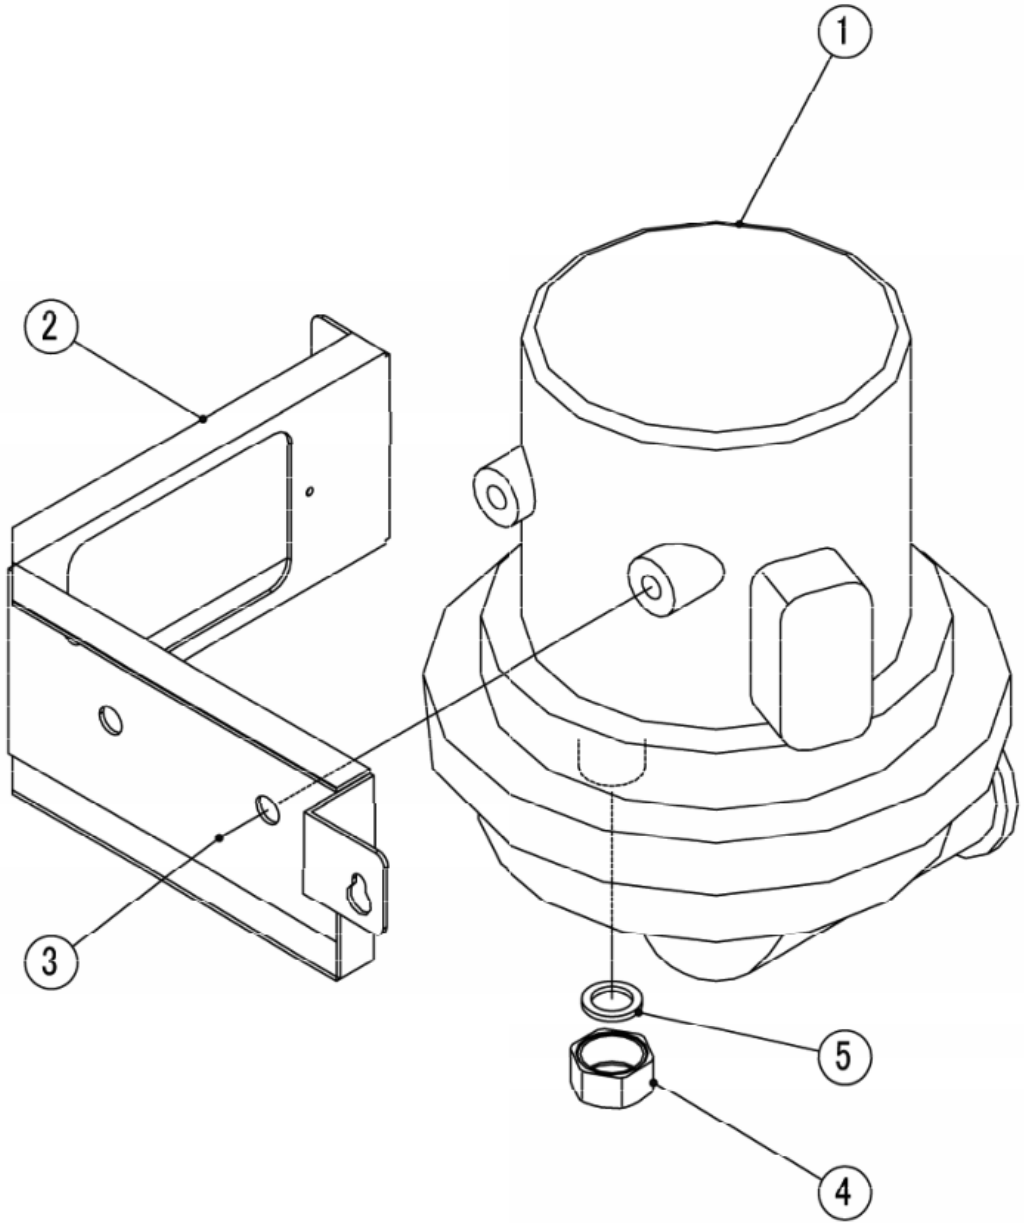
1
2
3
5
4

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **H. WASH PUMP (B) ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	PUMP MOTOR	50LPS-3756HUL	P01548-01	1	1		
2	SUPPORT (B) / WASH PUMP MOTOR	S.S	3Y2247M02	1	1		
3	HEX HEAD BOLT W/ WASHERS	S.S	FBK1016S0	2	2		
4	NUT / WASH PUMP MOTOR	S.S	4Y4183M01	1	1		
5	PACKING - TUBE		4H9792-01	1	1		

J. WASH PUMP (A) ASSY

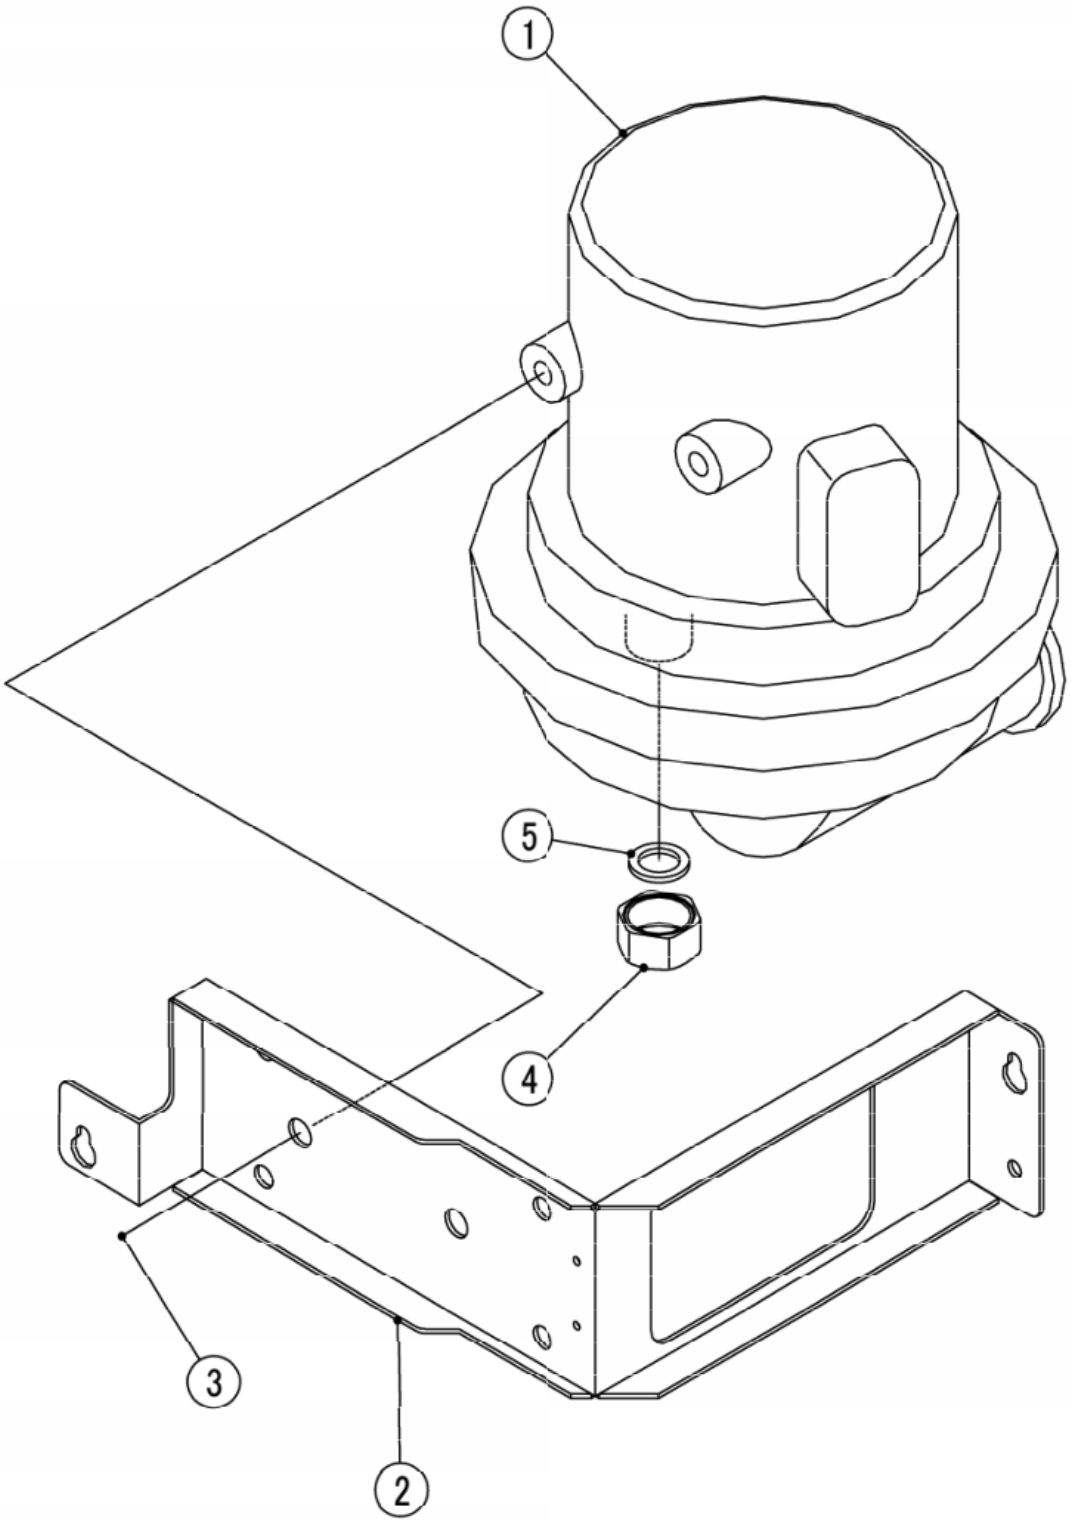

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **J. WASH PUMP (A) ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	PUMP MOTOR	50LPS-3756HUL	P01548-01	1	1		
2	SUPPORT (A) / WASH PUMP MOTOR	S.S	3Y2246M02	1	1		
3	HEX HEAD BOLT W/ WASHERS	S.S	FBK1016S0	2	2		
4	NUT / WASH PUMP MOTOR	S.S	4Y4183M01	1	1		
5	PACKING - TUBE		4H9792-01	1	1		

K. SPRAY ARM (UP) ASSY

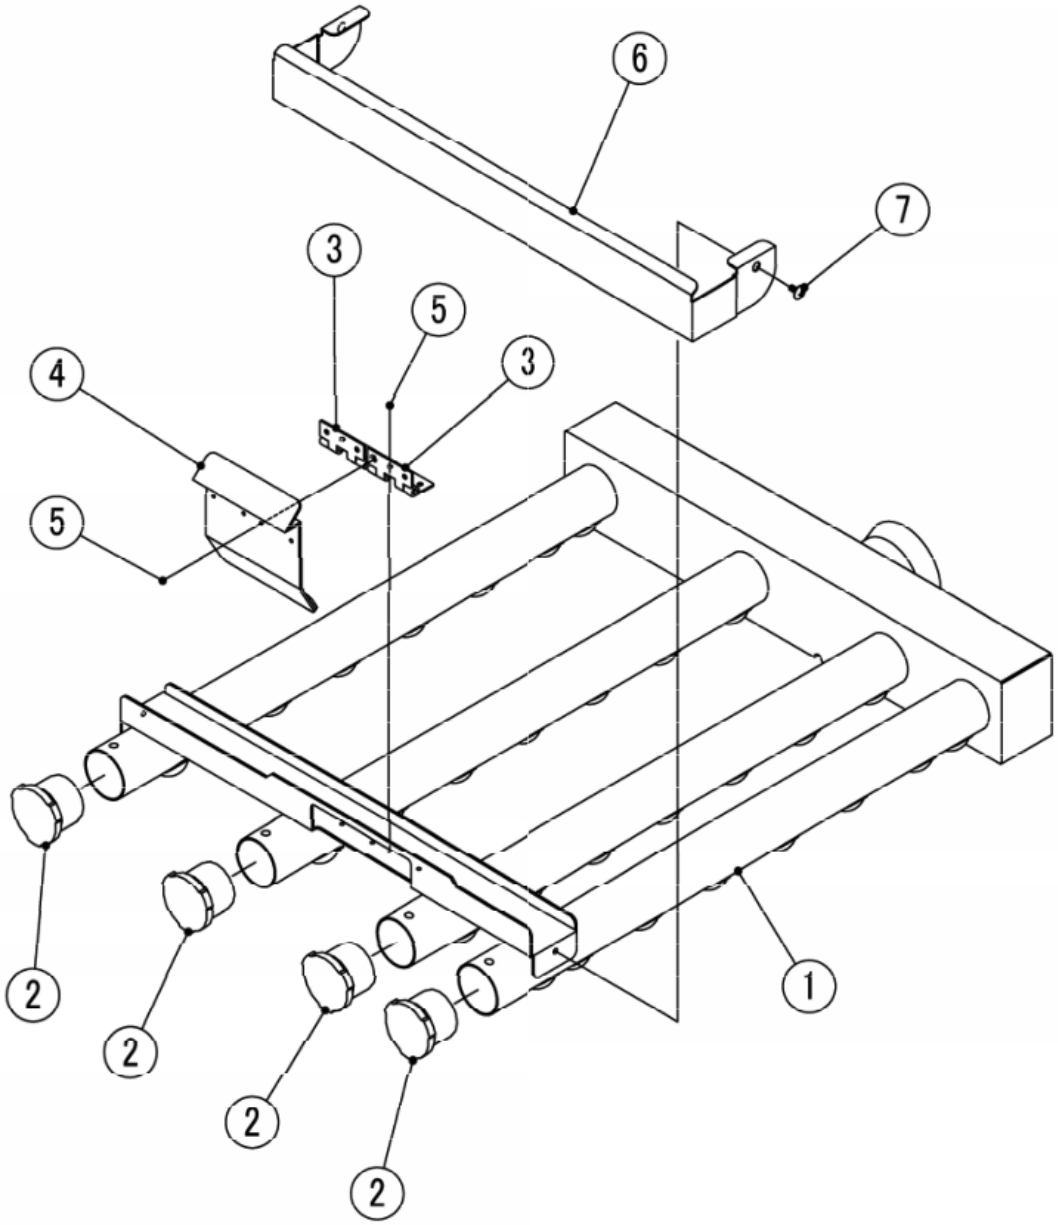

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **K. SPRAY ARM (UP) ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	WASH SPRAY ARM (UP)	S.S	2H8389G01	1	1		
2	CAP - SPRAY ARM	POM	3X1245-01	4	4		
3	HINGE	S.S	443721-02	2	2		
4	HOOK - SPRAY ARM (UP)	S.S	4Y4168M02	1	1		
5	SCREW	S.S	4Y4752M01	8	8		
6	COVER - CAP (UP)	S.S	4Y4836M02	1	1		
7	SCREW - TRUSS	S.S	441582-04	2	2		

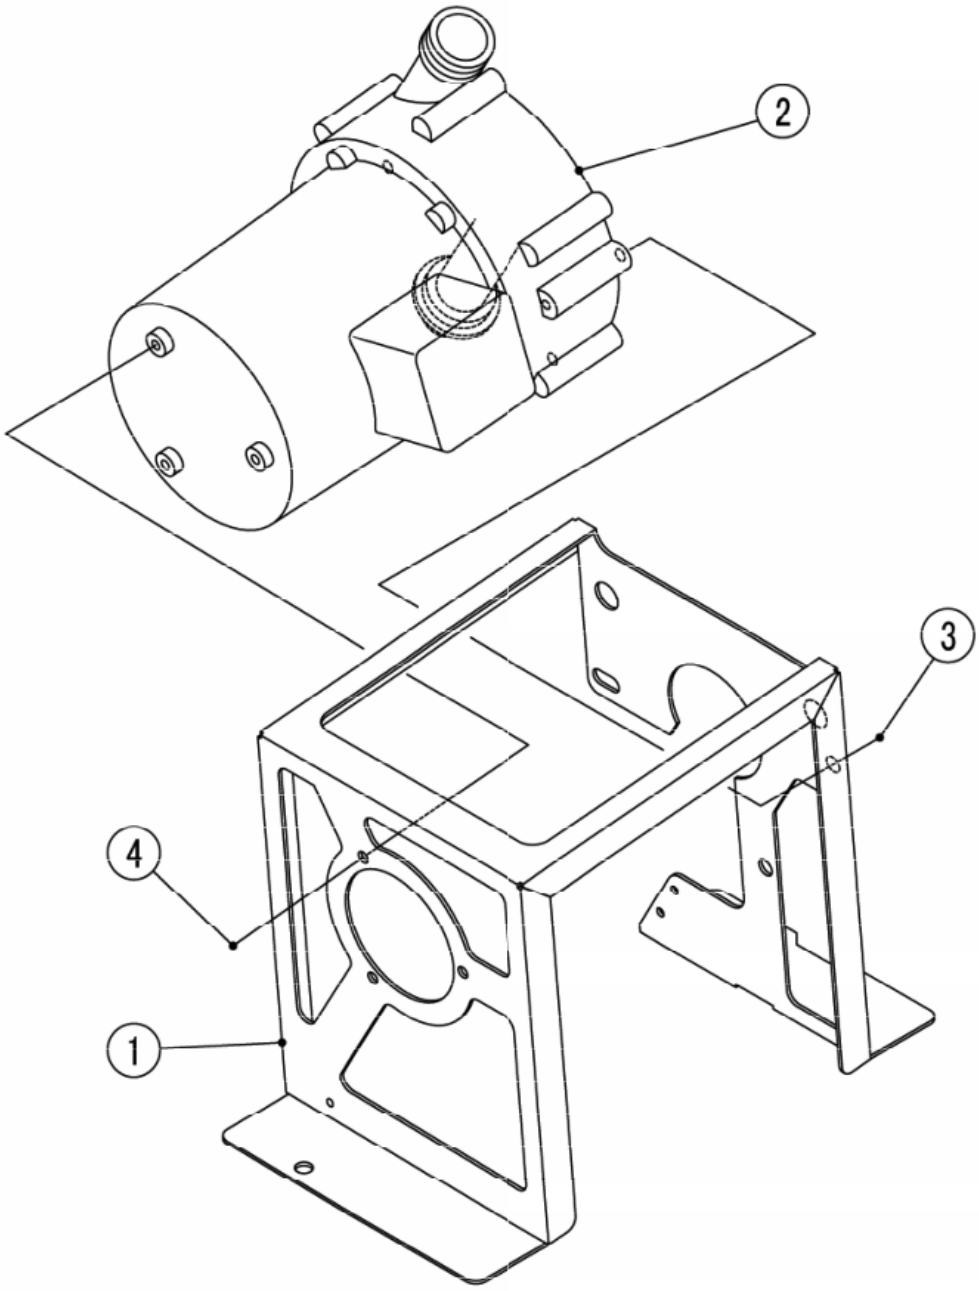
2
3
4
1

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **L. RINSE PUMP ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	BRACKET - RINSE PUMP MOTOR	S.S	2H8161M02	1	1		
2	PUMP MOTOR	PMD-1023BHZ4	P01834-01	1	1		
3	PAN HEAD MACHINE SCREW W/ WASHERS	S.S	P01834F01	3	3		
4	HEX HEAD BOLT W/ WASHERS	S.S	FBK0406S0	3	3		

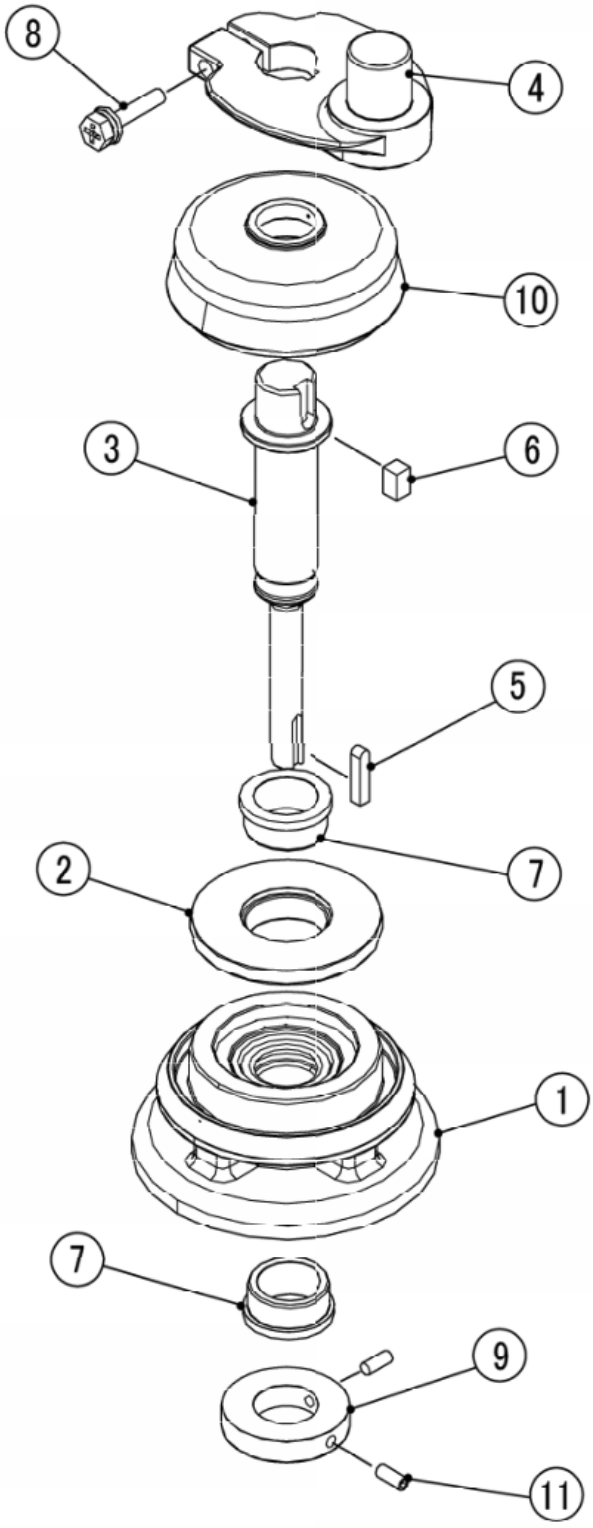
8
4
10
3
6
5
7
2
1
7
9
11

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **M. CRANK UNIT ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	HOUSING	S.S	3Y5638A01	1	1		
2	HOUSING (UP)	S.S	4Y7048M01	1	1		
3	CRANKSHAFT	S.S	4Y7050M01	1	1		
4	CRANK ARM (A)	S.S	3Y5448M01	1	1		
5	KEY	S.S	4Y4787M01	1	1		
6	KEY	S.S	4Y4185M02	1	1		
7	SLEEVE BEARING	PPS	4Y3237-05	2	2		
8	HEX HEAD BOLT W/ WASHERS	S.S	FBK0625S1	1	1		
9	STOPPER - CRANKSHAFT	S.S	4Y7260M01	1	1		
10	COVER - HOUSING	PE	3Y5450P01	1	1		
11	HEX SOCKET SET SCREW (FLAT POINT)	S.S	FSC0510S0	2	2		

N. CONVEYOR RAIL ASSY

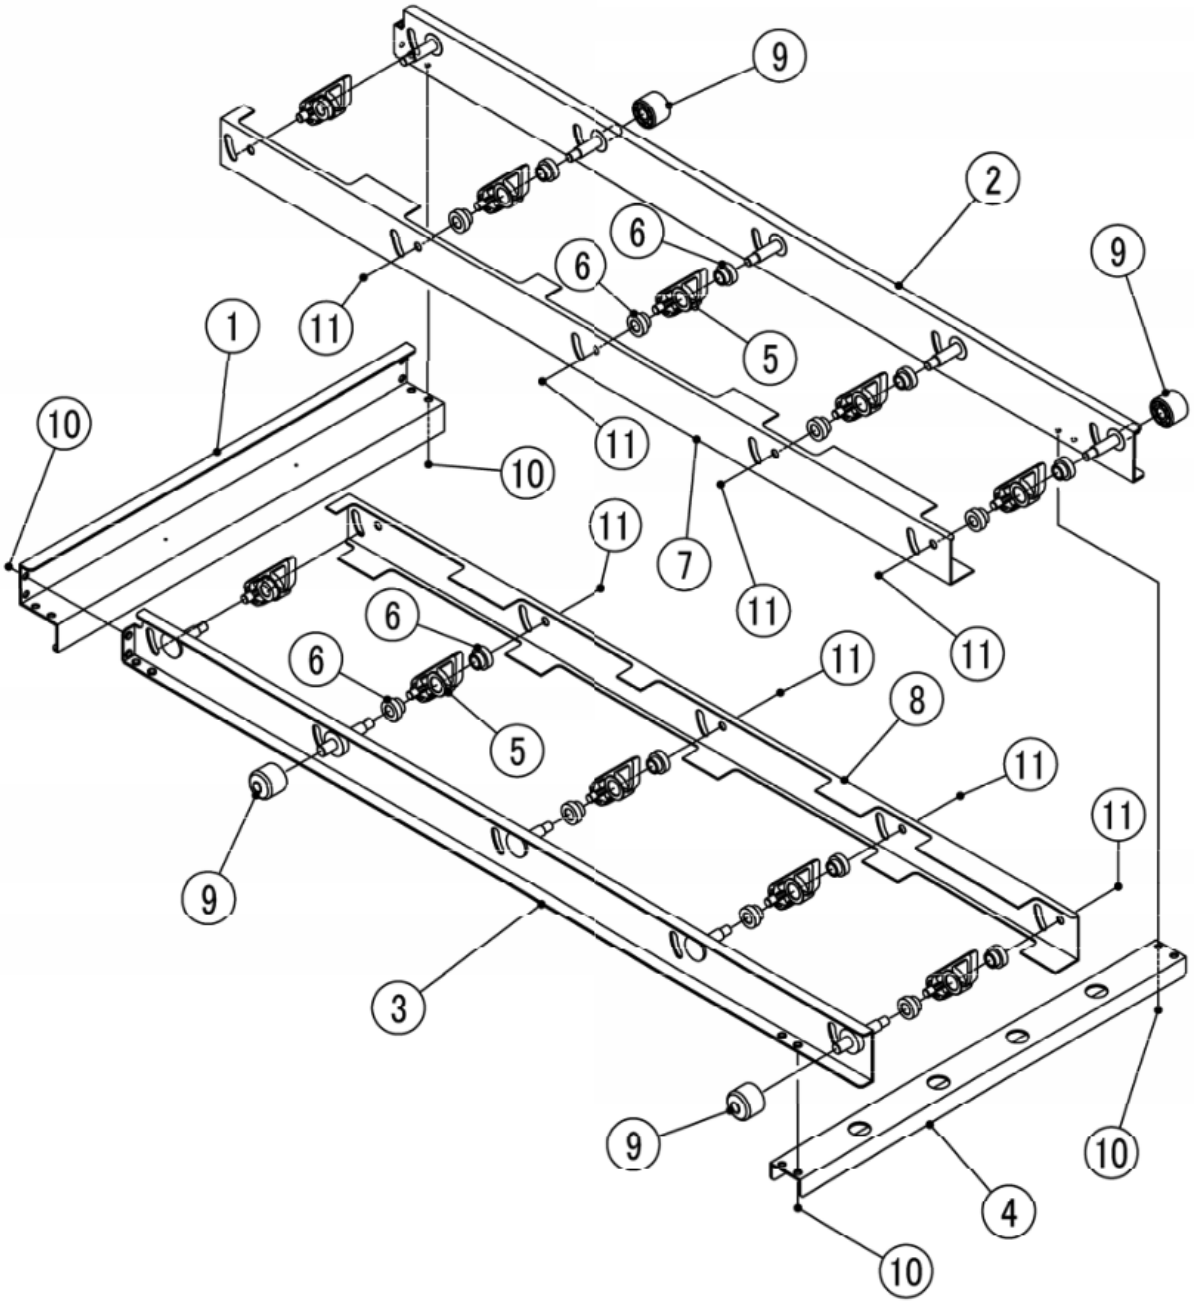

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **N. CONVEYOR RAIL ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	FRAME (A) - CONVEYOR RAIL	S.S	3Y2241G02	1	1		
2	CONVEYOR RAIL (A)	S.S	3Y4834G02	1	1		
3	CONVEYOR RAIL (B)	S.S	3Y4835G02	1	1		
4	FRAME (B) - CONVEYOR RAIL	S.S	3Y2242M02	1	1		
5	HOOK - CONVEYOR	S.S	3Y2221M01	10	10		
6	SLEEVE (A) - HOOK	PE	4Y4136P01	20	20		
7	GUIDE (A) - CONVEYOR RAIL	S.S	2H9852M02	1	1		
8	GUIDE (B) - CONVEYOR RAIL	S.S	2H9853M02	1	1		
9	ROLLER - CONVEYOR RAIL	PE	4Y4137P01	4	4		
10	SCREW - BOLT	S.S	449879-03	12	12		
11	CAPPED U NUT	S.S	FNC108S0	10	10		
12	GUAID - FLAME	PE	4Y4439P01	2	2		
13	TRUSS HEAD MACHINE SCREW	S.S	FST0408S0	2	2		

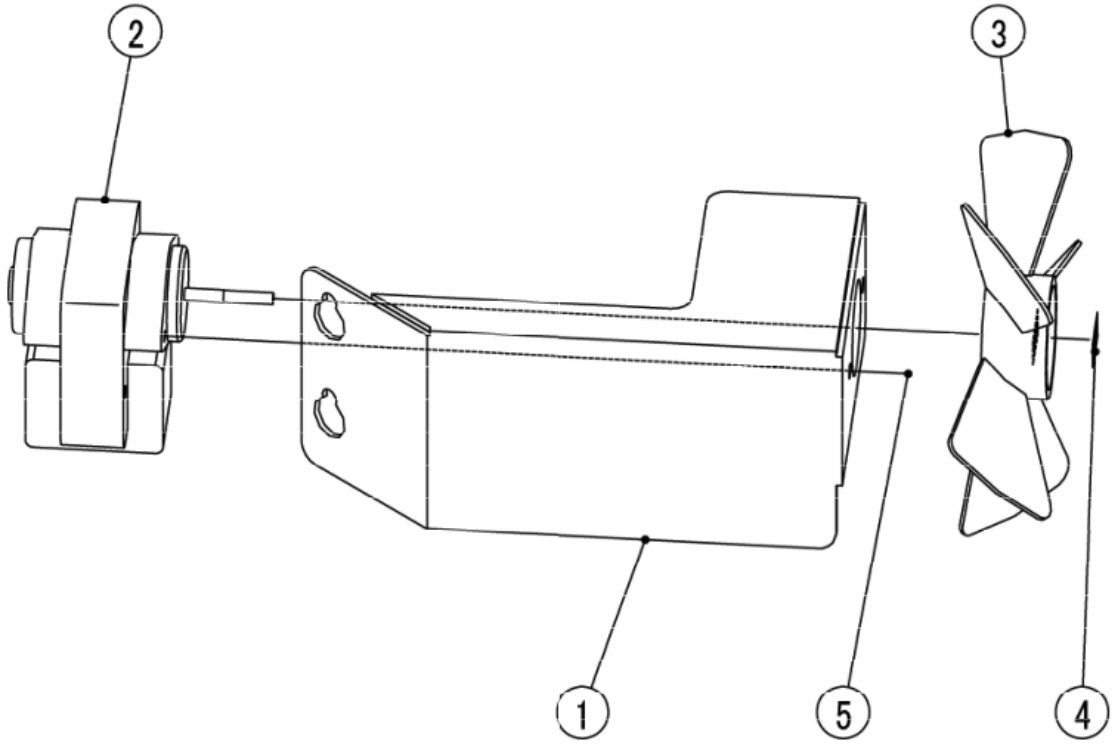
2
3
1
5
4

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **P. FAN MOTOR ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	BRACKET (A) - FAN MOTOR	S.S	4Y4328M02	1	1		
2	FAN MOTOR	F3042R	P01203-01	1	1		
3	FAN	PP	449942-01	1	1		
4	SPEED NUT	S.S	449942F01	1	1		
5	PAN HEAD MACHINE SCREW W/ WASHERS	S.S	FSK0306S0	2	2		

Q. FAN MOTOR (B) ASSY

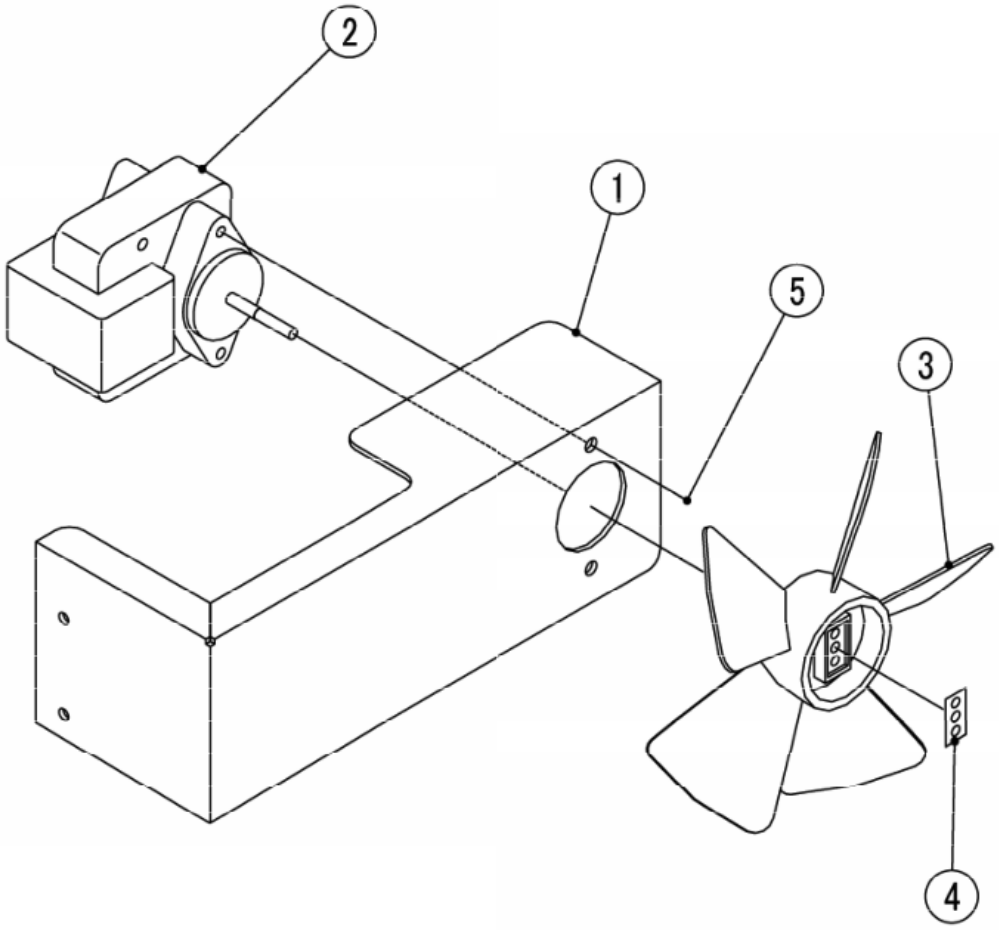

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **Q. FAN MOTOR (B) ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	BRACKET (B) - FAN MOTOR	S.S	4Y4329M02	1	1		
2	FAN MOTOR	F3042R	P01203-01	1	1		
3	FAN	PP	449942-01	1	1		
4	SPEED NUT	S.S	449942F01	1	1		
5	PAN HEAD MACHINE SCREW W/ WASHERS	S.S	FSK0306S0	2	2		

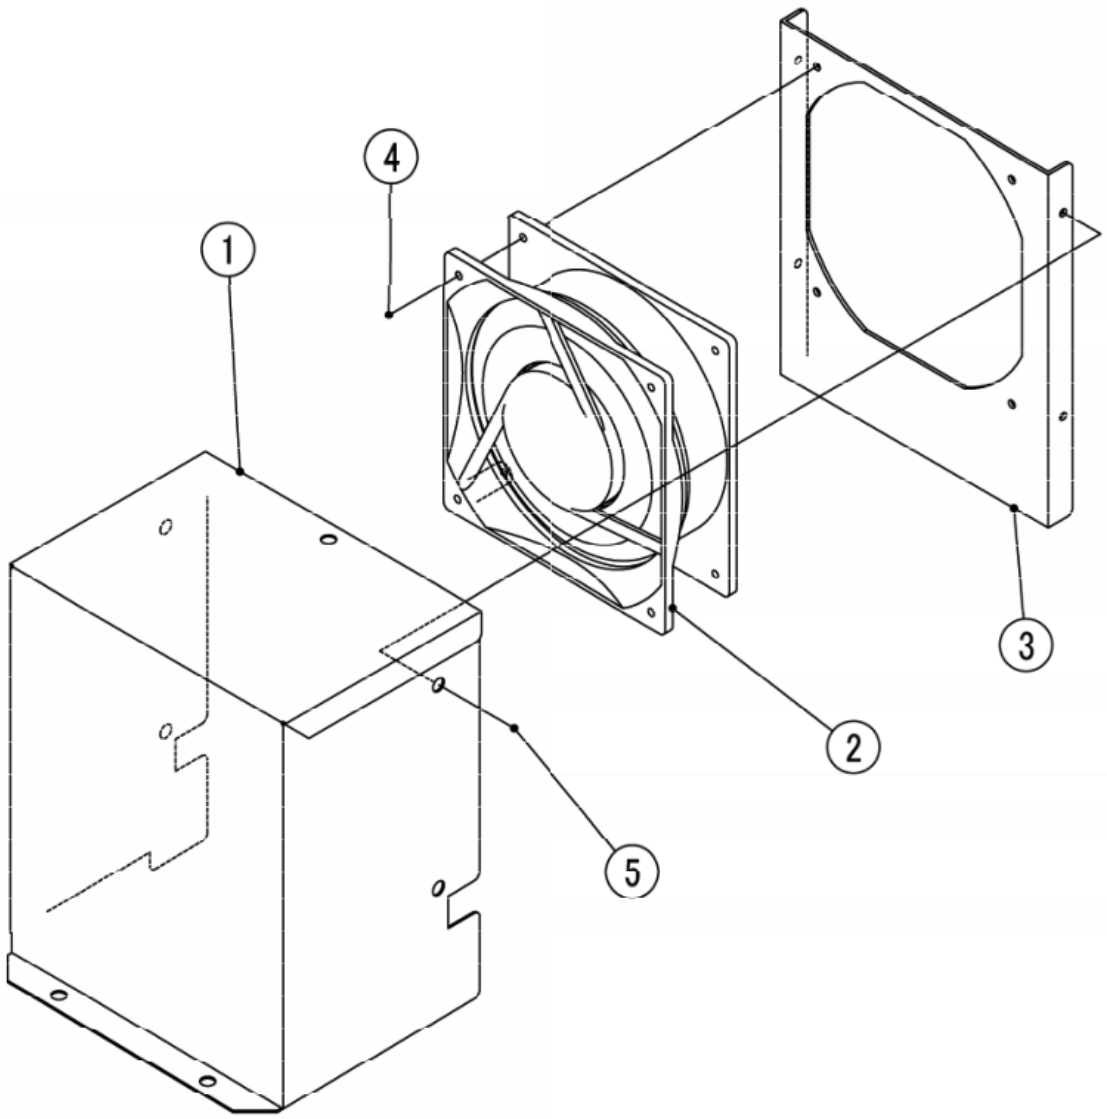
1
2
3
4
5

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **R. FAN MOTOR (C) ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	DUCT - FAN MOTOR	S.S	3Y5061M01	1	1		
2	FAN MOTOR	CN60B5	P01836-01	1	1		
3	BRACKET - FAN MOTOR	S.S	3Y5378M01	1	1		
4	TRUSS HEAD MACHINE SCREW	S.S	FST0445S0	4	4		
5	HEX HEAD BOLT W/ WASHERS	S.S	FBK0408S0	4	4		

S. SPRAY ARM (LO) ASSY

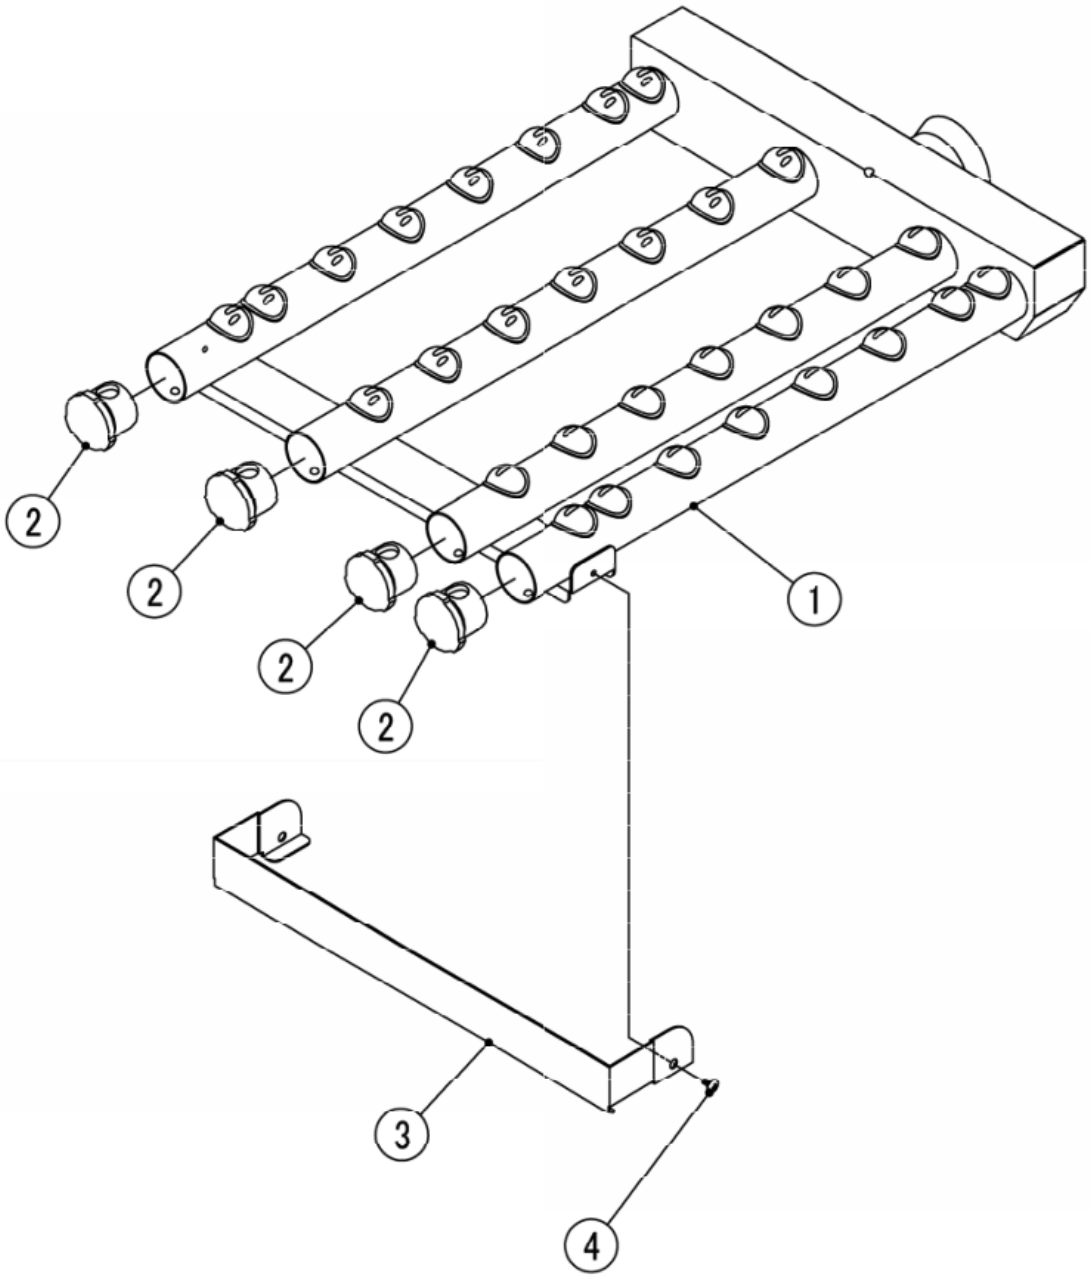

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **S. SPRAY ARM (LO) ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	WASH SPRAY ARM (LO)	S.S	2H8390G01	1	1		
2	CAP - SPRAY ARM	POM	3X1245-01	4	4		
3	COVER - CAP (LO)	S.S	4Y4835M02	1	1		
4	SCREW - TRUSS	S.S	441582-04	2	2		

T. HOSE-CLEANSER ASSY

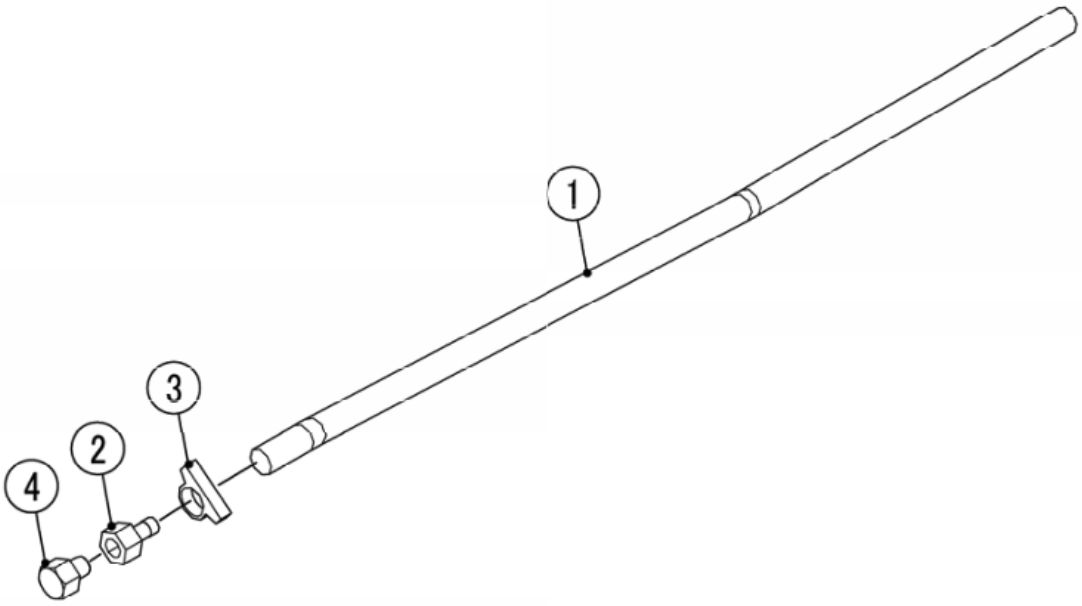

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **T. HOSE - CLEANSER ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	HOSE - CLEANSER	SI.R	4H8168-07	1	1		
2	JOINT - RINSE PUMP		4X0889-01	1	1		
3	HOSE CLAMP	SNP-7	435947-01	1	1		
4	RINSE PLUG		4X8858-01	1	1		

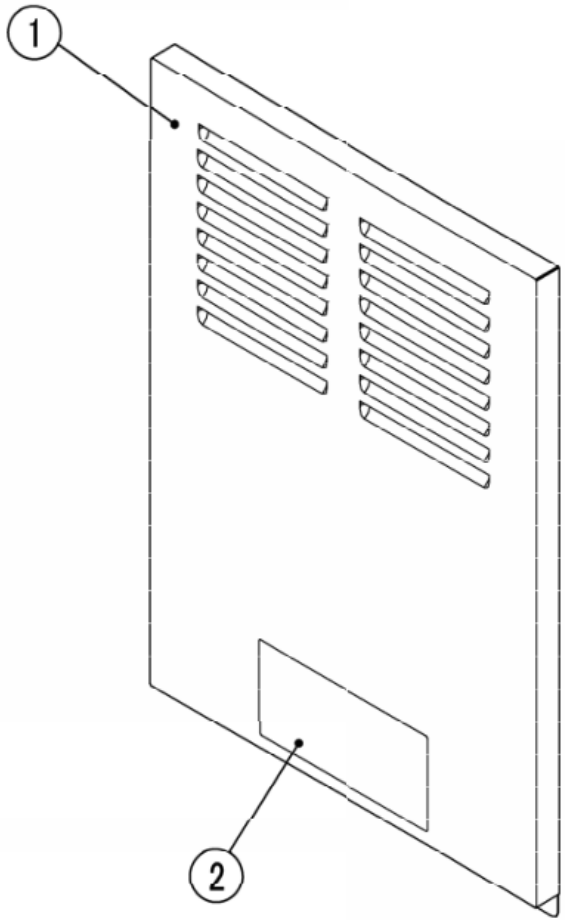
1
2

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **U. FRONT PANEL - BOOSTER**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	FRONT PANEL - BOOSTER	S.S	2H9954M01	1	1		
2	WARNING LABEL - SERVICE		472727L01	1	1		

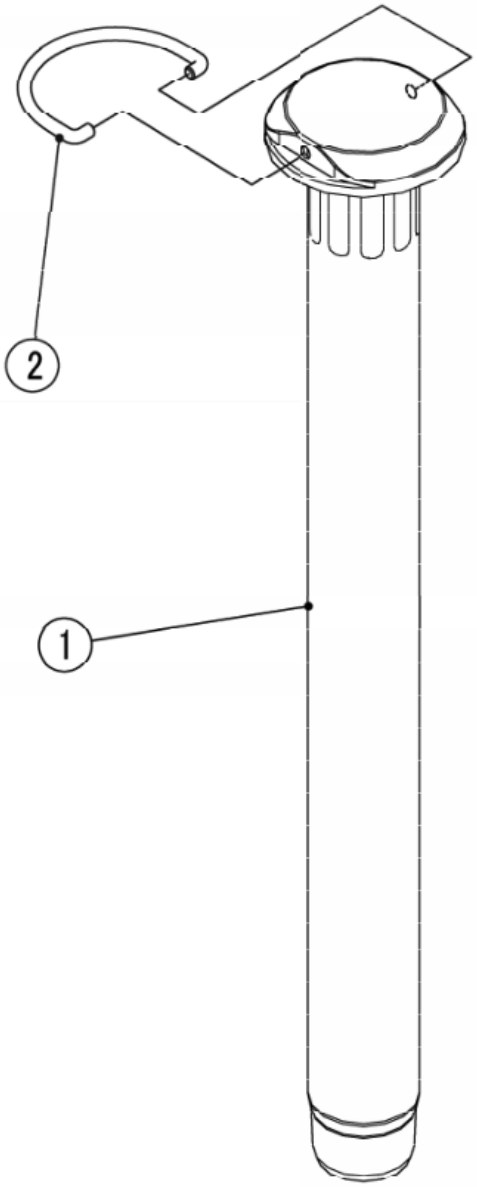
2
1

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **V. OVERFLOW PIPE ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	OVERFLOW PIPE	S.S	3Y6606G01	1	1		
2	HANDLE - OF	S.S	4Y3160-01	1	1		

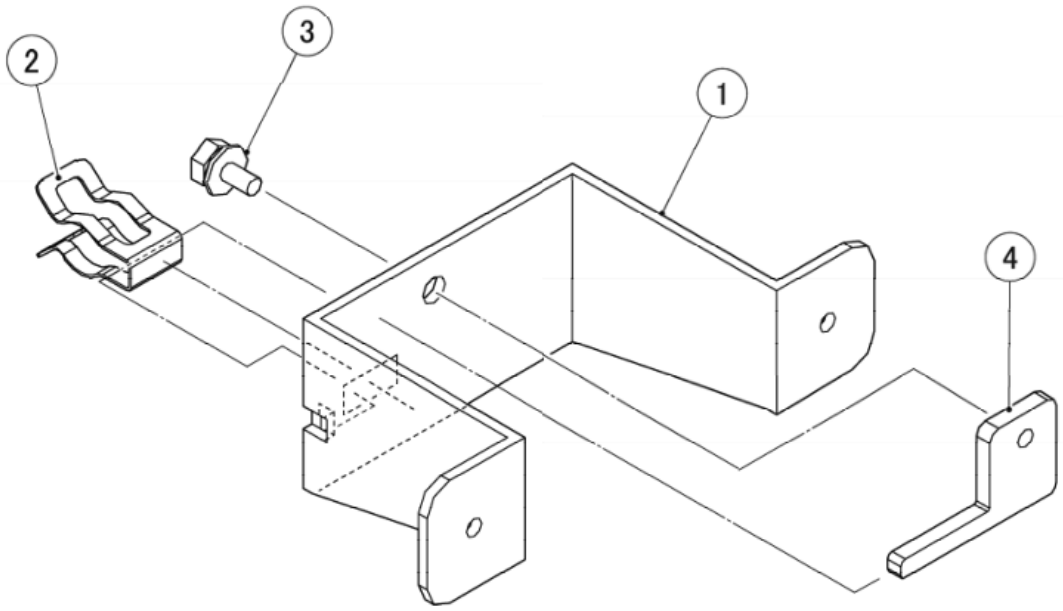
2
3
1
4

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **W. RINSE BRACKET A - ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	RINSE BRACKET A		4Y7737M01		1		
2	QUICK FASTENER		4Y7748G01		1		
3	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0408S1		1		
4	HOLDER - FASTENER		4Y7723M01		1		

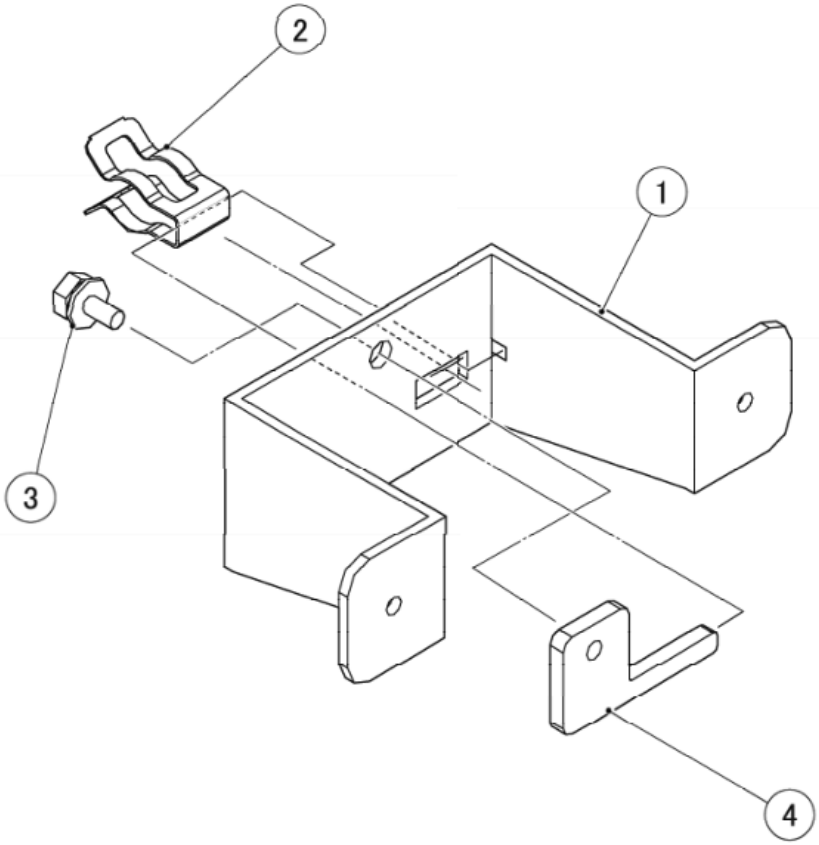
2
1
3
4

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **X. RINSE BRACKET B - ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	RINSE BRACKET B		4Y7747M01		1		
2	QUICK FASTENER		4Y7748G01		1		
3	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0408S1		1		
4	HOLDER - FASTENER		4Y7723M01		1		

Y. RINSE BRACKET C - ASSY

(B-1) and later

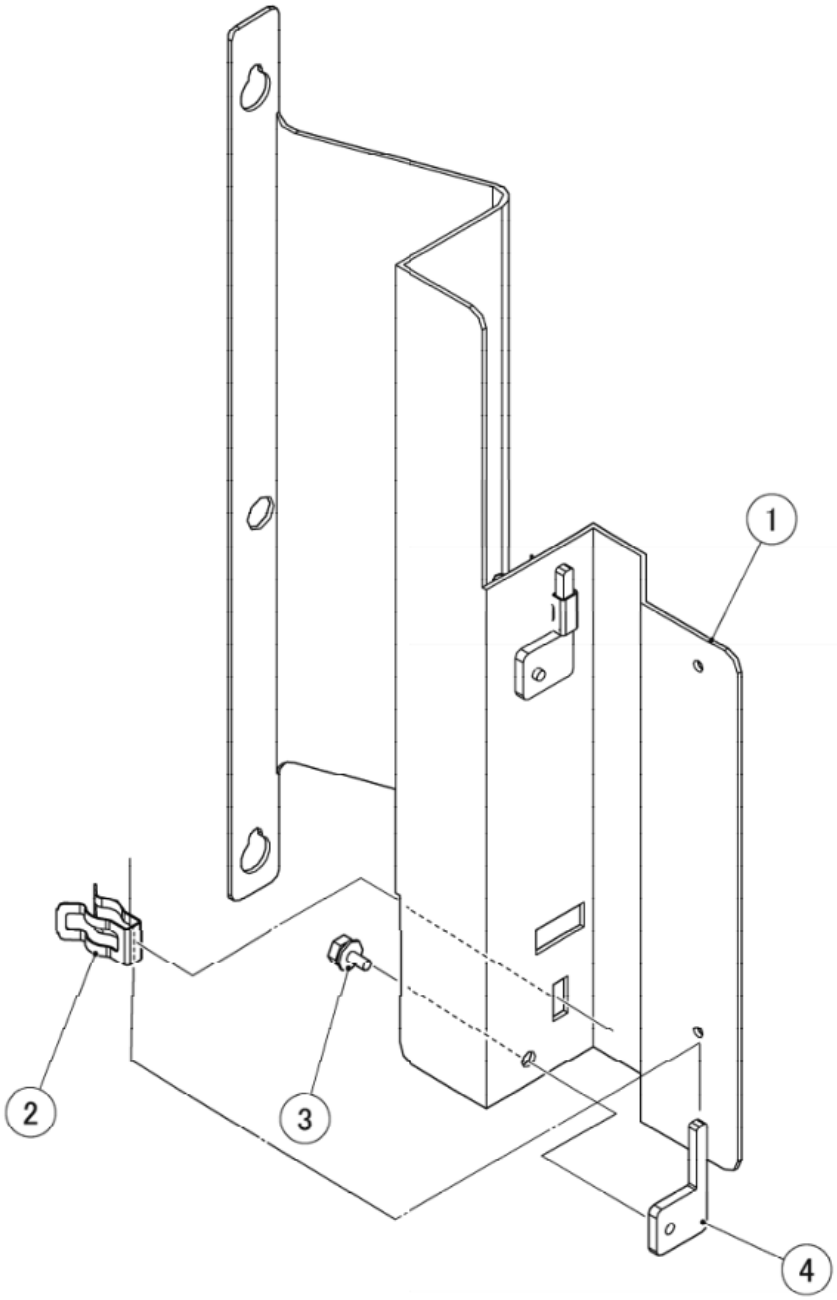

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **Y. RINSE BRACKET C - ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	RINSE BRACKET C		2X1108M01		1		
2	QUICK FASTENER		4Y7748G01		2		
3	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0408S1		2		
4	HOLDER - FASTENER		4Y7723M01		2		

Z. ACCESSORIES (1/2)

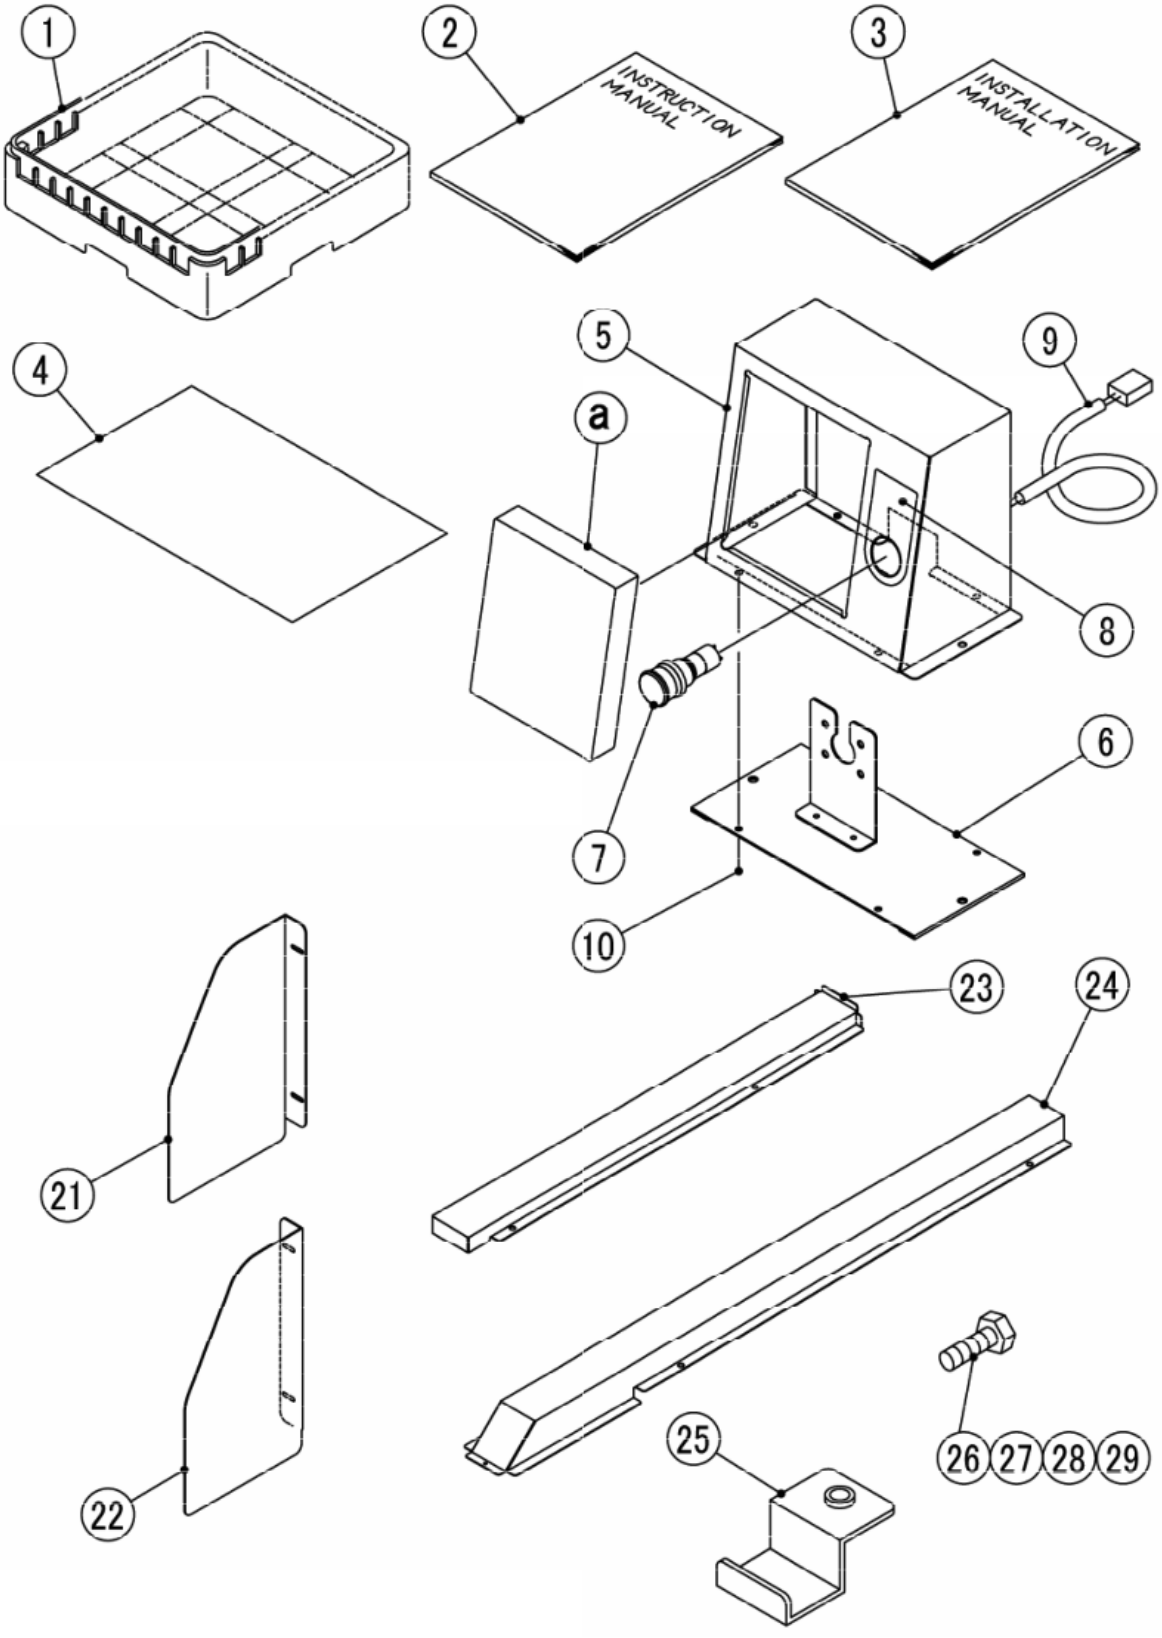

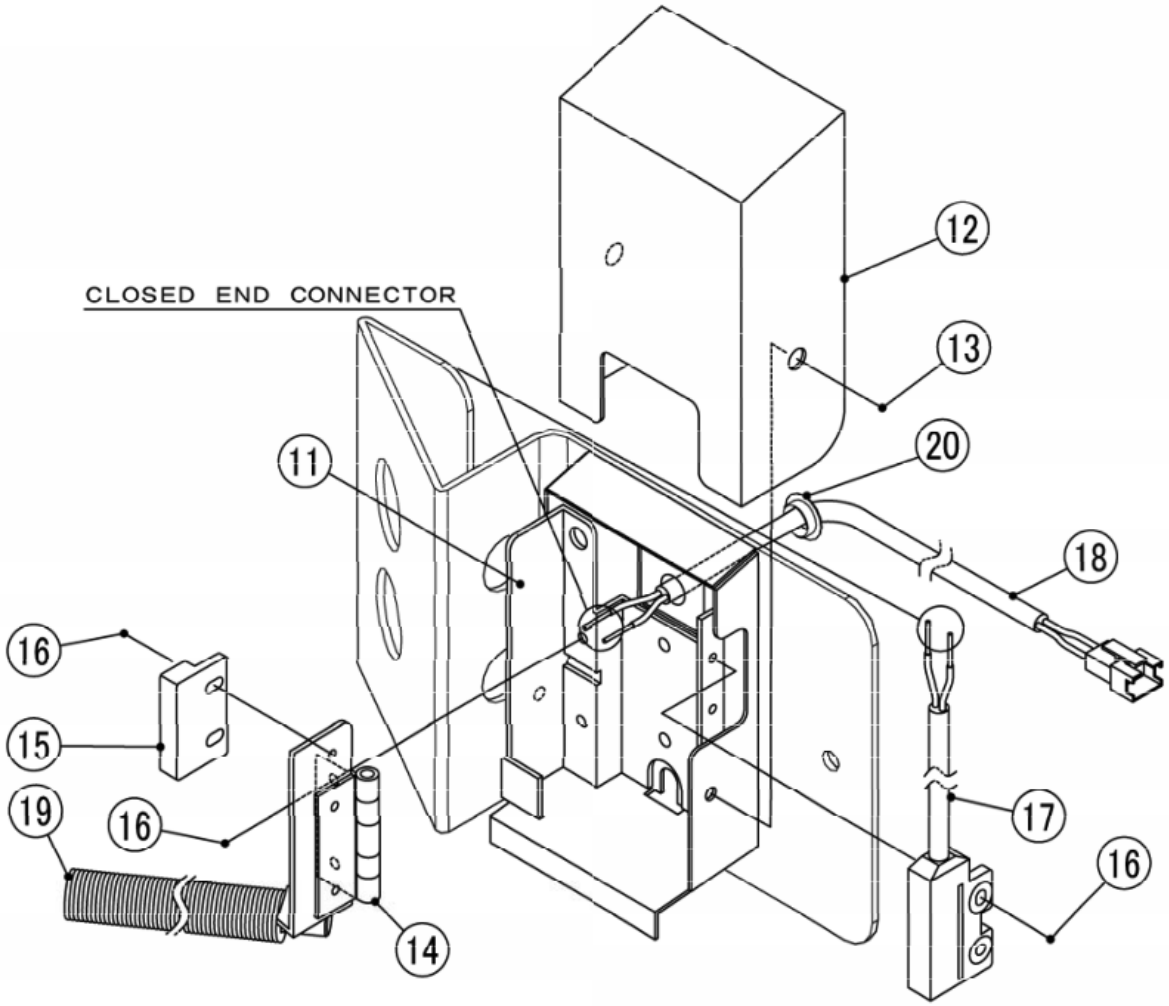
CLOSED END CONNECTOR
12
13
20
11
18
16
15
19
16
17
16
14

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **Z. ACCESSORIES**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
a	OPERATION PANEL ASSY	-	2H9959A01	1	1		
1	RACK	PP	1H0790-01	1	1		
2	INSTRUCTION MANUAL		L1J002111	1	1		
3	INSTALLATION MANUAL		L2J002111	1	1		
4	MAINTENANCE SHEET		258202L01	1	1		
5	OPERATION BOX (A-L)	S.S	3Y5053G01	1	1		
6	COVER - OPERATION BOX (A-L)	S.S	4Y6609G01	1	1		
7	EMERGENCY STOP BUTTON	HN1E-BV402R	463704-01	1	1		
8	LABEL - EMERGENCY STOP		474704L01	1	1		
9	CABLE - EMERGENCY STOP		4Y7053A01	1	1		
10	SCREW	S.S	4Y1319-01	4	4		
11	BOX - TABLE LIMIT SWITCH	S.S	3Y5062G01	1	1		
12	COVER - TABLE LIMIT SWITCH	S.S	3Y2551M01	1	1		
13	TRUSS HEAD MACHINE SCREW	S.S	FST0408S0	2	2		
14	BRACKET (L) - MAGNET	S.S	4Y4387G01	1	1		
15	MAGNET		436974-01	1	1		
16	PAN HEAD MACHINE SCREW W/ WASHERS	S.S	FSK0308S0	6	6		
17	REED SWITCH	PS-0074-502B	453861-02	1	1		
18	CABLE (B) - TABLE LIMIT SWITCH		4Y7054A01	1	1		
19	SPRING	S.S	4Y6610M01	1	1		
20	BUSHING	SB-562-7	420470-09	1	1		
21	GUARD (L)	S.S	3Y5063M01	1	1		
22	GUARD (R)	S.S	3Y5064M01	1	1		
23	CABLE COVER (A)	S.S	3Y5065G01	1	1		
24	CABLE COVER (B)	S.S	2H9960G01	1	1		
25	HOOK - DRAIN	S.S	4Y6611M01	1	1		
26	HEX HEAD BOLT W/ WASHERS	S.S	FBK0612S0	1	1		
27	HEX HEAD BOLT W/ WASHERS	S.S	FBK0512S0	3	3		
28	HEX HEAD BOLT W/ WASHERS	S.S	FNH105S0	3	3		
29	HEX HEAD BOLT W/ WASHERS	S.S	FBK0408S0	11	11		

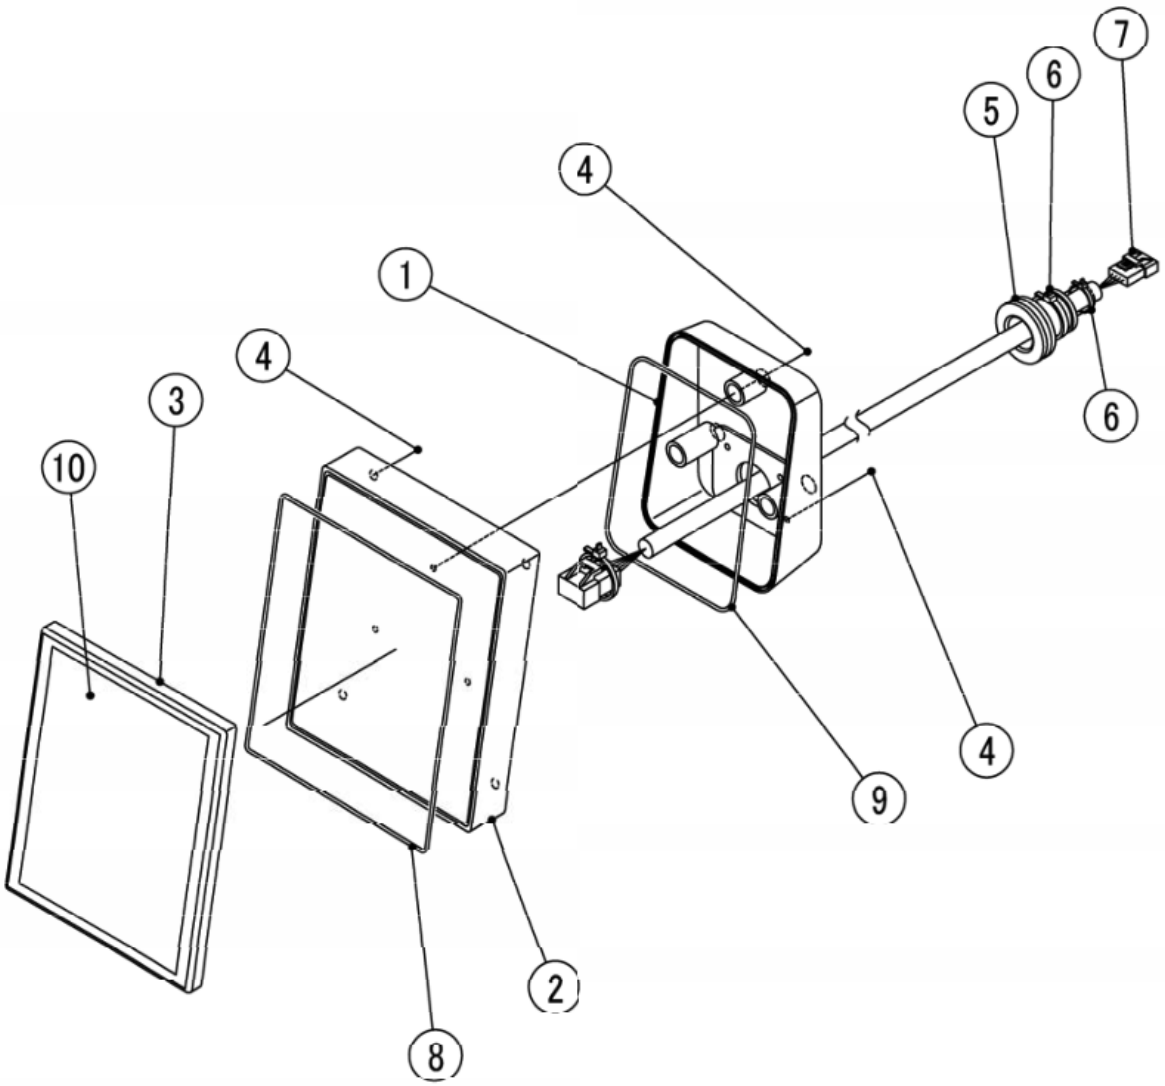
7
6
5
4
1
4
3
10
6
4
9
2
8

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **a. OPERATION PANEL ASSY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
1	JOINT - OPERATION (B)	ABS	2H4683-01	1	1		
2	OPERATION BOARD	HSTZZD0086	P00999-01	1	1		
3	OPERATION PANEL (B)	ABS	1H4359P01	1	1		
4	TRUSS HEAD TAPPING SCREW	S.S	FT20412M0	7	7		
5	GROMMET	NBR	4H2568-01	1	1		
6	CABLE TIE	CV-100	7920-0002	1	1		
7	CABLE - OPERATION		3X4524A13	1	1		
8	TUBE (A)	SI.R	2H9959-08	1	1		
9	TUBE (B)	SI.R	2H9959-09	1	1		
10	OPERATION LABEL		373703L01	1	1		

HA

MODEL : **JWE-2400CUA-L-25B**		TITLE : **JWE-2400CUA-R-25B ONLY**					
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER			
				A-1 B-0	B-1		
A-1	SIDE PANEL (R-R)	S.S	3Y5477A01	1	1		
A-2	SIDE PANEL (L-R)	S.S	3Y5476G01	1	1		
A-3	REAR PANEL (R-R)	S.S	3Y5478M01	1	1		
A-4	REAR PANEL (L-R)	S.S	3Y5479M01	1	1		
A-5	TOP PANEL (R)	S.S	1H4775G01	1	1		
A-19	GUARD - RINSE (R)	S.S	3Y5480M01	1	1		
B-1	FLUSH TANK (R)	S.S	1H4771G01	1	1		
B-14	RINSE PIPE (LO)	S.S	3Y2352G01	1	1		
B-15	RINSE PIPE (UP)	S.S	3Y2354G01	1	1		
B-39	RACK RAIL (B-R)	S.S	3Y4827G02	1	1		
B-40	RACK RAIL (A-R)	S.S	3Y4826G01	1	1		
B-81	SWITCH PLATE (R)	S.S	4Y6430G01	2	2		
C-1	BOOSTER TANK (R)	S.S	3Y5471G01	1	1		
C-2	BASE - BOOSTER (R)	S.S	3Y5474M01	1	1		
C-4	SIDE PANEL (R) - BOOSTER (R)	S.S	2X0310M01	1	1		
C-5	SIDE PANEL (L) - BOOSTER (R)	S.S	2X0311M01	1	1		
C-46	BRACKET (B) - BOOSTER (R)	S.S	3Y5475M01	1	1		
K-1	WASH SPRAY ARM (UP-R)	S.S	2H8382G01	1	1		
S-1	WASH SPRAY ARM (LO-R)	S.S	2H8383G01	1	1		
Z-5	OPERATION BOX (A-R)	S.S	3Y5481G01	1	1		
Z-6	COVER - OPERATION BOX (A-R)	S.S	4Y7044G01	1	1		
Z-11	BOX - TABLE LIMIT SWITCH (R)	S.S	3Y5484G01	1	1		
Z-14	BRACKET (R) - MAGNET	S.S	4Y4390G01	1	1		