

This parts list contains the part numbers and description of the replacment parts available for this model. To avoid costly and time consuming errors, double check the model and voltage before ordering a part.

Table of Contents


Cabinet		 ٠	 				-				 					 . pag	je 2
Water System			 								 					 . pag	je 3
Refrigeration Syst	tem		 								 					 . pag	je 4
Electrical			 								 					 . pag	je 5
ERC611			 								 					 . pag	je 6
ВН900			 								 					 . pag	je 7
BH1650			 								 					 . pag	je 8
Kit Parts			 								 					 . pag	je 9
Wiring Diagrams			 								 					pag	e 10

Cabinet

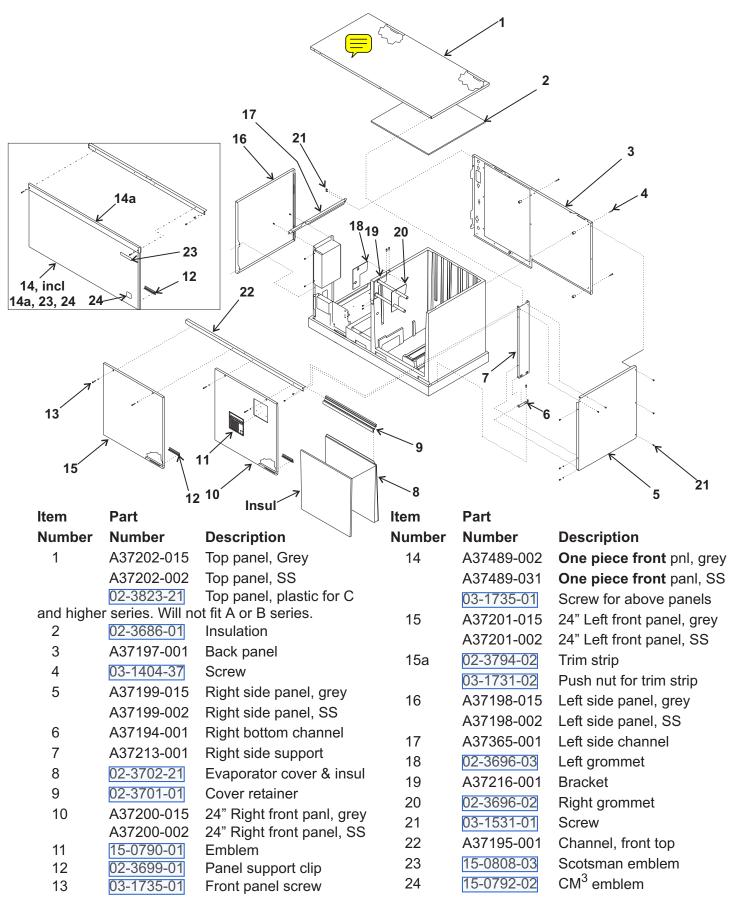


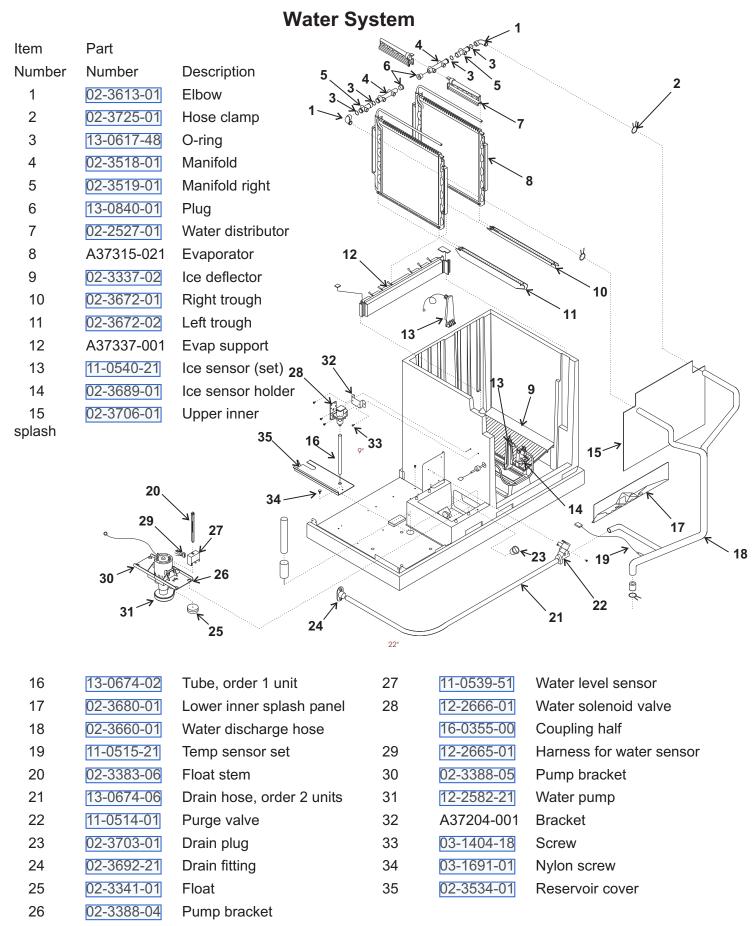

Refrigeration

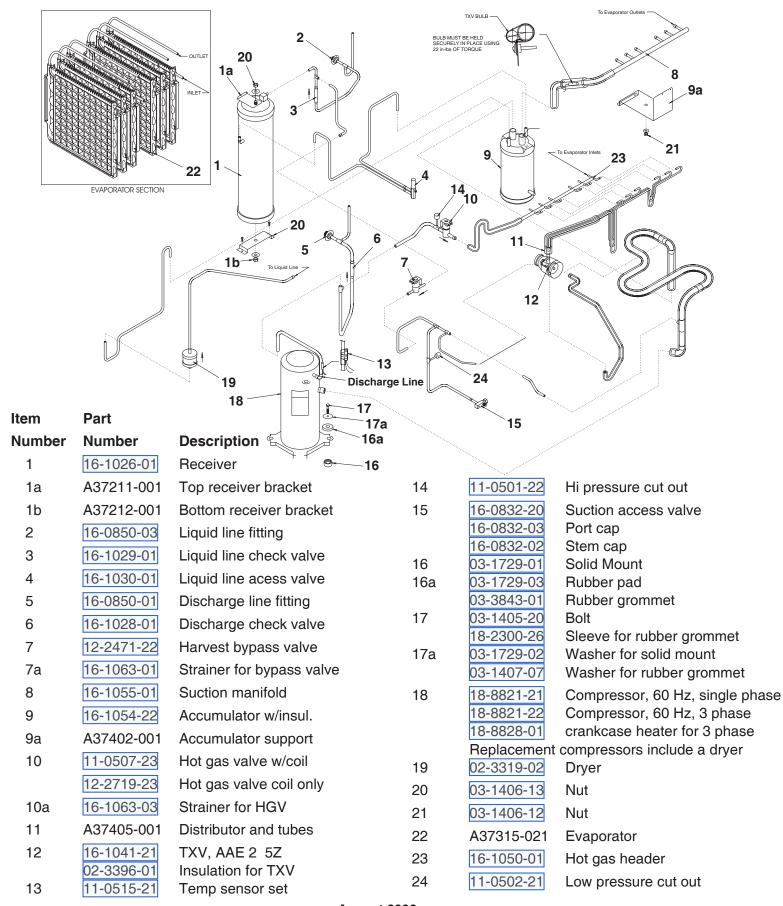


Electrical

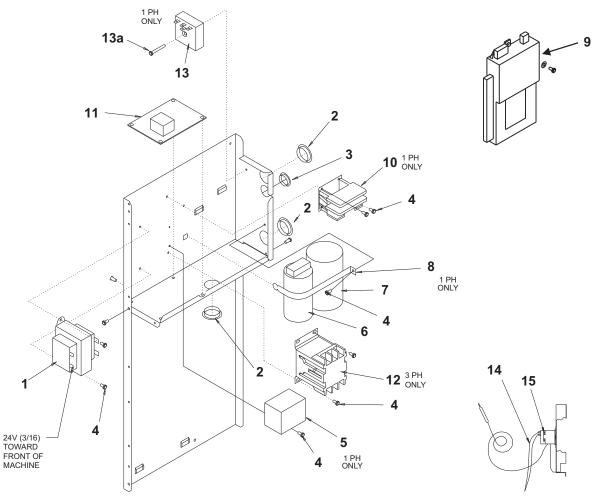

Item	Part	
Number	Number	Description
1	A37217-001	Transformer
2	12-1213-11	Snap bushing
3	12-1213-10	Snap bushing
4	03-1531-01	Screw
5	18-1903-55	60 Hz potential relay
6	18-1902-59	Run capacitor
7	18-1901-58	60 Hz start capacitor
8	A37366-001	Strap
9	12-2838-24	Controller
10	12-2595-01	Single phase contactor
11	11-0531-22	Purge valve timer
12	12-2533-01	3 phase contactor
13	11-0530-01	Time delay relay
13a	03-1531-10	Screw

Item	Part	
Number	Number	Description
14	12-2701-01	Bin thermo harness
15	11-0521-21	Bin thermostat
Not Show	n:	
	02-3740-01	Thermostat bracket
	03-1675-03	3 pronged knob
	12-2663-02	Lo voltage harness
	12-2732-01	Hi voltage harness

ERC611 Remote Condenser

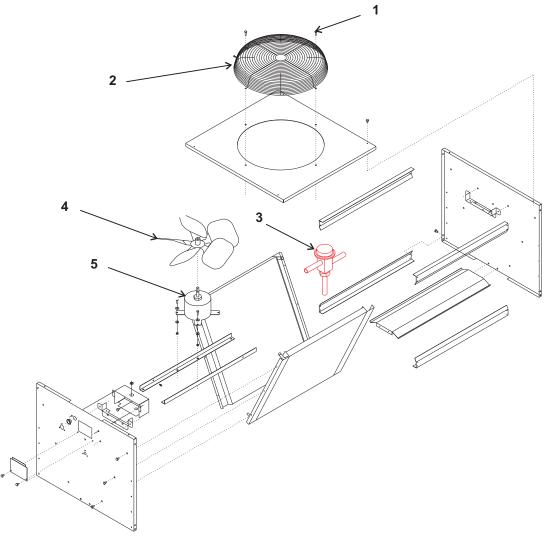


Item	Part	
Number	Number	Description
1	03-1405-08	Screw
2	02-3770-01	Fan guard
3	11-0422-22	Headmaster
4	18-8820-01	Fan blade
5	12-2717-01	Fan motor


Not Shown:

A37169-001	Leg
A37296-001	Leg brace
03-1645-01	Screw for legs
16-0850-01	Quick connect, discharge
16-0850-03	Quick connect, liquid

BH900 Ice Storage Bin

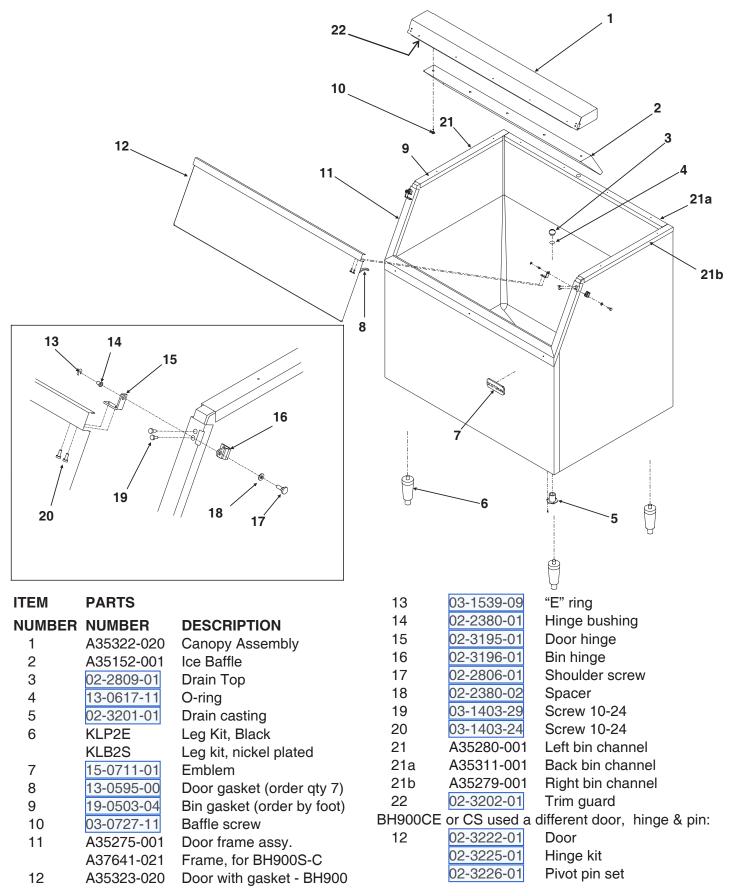


BH1650 Ice Storage Bin

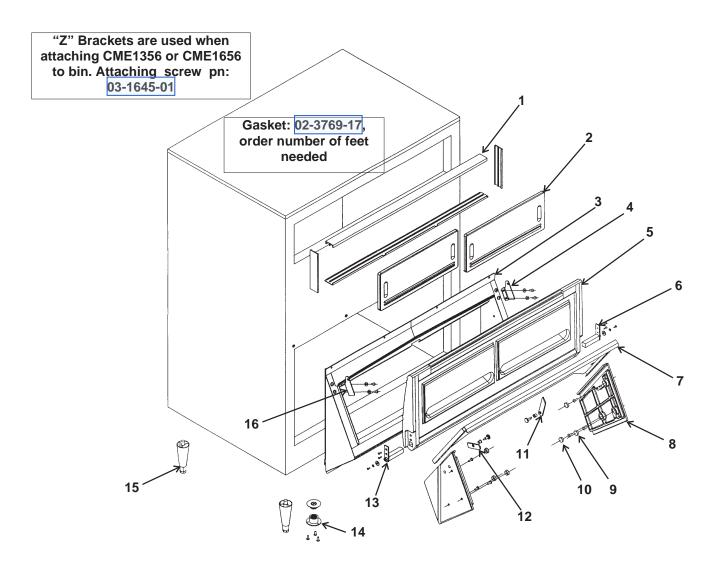


Item	Part		10	02-3769-14	Plugs for end plate
Number	Number	Description	11	02-3769-10	Catch for ice gate
1	02-3769-02	Track	12	02-3769-15	Ice gate retainer
2	02-3769-16	Window	13	02-3769-06	Left hinge
3	02-3769-04	Lower frame assembly	14	02-3769-01	Plastic drain
4	02-3769-08	Left and right hinges	15	KLP2S	Legs
5	02-3769-05	Door with door hinges	Not Illus	strated:	
6	02-3769-07	Right hinge		02-3769-18	Probe tool
7	02-3769-09	Ice gate		02-3769-19	Plastic Ice shovel.
8	02-3769-12	End plate guide (pair)		02-3775-01	Z brackets
9	02-3769-13	Screws for end plate			


CME2006R Service Parts Kit Parts

Stacking Kit - KSCME6-LG-B

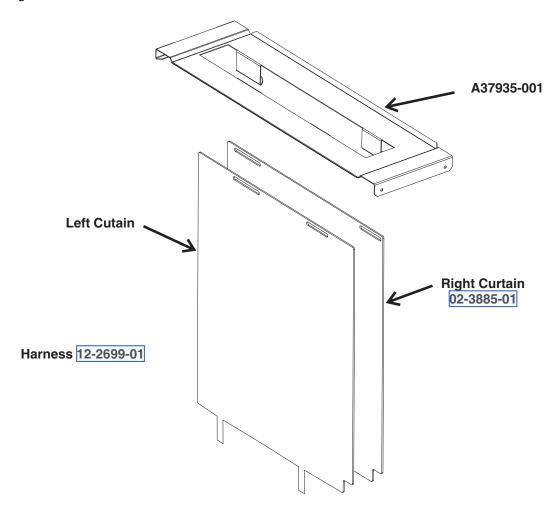

Single Phase Wiring Diagram

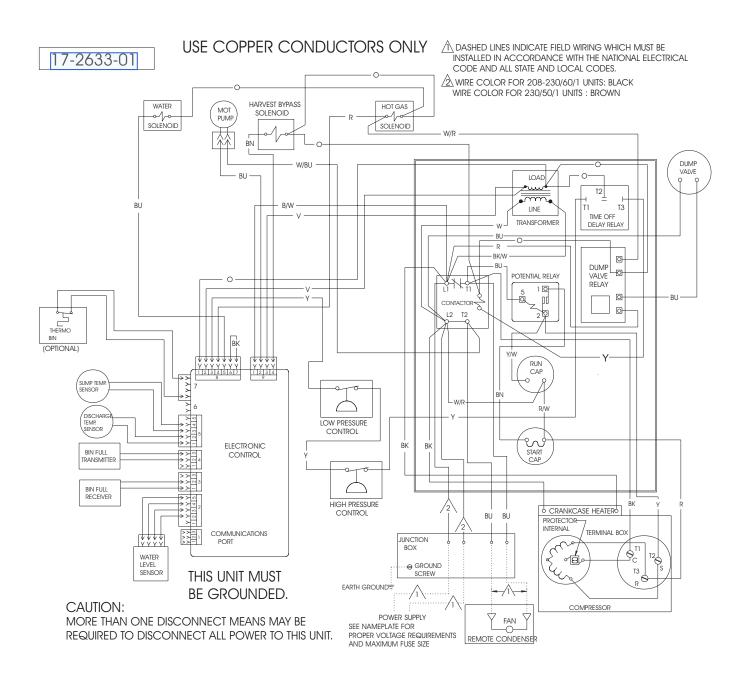


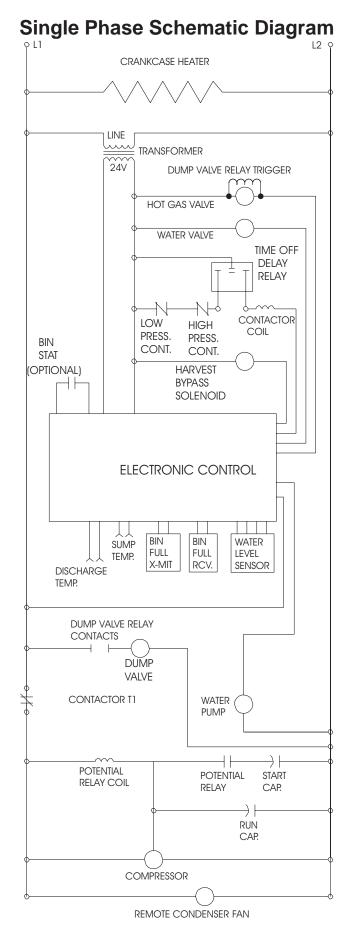


July 1998 Page 11

Three Phase Wiring Diagram

17-2626-01 USE COPPER CONDUCTORS ONLY

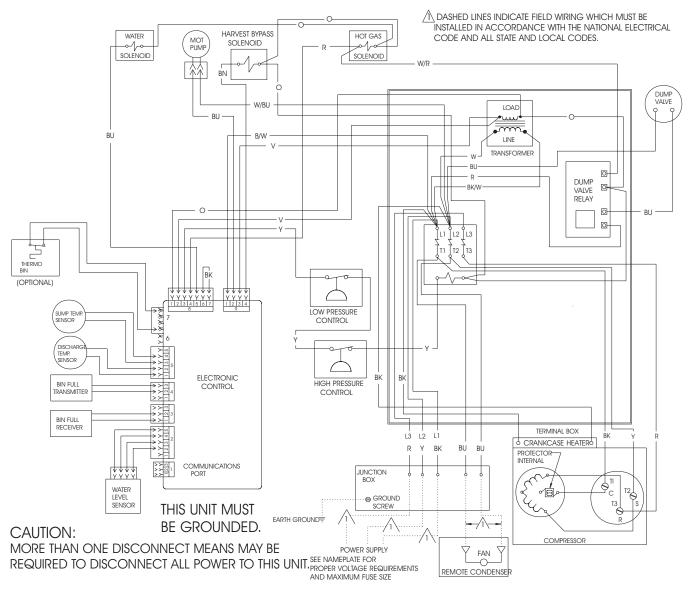

Three Phase Schematic Diagram

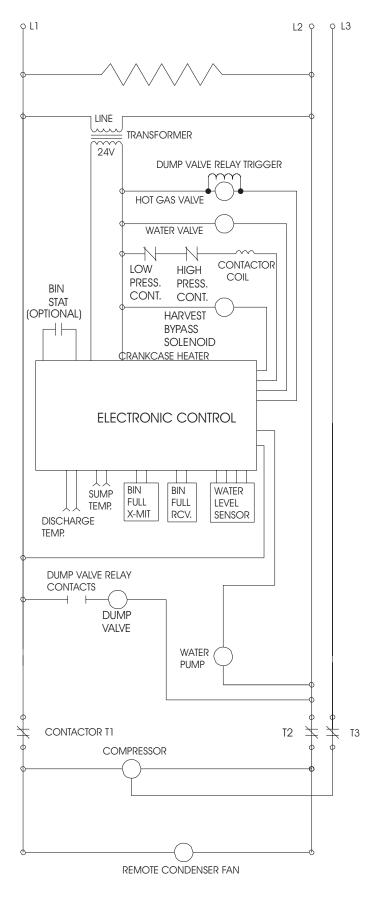



Bulletin Number: PS - 4 - 2004 Bulletin Date: April 2004

SERVICE BULLETIN

Subject: Controller Cover

Affects all versions of models: CME1356, CME1656, CME1856 and CME2006

The above models are now manufactured with a sheet metal cover over the top of the controller.

Service controllers also are now shipped with a cover that should be applied to these models whenever replacing the controller if the machine does not already have a cover installed.

Whenever cleaning or servicing any unit, check to see whether it has a cover over the controller like the one shown below. If it does not, Scotsman recommends installing a cover. A separate part is now available for this purpose. Its part number is **A37480-021**. It mounts over the top end of the controller and is secured by two sheet metal screws. Use the cover as a template and drill two 1/8" holes for the two screws.



Controller Cover



Cover Installed on Unit

Scotsman is shipping a supply of covers to all Scotsman Distributors and listed service agencies. A supply of covers should be carried by each service person on service calls so a cover may be installed on the unit being cleaned or serviced if one is not already in place. Additional covers may be obtained free of charge from Scotsman, through the local Scotsman Distributor, as needed.