NO. 71242 ISSUED: May 26, 2005

REVISED: August 21, 2009



HOSHIZAKI STACKABLE CRESCENT CUBER

MODELS

KM-1800SAH

KM-1800SAH3

KM-1800SWH

KM-1800SWH3

KM-1800SRH

KM-1800SRH3

PARTS LIST

CONTENTS

Note About Ordering Parts	3
Material Abbreviations	4
A. Ice Cuber Assembly	5
KM-1800SAH	5
KM-1800SAH3	8
KM-1800SWH, KM-1800SWH3	11
KM-1800SRH, KM-1800SRH3	13
B. Refrigeration Circuit	15
KM-1800SAH, KM-1800SAH3	15
KM-1800SWH, KM-1800SWH3	20
KM-1800SRH, KM-1800SRH3	25
C. Water Circuit	30
KM-1800SAH, KM-1800SAH3, KM-1800SWH, KM-1800SWH3, KM-1800SRH,	
KM-1800SRH3	30
D. Control Box Assembly	33
KM-1800SAH, KM-1800SAH3	33
KM-1800SAH, KM-1800SAH3, KM-1800SWH, KM-1800SWH3, KM-1800SRH,	
KM-1800SRH3	34
E. Label Location	
KM-1800SAH, KM-1800SAH3	36
KM-1800SWH, KM-1800SWH3	40
KM-1800SRH, KM-1800SRH3	42
F. Capacitor Box Assembly	
KM-1800SAH, KM-1800SWH, KM-1800SRH	
F. Transformer Box Assembly	
KM-1800SAH3, KM-1800SWH3, KM-1800SRH3	46
G. Evaporator	48
KM-1800SAH, KM-1800SAH3, KM-1800SWH, KM-1800SWH3, KM-1800SRH,	
KM-1800SRH3	
H. Pump Motor Assembly	49
KM-1800SAH, KM-1800SAH3, KM-1800SWH, KM-1800SWH3, KM-1800SRH,	
KM-1800SRH3	49
J. Accessories & Packaging	51
KM-1800SAH, KM-1800SAH3, KM-1800SWH, KM-1800SWH3, KM-1800SRH,	
KM-1800SRH3	51

KM-1800SAH	L-0 M-0 M-1 N-0 N-1 P-0 P-1 Q-0	December 2000 March 2002 May 2002 December 2002 March 2003 December 2003 June 2004 December 2004
KM-1800SAH3	L-0 M-1 N-0 N-1 P-0 P-1 Q-0	December 2000 August 2002 February 2003 March 2003 January 2004 June 2004 January 2005
KM-1800SWH	Q-0	June 2005
KM-1800SWH3	Q-0	June 2005
KM-1800SRH	Q-0	April 2005
KM-1800SRH3	Q-0	April 2005

Note About Ordering Parts

Most assemblies cannot be ordered as complete units; parts in the assemblies generally must be ordered separately.

Material Abbreviations

ALUMINUM

AL = Aluminum

COPPER

CU = Copper

PLASTIC

ABS = Acrylonitrile -butadiene - styrene

AC = Polyacetal

EVA = Ethylene vinyl acetate
PA = Polyamide = Nylon
PC = Polycarbonate
PE = Polyethylene
PES = Polyester

PETP = Polyethylene terephthalate = Tetlon

PP = Polypropylene PS = Polystyrene

PTFE = Polytetrafluoroethylene = Teflon

PUR = Polyurethane PVC = Polyvinyl chloride

RUBBER

VN = Vinyl Nitrile EPDM = EP rubber

NBR = Nitrile butadiene rubber

NR = Natural rubber
NP = Neoprene
SI.R = Silicone rubber
SY.R = Synthetic rubber
EPH = Epichlorohydrin

STEEL

GS = Galvanized steel
SS = Stainless steel
PS = Plated steel
PAS = Primed steel

AUXILIARY CODE

K-0

Designates the year. "K" indicates the year 2000. Years progress or regress in alphabetical order.

"J" is 1999, "L" is 2001, "M" is 2002, and so on. The letters "I" and "O" were skipped.

Designates significant part changes within the same year for this model. Base is 0 and this number

Designates significant part changes within the same year for this model. Base is 0 and this number advances for each change.


Example: P-1

T "P" indicates 2004.

"1" indicates the first significant part change for 2004.

A. Ice Cuber Assembly KM-1800SAH

L-0, M-0, M-1, N-0, N-1, P-0, P-1, Q-0

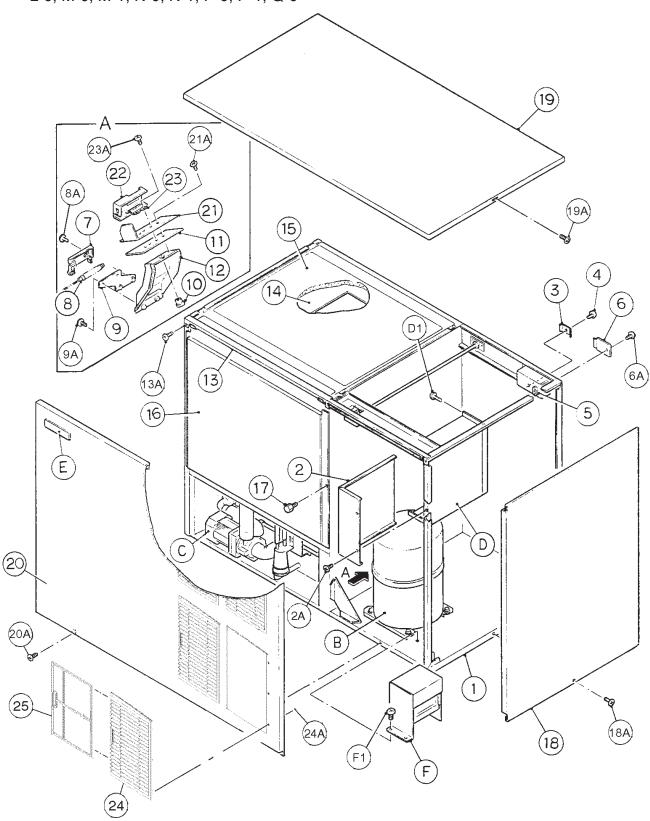


Title: A.	. Ice Cuber Assembly Model:	KM-1800SAH										
						F	Require	ed Nu	mber			
							M-1					
Index		Material or		L-00006M to	L-00086J to		to					
No.	Description	Model Number	Part Number	L-00085C	L-00105J	M-0	Q-0					
В	REFRIGERATION CIRCUIT	-	1A0533A02	1	-							
			1A0533A04		1	1	1					
С	WATER CIRCUIT	-	105122A05	1	1	1	1					
D	CONTROL BOX ASSEMBLY	-	2A1122A03	1	1	1	-					
			2A2527A01				1					
D1	T2 SCREW	4×8	7P31-0408	2	2	2	2					
E	LABEL LOCATION	-	2A2003A02	1	1	1	-					
			2A2558A02				1					
F	CAPACITOR BOX ASSEMBLY	-	3A1003A02	1	-							
			3A2054A02		1	1	1					
F1	T2 SCREW	4×8	7P31-0408	2	2	2	2					
1	EVAPORATOR CASE	-	2A1102G07	1	1	-						
			2A2100G02			1	1					
2	CONTROL BOX COVER	GS	3A0174-01	1	1	1	-					
			3A2386-01				1					
2A	T2 SCREW	4×8	7P31-0408	3	3	3	3					
3	SQUARE WASHER	BRASS	433537-02	1	1	1	1					
4	SCREW - GROUNDING	BRASS	433304-02	1	1	1	1					
5	BUSHING	SR-34-2	420472-05	1	1	1	1					
6	JUNCTION BOX COVER	GS	433410-01	1	1	1	1					
6A	T2 SCREW	4×8	7P31-0408	1	1	1	1					
7	BULB HOLDER	PE	328919-01	1	1	1	1					
8	SPACER	PE	443545-01	1	1	1	2					
8A	T2 SCREW	4×16, SS	7P32-0416	2	2	2	2					
9	BULB HOLDER (C)	ABS	325845G01	1	1	1	1					
9A	TRUSS HEAD SCREW	4×12, SS	7C32-0412	2	2	2	2					
10	BUSHING	EPDM	425307-01	1	1	1	1					
11	SPACER	ABS	439727-01	1	1	1	1					
12	BULB HOLDER (D)	ABS	215644G01	1	1	1	1					
13	FRONT PANEL - BRACKET	SS	323903-01	1	1	1	1					
13A	T2 SCREW	4×12, SS	7P32-0412	3	3	3	3					
14	SPACER	ABS	324321-01	1	1	1	1					
15	TOP INSULATION	ABS, PE	324216G01	1	1	1	1					
16	FRONT INSULATION	ABS, PE	326041G01	1	1	1	1		†			
17	THUMBSCREW	ABS, SS	415949G01	1	1	1	1					
18	SIDE PANEL (R)	SS	215381G02	1	1	1	1					
18A	TRUSS HEAD SCREW	4×8, SS	7C32-0408	3	3	3	3					
19	TOP PANEL	SS	2A2096-01	1	1	1	1					
19A	TRUSS HEAD SCREW	4×8, SS	7C32-0408	3	3	3	3					
20	FRONT PANEL	SS	3A1800G01	1	1	1	1			\vdash	\vdash	
20A	TRUSS HEAD SCREW	4×16, SS	7C32-0416	2	2	2	2					†
21	BULB HOLDER (E)	GS	439725-01	1	1	1	1					
21A	TRUSS HEAD SCREW	4×12, SS	7C32-0412	2	2	2	2					
22	BULB HOLDER (F)	GS	328743-01	1	1	1	1					
	POLD HOLDER (F)	140	020740-UI			'_	'_				<u> </u>	

Title: A.	. Ice Cuber Assembly Model: I	KM-1800SAH									
						F	Requir	ed Nu	mber		
Index No.	Description	Material or Model Number		L-00006M to L-00085C	to		M-1 to Q-0				
23	BULB HOLDER (G)	GS	439726-01	1	1	1	1				
23A	TRUSS HEAD SCREW	4×6, SS	7C32-0406	2	2	2	2				
24	LOUVER (B)	PP	1A0548-01	4	4	4	4				
24A	PUSH RETAINER	-	4A2414-01	12	12	12	12				
25	AIR FILTER (B)	PP	2A2063G01	4	4	4	4				

A. Ice Cuber Assembly KM-1800SAH3


L-0, M-1, N-0, N-1, P-0, P-1, Q-0

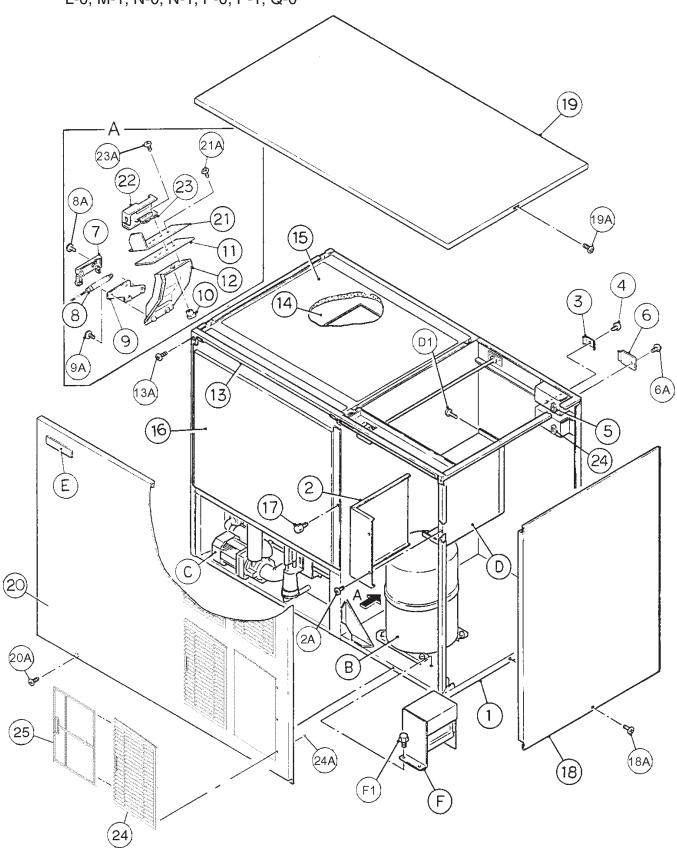

Title: A	. Ice Cuber Assembly Model: I	KM-1800SAH3								
						Requ	red N	umber		
					M-1					
Index No.	Description	Material or Model Number	Part Number	L-0	to Q-0					
В	REFRIGERATION CIRCUIT	Model Number	1A0533A01	1	Q-U					
Ь	REPRIGERATION CIRCUIT	-	1A0533A01	'	1					
С	WATER CIRCUIT		105122A05	1	1					
	CONTROL BOX ASSEMBLY	-	2A1122A03	1	<u> </u>					
D	CONTROL BOX ASSEMBLE	-	2A2527-01		1					
D1	T2 SCREW	4×8	7P31-0408	3	3			-		
E	LABEL LOCATION	4x0	2A2003A01	1	3			\vdash		
_	LABEL LOCATION	-	2A2558A01	-	1			-	-	
F	TRANSFORMER BOX		3A1102A01	1	1			-		
	ASSEMBLY	-								
F1	HEX HEAD BOLT W/WASHER (LF)	5×10	7B0130510	4	4					
1	EVAPORATOR CASE	-	2A1102G07	1	-					
			2A2100G02		1					
2	CONTROL BOX COVER	GS	3A0174-01	1	-					
			3A2386-01		1					
2A	T2 SCREW	4×8	7P31-0408	3	3					
3	SQUARE WASHER	BRASS	433537-02	1	1					
4	SCREW - GROUNDING	BRASS	433304-02	1	1					
5	BUSHING	SR-34-2	420472-05	1	1					
6	JUNCTION BOX COVER	GS	433410-01	1	1					
6A	T2 SCREW	4×8	7P31-0408	1	1					
7	BULB HOLDER	PE	328919-01	1	1					
8	SPACER	PE	443545-01	1	2					
8A	T2 SCREW	4×16, SS	7P32-0416	2	2					
9	BULB HOLDER (C)	ABS	325845G01	1	1					
9A	TRUSS HEAD SCREW	4×12, SS	7C32-0412	2	2					
10	BUSHING	EPDM	425307-01	1	1					
11	SPACER	ABS	439727-01	1	1					
12	BULB HOLDER (D)	ABS	215644G01	1	1					
13	FRONT PANEL - BRACKET	SS	323903-01	1	1					
13A	T2 SCREW	4×12, SS	7P32-0412	3	3					
14	SPACER	ABS	324321-01	1	1					
15	TOP INSULATION	ABS, PE	324216G01	1	1					
16	FRONT INSULATION	ABS, PE	326041G01	1	1					
17	THUMBSCREW	ABS, SS	415949G01	1	1					
18	SIDE PANEL (R)	SS	215381G02	1	1					
18A	TRUSS HEAD SCREW	4×8, SS	7C32-0408	3	3					
19	TOP PANEL	SS	2A2096-01	1	1					
19A	TRUSS HEAD SCREW	4×8, SS	7C32-0408	3	3					
20	FRONT PANEL	SS	3A1800G01	1	1					
20A	TRUSS HEAD SCREW	4×16, SS	7C32-0416	2	2					
21	BULB HOLDER (E)	GS	439725-01	1	1					
21A	TRUSS HEAD SCREW	4×12, SS	7C32-0412	2	2					
22	BULB HOLDER (F)	GS	328743-01	1	1					


Title: A	. Ice Cuber Assembly Model:	KM-1800SAH3								
						Requi	red N	umber		
					M-1					
Index		Material or			to					
No.	Description	Model Number	Part Number	L-0	Q-0					
23	BULB HOLDER (G)	GS	439726-01	1	1					
23A	TRUSS HEAD SCREW	4×6, SS	7C32-0406	2	2					
24	LOUVER (B)	PP	1A0548-01	4	4					
24A	PUSH RETAINER	-	4A2414-01	12	12					
25	AIR FILTER (B)	PP	2A2063G01	4	4					

A. Ice Cuber Assembly KM-1800SWH, KM-1800SWH3

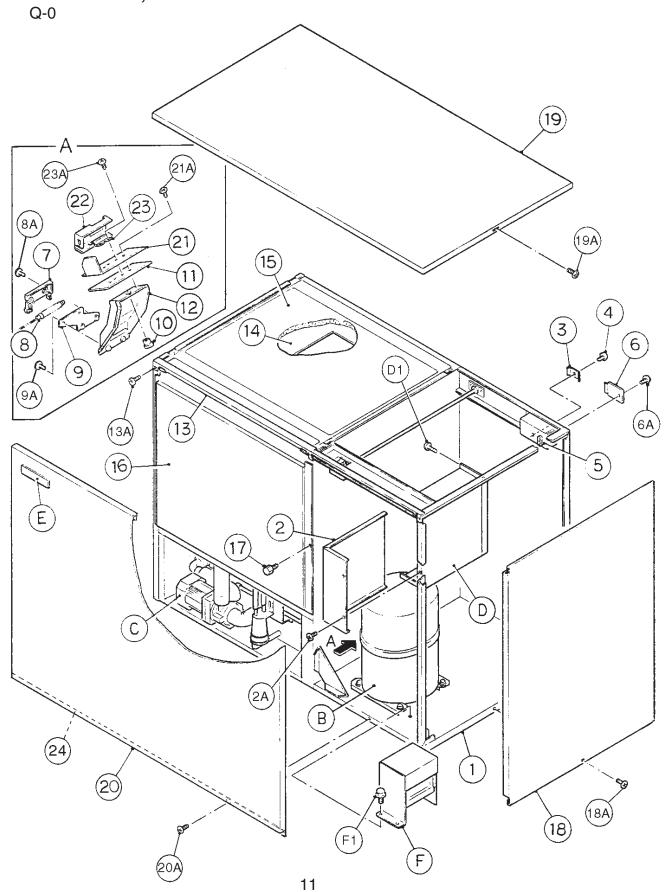


Title: A.	Ice Cuber Assembly Model: I		M-1800SWH3							
	,	-				Requi	ired Nu	umber		
Index		Material or				1 43				
No.	Description	Model Number	Part Number	Q-0						
В	REFRIGERATION CIRCUIT	KM-1800SWH	1A1069A01	1						
		KM-1800SWH3	1A1069A02	1						
С	WATER CIRCUIT	-	105122A05	1						
D	CONTROL BOX ASSEMBLY	-	2A2527A01	1						
D1	T2 SCREW	4×8	7P31-0408	3						
Е	LABEL LOCATION	KM-1800SWH	2A3508A01	1						
		KM-1800SWH3	2A3509A01	1						
F	CAPACITOR BOX ASSEMBLY	KM-1800SWH	3A2054A02	1						
	TRANSFORMER BOX ASSEMBLY	KM-1800SWH3 HS-0126	3A1102A01	1						
F1	T2 SCREW	KM-1800SWH 4×8	7P31-0408	2						
	HEX HEAD BOLT W/WASHER (LF)	KM-1800SWH3 5×10	7B0130510	4						
1	EVAPORATOR CASE	-	2A2100G04	1						
2	CONTROL BOX COVER	GS	3A2386-01	1						
2A	T2 SCREW	4×8	7P31-0408	3						
3	SQUARE WASHER	BRASS	433537-02	1		ļ				
4	SCREW - GROUNDING	BRASS	433304-02	1						
5	BUSHING	SR-34-2	420472-05	1						
6	JUNCTION BOX COVER	GS	433410-01	1						
6A	T2 SCREW	4×8	7P31-0408	2						
7	BULB HOLDER	PE	328919-01	1		ļ				
8	SPACER	PE	443545-01	2				\sqcup		
8A	T2 SCREW	4×16, SS	7P32-0416	2						
9	BULB HOLDER (C)	ABS	325845G01	1		ļ				
9A	TRUSS HEAD SCREW	4×12, SS	7C32-0412	2		-				
10	BUSHING	EPDM	425307-01	1		-		\vdash		
11	SPACER	ABS	439727-01	1		-				
12	BULB HOLDER (D)	ABS	215644G01	1		+				
13	FRONT PANEL - BRACKET	SS 4×12, SS	323903-01	1		1				
13A 14	T2 SCREW SPACER	ABS	7P32-0412 324321-01	3 1						
15	TOP INSULATION	ABS, PE	324216G01	1		1				
16	FRONT INSULATION	ABS, PE	326041G01	1	\vdash	+	$\vdash \vdash \vdash$	\vdash		
17	THUMBSCREW	ABS, FE	415949G12	1	 	+	$\vdash \vdash \vdash$	$\vdash \vdash$		
18	SIDE PANEL (R)	SS	215381G02	1	 	+	$\vdash \vdash \vdash$	$\vdash \vdash$		
18A	TRUSS HEAD SCREW	4×8, SS	7C32-0408	3	 	+	$\vdash \vdash \vdash$	\vdash		
19	TOP PANEL	SS	2A2255-01	1		+	$\vdash \vdash \vdash$	\vdash		
19A	TRUSS HEAD SCREW	4×8, SS	7C32-0408	3		t	\vdash	\vdash		
20	FRONT PANEL	SS	3A1838G01	1		1	-			
20A	TRUSS HEAD SCREW	4×16, SS	7C32-0416	2		1				
21	BULB HOLDER (E)	GS	439725-01	1		1				
21A	TRUSS HEAD SCREW	4×12, SS	7C32-0412	2		†				
22	BULB HOLDER (F)	GS	328743-01	1			М			
23	BULB HOLDER (G)	GS	439726-01	1			М			
23A	TRUSS HEAD SCREW	4×6, SS	7C32-0406	2			М			
24	GASKET	L=1219	4A0808L02	1			П			
- '	5		., 10000202	<u> </u>		1				

A. Ice Cuber Assembly KM-1800SRH, KM-1800SRH3 Q-0

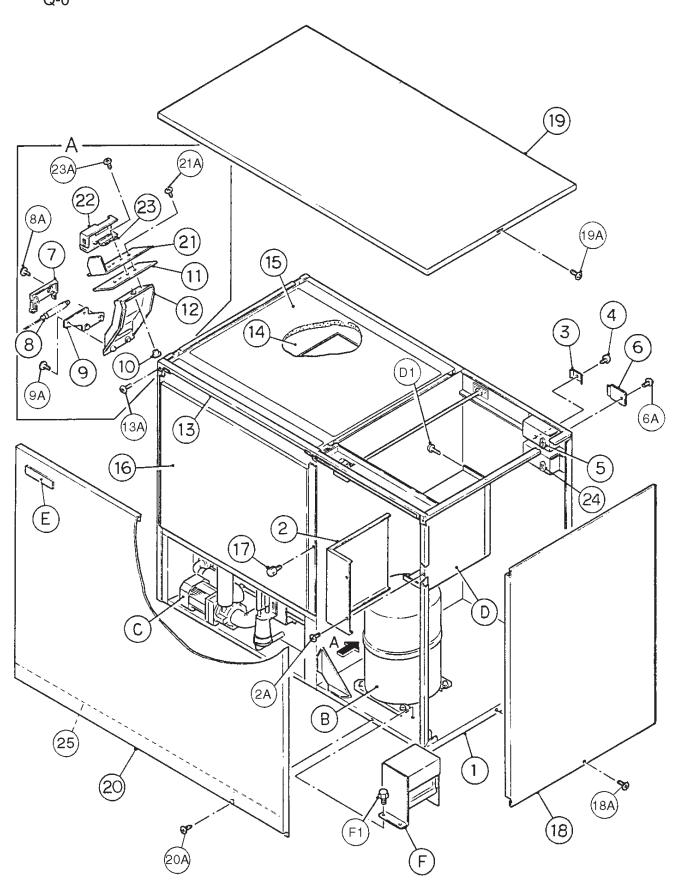

Title: A.	. Ice Cuber Assembly Model: I	KM-1800SRH, K	M-1800SRH3								
la day		Material or				Requi	red N	umbei	,		
Index No.	Description	Model Number	Part Number	Q-0		<u> </u>					
В	REFRIGERATION CIRCUIT	KM-1800SRH		1		<u> </u>	<u> </u>		<u> </u>		<u> </u>
	THE THIGE IN THE ON CHILDON	KM-1800SRH3				<u> </u>	<u> </u>	 			
С	WATER CIRCUIT	-	105122A05	1				 			
D	CONTROL BOX ASSEMBLY	_	2A2527A01	1							
D1	T2 SCREW	4×8	7P31-0408	3							
E	LABEL LOCATION	KM-1800SRH		1							
_	LABEL LOCATION	KM-1800SRH3		'		<u> </u>	<u> </u>		 	 	
F	CAPACITOR BOX ASSEMBLY	KM-1800SRH		1		<u> </u>	<u> </u>		 	 	<u> </u>
'	TRANSFORMER BOX	KM-1800SRH3		1		<u> </u>	<u> </u>		<u> </u>		
	ASSEMBLY	HS-0126	0/11/02/101	'							
F1	T2 SCREW	KM-1800SRH 4×8	7P31-0408	2							
	HEX HEAD BOLT W/WASHER (LF)	KM-1800SRH3 5×10	7B0130510	4							
1	EVAPORATOR CASE	-	2A2100G02	1							
2	CONTROL BOX COVER	GS	3A2386-01	1							
2A	T2 SCREW	4×8	7P31-0408	3						 	
3	SQUARE WASHER	BRASS	433537-02	2						 	
4	SCREW - GROUNDING	BRASS	433304-02	2		<u> </u>	<u> </u>				<u> </u>
5	BUSHING	SR-34-2	420472-05	1				 			
6	JUNCTION BOX COVER	GS	433410-01	2				 			
6A	T2 SCREW	4×8	7P31-0408	2							
7	BULB HOLDER	PE	328919-01	1					_	_	_
8	SPACER	PE	443545-01	2					_	 	-
8A	T2 SCREW	4×16, SS	7P32-0416	2		<u> </u>	<u> </u>			-	
9	BULB HOLDER (C)	ABS	325845G01	1		<u> </u>	<u> </u>		 	 	l
9A	TRUSS HEAD SCREW	4×12, SS	7C32-0412	2		<u> </u>	<u> </u>		<u> </u>	-	l
10	BUSHING	EPDM	425307-01	1							
11	SPACER	ABS	439727-01	1		<u> </u>				-	
12	BULB HOLDER (D)	ABS	215644G01	1					_	-	
13	FRONT PANEL - BRACKET	SS	323903-01	1		<u> </u>				-	
13A	T2 SCREW	4×12, SS	7P32-0412	3							
14	SPACER	ABS	324321-01	1		<u> </u>		 			
15	TOP INSULATION	ABS, PE	324216G01	1		<u> </u>	<u> </u>		 	 	
16	FRONT INSULATION	ABS, PE	326041G01	1					 	\vdash	
17	THUMBSCREW	ABS, SS	415949G12	1		<u> </u>	<u> </u>			\vdash	
18	SIDE PANEL (R)	SS	215381G02	1						\vdash	-
18A	TRUSS HEAD SCREW	4×8, SS	7C32-0408	3			<u> </u>		-	\vdash	<u> </u>
19	TOP PANEL	4x0, 33 SS	2A2255-01	1			<u> </u>		-	\vdash	<u> </u>
19A	TRUSS HEAD SCREW	4×8, SS	7C32-0408	3	$\vdash \vdash \vdash$			\vdash	_	\vdash	-
20	FRONT PANEL	SS	3A1838G01	1		<u> </u>	<u> </u>				<u> </u>
20A	TRUSS HEAD SCREW	4×16, SS	7C32-0416	2	$\vdash \vdash \vdash$		<u> </u>			\vdash	-
21	BULB HOLDER (E)	GS	439725-01	1					 		
21A	TRUSS HEAD SCREW	4×12, SS	7C32-0412	2					 	 	
22	BULB HOLDER (F)	GS	328743-01	1	$\vdash \vdash$			\vdash	\vdash	\vdash	\vdash
23	BULB HOLDER (G)	GS	439726-01	1		<u> </u>	<u> </u>			\vdash	
23A	TRUSS HEAD SCREW	4×6, SS	7C32-0406	2		<u> </u>	<u> </u>		-	\vdash	
23A 24	BUSHING	SR-30-1	420472-03	1		<u> </u>	<u> </u>			-	
25	GASKET		4A0808L02	1			<u> </u>			\vdash	
25	IGAOREI	L=1219	HAU0U0LU2							L	<u> </u>


B. Refrigeration Circuit 1/2 KM-1800SAH, KM-1800SAH3 L-0, M-0, M-1, N-0, N-1, P-0, P-1, Q-0

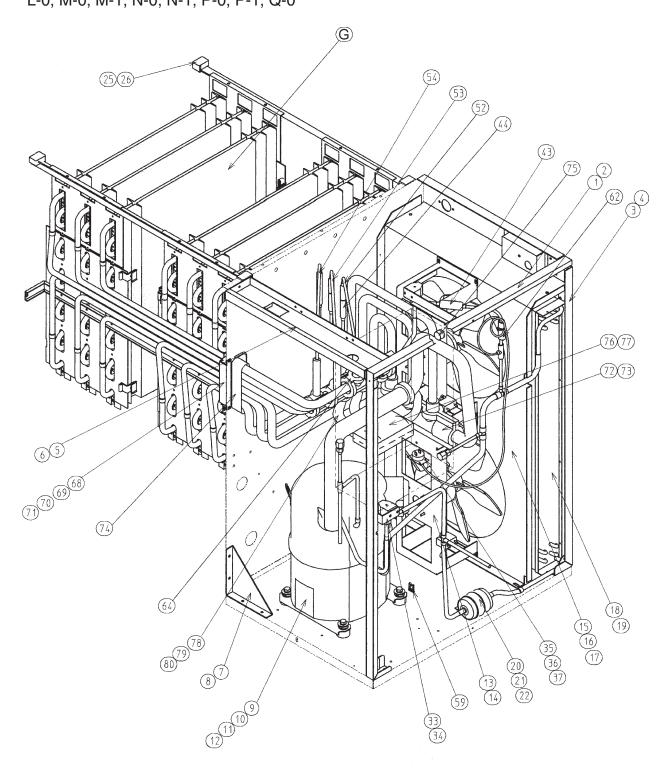

B. Refrigeration Circuit 2/2

KM-1800SAH, KM-1800SAH3

L-0, M-0, M-1, N-0, N-1, P-0, P-1, Q-0

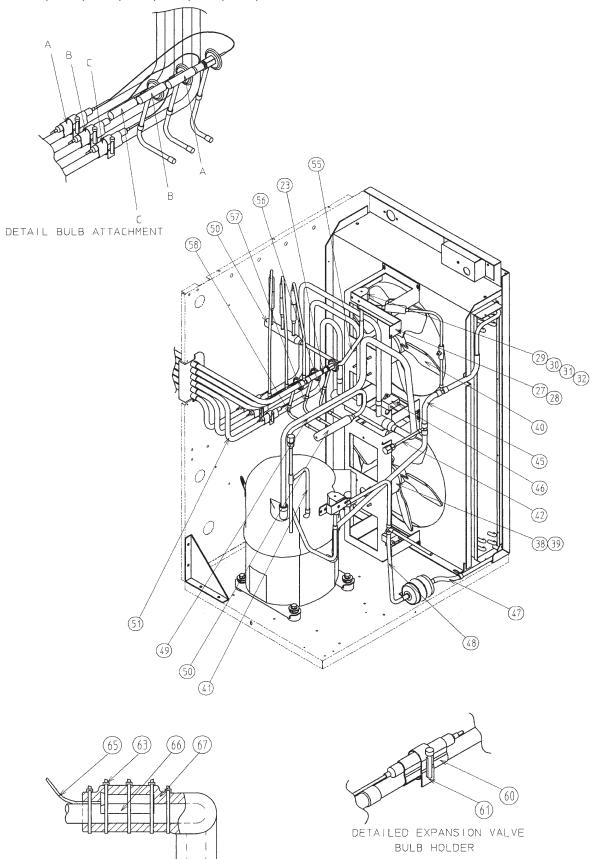


Title: B.	Refrigeration Circuit Model:	 KM-1800SAH, K	M-1800SAH3								
		,					Requi	red N	umber		
					M-1						
Index		Material or		L-0	to	P-1					
No.	Description	Model Number		M-0	P-0	Q-0					
G	EVAPORATOR	-	105103A01	1	1	1					
1	SIDE FRAME (A)	GS	215375G01	1	1	1					
2	T2 SCREW	4×8	7P31-0408	3	3	3					
3	SIDE FRAME (B)	GS	215376G01	1	1	1					
4	T2 SCREW	4×8	7P31-0408	4	4	4					
5	FRONT FRAME	GS	325857-01	1	1	1					
6	T2 SCREW	4×8	7P31-0408	4	4	4					
7	BRACE	GS	325858-01	1	1	1					
8	T2 SCREW	4×8	7P31-0408	4	4	4					
9	COMPRESSOR	KM-1800SAH CS18K6E- PFV-237	4A2334-01	1	1	1					
		KM-1800SAH3 CS18K6E- TF5-237	4A2330-01	1	1	1					
10	BOLT	8×45	437889-01	4	4	4					
11	GROMMET	027-0167-00	434922-01	4	4	4					
12	SPACER	028-0188-02	434921-01	4	4	4					
13	FAN MOTOR BRACKET	GS	2A1979-01	2	2	2					
14	HEX HEAD BOLT W/WASHER (LF)	5×10	7N2100832	8	8	8					
15	SHROUD	GS	2A2021G01	1	1	1					
16	T2 SCREW	4×8	7P31-0408	2	2	2					
17	HEX HEAD BOLT W/WASHER (LF)	5×10	7N2100832	2	2	2					
18	CONDENSER	-	2A1991-01	1	1	1					
19	T2 SCREW	4×8	7P31-0408	2	2	2					
20	DRIER	CW-053-S	4A1461-01	1	-						
		-	4A2663-01		1	1					
21	DRIER BRACKET	GS	445251-01	1	-						
	NYLON TIE	-	8911-0301		1	1					
22	T2 SCREW	4×8	7P31-0408	1	-						
23	EXPANSION VALVE	HFE-10NHD-2	4A1414-01	3	3	3					
24	-	-	-								
25	FRAME SEAL	EPDM	323925-01	4	4	4					
26	T2 SCREW	4×12, SS	7P32-0412	6	6	6					
27	HOT GAS VALVE BRACKET	GS	442162-01	1	1	1					
28	T2 SCREW	4×8	7P31-0408	2	2	2					
29	VALVE BODY	70	440352-01	2	2	2					
30	COIL - VALVE	ABS-25-1- HD-2	440353-01	2	2	2					
31	BOLT	4×6	440353F01	2	2	2					
32	TRUSS HEAD SCREW	4×8	7C31-0408	4	4	4			Ì		
33	LINE VALVE BRACKET	GS	4A1406-01	1	1	1					
34	T2 SCREW	4×8	7P31-0408	2	2	2					
35	PRESSURE SWITCH	ACB-1UB09	433441-07	1	1	1					

Title: B.	. Refrigeration Circuit Model:	 KM-1800SAH. K	M-1800SAH3								
							Requi	red N	umber		
					M-1						
Index		Material or		L-0	to	P-1					
No.	Description	Model Number	Part Number	M-0	P-0	Q-0				 	
36	PRESSURE SWITCH BRCKT.	GS	434938-01	1	1	1					
37	T2 SCREW	4×8	7P31-0408	1	1	1				 	
38	FAN MOTOR	U90B1 7190-1031	440911-01	2	2	-					
		5KCP84DFK148S	4A3158-01			2					
39	SELF-LOCKING NUT	NO. 8-32	7N21I0832	8	8	8					
40	FAN BLADE	-	4A0197-01	2	2	2					
41	COPPER TUBE - ACCESS VALVE	COPPER	4A1497G01	1	1	1					
42	ACCESS VALVE	-	457729-01	2	2	2					
43	STRAINER	-	441569-02	1	1	1					
44	CHECK VALVE	SKC 30564	4A1373-01	3	3	3					
45	COPPER TUBE (A) - HIGH SIDE	COPPER	2A1998G01	1	1	1					
46	CAPACITOR	5MFD- 250VAC	443192-02	2	2	2					
47	COPPER TUBE (E) - HIGH	COPPER	4A2322-01	1	-						
	SIDE		3A2334G01		1	1					
48	COPPER TUBE (F) - HIGH SIDE	COPPER	3A1798G01	1	1	1					
49	HEAT EXCHANGER	-	1A0535G01	1	1	1					
50	HEADER - S	750489	441038-01	2	2	2					
51	COPPER TUBE - LOW SIDE	COPPER	1A0534G01	1	1	1					
52	COPPER TUBE (A) – LOW SIDE	COPPER	2A1986G01	1	1	1					
53	COPPER TUBE (B) – LOW SIDE	COPPER	2A1987G01	1	1	1					
54	COPPER TUBE (C) – LOW SIDE	COPPER	2A1988G01	1	1	1					
55	COPPER TUBE – HOT GAS	COPPER	4A2309-01	1	1	1					
56	COPPER TUBE (A) - EXP. VALVE	COPPER	4A2312-01	1	1	1					
57	COPPER TUBE (B) - EXP. VALVE	COPPER	4A2313-01	1	1	1					
58	COPPER TUBE (C) - EXP. VALVE	COPPER	4A2314-01	1	1	1					
59	WIRE SADDLE	-	4A0338-02	3	3	3					
60	HOLDER/EXPANSION VALVE	8-Mar	3A0107-01	3	3	3					
61	CLAMP	-	443461-01	3	3	3					
62	INSULATION TUBE	L=40	7762-1020	1	1	1					
63	CABLE TIE	CV-200	7920-0010	11	11	11			<u> </u>	 	
64	EXPANSION VALVE COVER	-	3A0944-01	3	3	3					
65	THERMISTOR	-	429006-03	1	1	1			<u> </u>	 	
66	HOLDER - THERMISTOR	-	438247-01	1	1	1					
67	INSULATION - THERMISTOR	-	427441-01	1	1	1			<u> </u>		
68	RUBBER INSULATION (A)	-	325864-01	1	1	1					
69	RUBBER INSULATION (B)	-	325865-01	1	1	1			<u> </u>	 	
70	INSULATION HOLDER	-	325863-01	1	1	1					

Title: B.	Refrigeration Circuit Model:	KM-1800SAH, K	M-1800SAH3								
							Requi	red N	umber		
					M-1						
Index		Material or		L-0	to	P-1					
No.	Description	Model Number	Part Number	M-0	P-0	Q-0					
71	T2 SCREW	4×8, SS	7P32-0408	4	4	4					
72	HEAD COVER (B1)	-	325862-01	1	1	1					
73	HEAD COVER (B2)	-	325862-02	1	1	1					
74	INSULATION	-	436671-02	1	1	1					
75	BUSHING	OCB-500	428394-02	1	1	1					
76	HEADER COVER (A1)	-	325861-01	1	1	1					
77	HEADER COVER (A2)	-	325861-02	1	1	1					
78	INSULATION TUBE	L=125	7762-1020	1	1	1					
79	INSULATION TUBE	L=125	7762-1020	1	1	1					
80	INSULATION TUBE	L=125	7762-1020	1	1	1					

B. Refrigeration Circuit 1/2 KM-1800SWH, KM-1800SWH3 Q-0

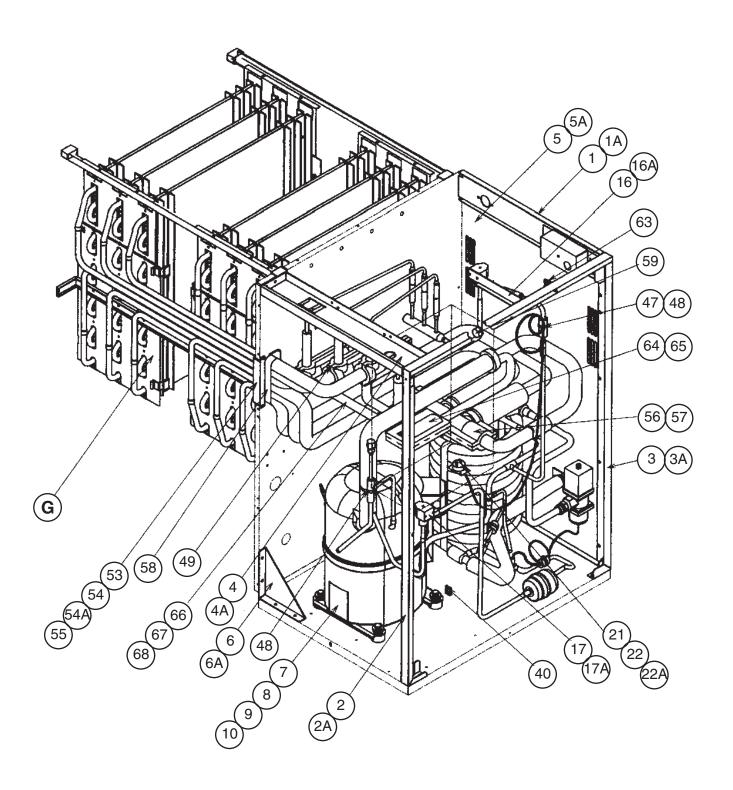

B. Refrigeration Circuit

2/2

KM-1800SWH, KM-1800SWH3


18 19 (20)(20A 42 29 36 28 30 45 DETAILED EXPANSION VALVE BULB HOLDER DETAILED THERMISTOR ATTACHMENT

Index		Material or				R	equired	Numbei	ſ	
No.	Description	Model Number	Part Number	Q-0						Г
G	EVAPORATOR	-	105103A01	1						Г
1	REAR FRAME	GS	439285G04	1						Г
1A	T2 SCREW	4×8	7P31-0408	2						Г
2	SIDE FRAME (A)	GS	215375G01	1						Г
2A	T2 SCREW	4×8	7P31-0408	3						
3	SIDE FRAME (B)	GS	215376G01	1						Г
ЗА	T2 SCREW	4×8	7P31-0408	4						
4	FRONT FRAME	GS	325857-01	1						
4A	T2 SCREW	4×8	7P31-0408	4						Г
5	REAR PANEL	GS	2A1112-01	1						Г
5A	T2 SCREW	4×8	7P31-0408	10						Г
6	BRACE	GS	325858-01	1						Г
6A	T2 SCREW	4×8	7P31-0408	4		\neg			М	Г
7	COMPRESSOR	KM-1800SWH CS18-K6E-PFV-237	4A2334-01	1						
		KM-1800SWH3 CS18-K6E-TF5-237	4A2330-01	1						
8	GROMMET	027-0167-00	434922-01	4						
9	SPACER	028-0188-02	434921-01	4						
10	BOLT	8×45	437889-01	4						
11	CONDENSER - WATER- COOLED	-	2A2359G05	1						
11A	HEX HEAD BOLT W/WASHER (LF)	5×12	7B0130512	2						
12	DRIER	-	4A2663-01	1						Г
13	NYLON TIE	-	8911-0301	1						
14	EXP. VALVE	HFE-10NHD-2	4A1414-01	3						
15	FRAME SEAL	EPDM	323925-01	4						
15A	T2 SCREW	4×12, SS	7P32-0412	6						Г
16	HOT GAS VALVE BRACKET	GS	442162-01	1						Г
16A	T2 SCREW	4×8	7P31-0408	2						Г
17	LINE VALVE BRACKET	GS	4A1406-01	1					М	Г
17A	T2 SCREW	4×8	7P31-0408	2		\neg			М	
18	VALVE BODY	70	440352-01	2		\neg			П	Г
19	COIL - VALVE	ABS-25-1-HD-2		2		\neg			М	
20	BOLT	4×6	440353F01	2		\neg		1	М	Г
20A	TRUSS HEAD SCREW	4×8	7C31-0408	4		\neg	\neg		М	Г
21	PRESSURE SWITCH	ACB-2UB04	433441-05	1		\neg			П	
22	PRESSURE SWITCH BRACKET	GS	434938-01	1						
22A	T2 SCREW	4×8	7P31-0408	1		$\neg \uparrow$		1	\sqcap	Г
23	COPPER TUBE - ACCESS VALVE	COPPER	4A1497G01	1						
24	ACCESS VALVE	-	457729-01	2	\vdash	_			\vdash	\vdash
25	WATER REGULATOR	V46EB-20D	4A1417-01	1	\vdash	\dashv	\dashv	\top	\vdash	
25A	TRUSS HEAD SCREW	4×6	7C31-0406	2	\vdash	-+	\dashv	\top	\vdash	Т
26	STRAINER	-	441569-02	1	\vdash	-+	\neg	+	H	\vdash
27	CHECK VALVE	SKC 30564	4A1373-01	3		_		+	$\vdash \vdash \vdash$	Н


No. 28	Description	Material or		Required Number									
28		Model Number	Part Number	Q-0								Г	
20	COPPER TUBE (A) - HIGH SIDE	COPPER	2A2481G01	1								Γ	
29	COPPER TUBE (B) - HIGH SIDE	COPPER	3A2344-01	1									
30	COPPER TUBE (C) - HIGH SIDE	COPPER	4A2763G01	1									
31	COPPER TUBE (F) - HIGH SIDE	COPPER	3A2343-01	1								Γ	
32	HEADER - S	750489	441038-01	2								Г	
33	COPPER TUBE (A) - EXP. VALVE	COPPER	4A1464-01	1								Ī	
34	COPPER TUBE (B) - EXP. VALVE	COPPER	4A1465-01	1								Γ	
35	COPPER TUBE (C) - EXP. VALVE	COPPER	4A1466-01	1									
36	COPPER TUBE - LOW SIDE	COPPER	106803G01	1								Γ	
37	COPPER TUBE (A) - LOW SIDE	COPPER	2A1108-01	1								Γ	
38	COPPER TUBE (B) - LOW SIDE	COPPER	2A1109-01	1								Γ	
39	COPPER TUBE (C) - LOW SIDE	COPPER	2A1110G01	1								Γ	
40	WIRE SADDLE	-	4A0448-02	3								Γ	
41	HEAT EXCHANGER	COPPER	1A0235G01	1					ĺ			Γ	
42	COPPER TUBE - HOT GAS	COPPER	4A1463-01	1					Ì			Γ	
43	COPPER TUBE (A)	COPPER	3A2315G01	1								Г	
44	COPPER TUBE (B)	COPPER	4A2762G01	1								Γ	
45	HOLDER / EXP. VALVE - 3/8	SS	3A0107-01	3								Γ	
46	CLAMP	SS	443461-01	3									
47	INSULATION TUBE	L=40	7762-1020	3									
48	CABLE TIE	CV-200	7920-0010	14								L	
49	EXP. VALVE COVER	PE FOAM	3A0944-01	3								L	
50	THERMISTOR	-	429006-03	1								L	
51	HOLDER - THERMISTOR	COPPER	438247-01	1								L	
52	INSULATION - THERMISTOR	PE FOAM	427441-01	1				<u> </u>		<u> </u>		L	
53	RUBBER INSULATION (A)	EPDM	325864-01	1				<u> </u>				L	
54	RUBBER INSULATION (B)	EPDM	325865-01	1				<u> </u>				L	
54A	T2 SCREW	4×8, SS	7P32-0408	2				<u> </u>				L	
55	INSULATION HOLDER	SS	325863-01	1				<u> </u>				\perp	
56	HEADER COVER (B1)	PE FOAM	325862-01	1				<u> </u>				\perp	
57	HEADER COVER (B2)	PE FOAM	325862-02	1				<u> </u>				\perp	
58	INSULATION	PE FOAM	436671-02	1								Ļ	
59	BUSHING	OCB-500	428394-02	1								Ļ	
60	-	-	-	-				<u> </u>				Ļ	
61	-	-	-	-				<u> </u>		<u> </u>		Ļ	
62	-	-	-	-				<u> </u>				Ļ	
63	CLAMP HEADER COVER (A1)	-	4A2338-01 325861-01	1				<u> </u>				Ļ	

Title: B.	Refrigeration Circuit Model:	KM-1800SWH, K	(M-1800SWH3								
Index		Material or				Requi	red N	umber			
No.	Description	Model Number	Part Number	Q-0							
65	HEADER COVER (A2)	-	325861-02	1							
66	INSULATION TUBE	L=239	7762-1020	1							
67	INSULATION TUBE	L=284	7762-1020	1							
68	INSULATION TUBE	L=328	7762-1020	1							
69	MALE CONNECTOR	-	445180-01	1							
70	COPPER TUBE (J) – HIGH SIDE	COPPER	3A1105G01	1							
71	COPPER TUBE (M) – HIGH SIDE	-	4A2898G01	1							

B. Refrigeration Circuit 1/2

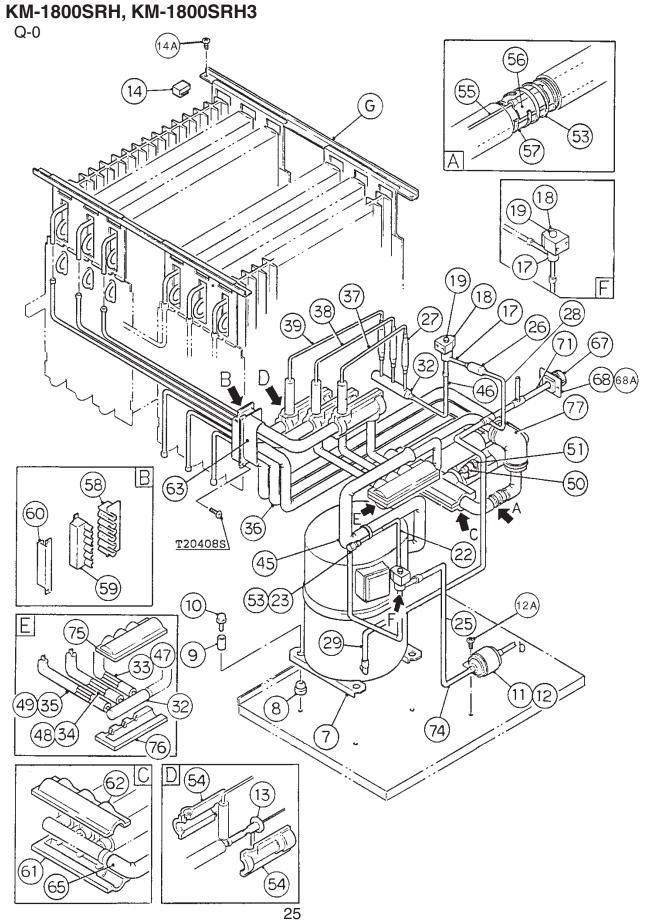

B. Refrigeration Circuit 2/2 KM-1800SRH, KM-1800SRH3

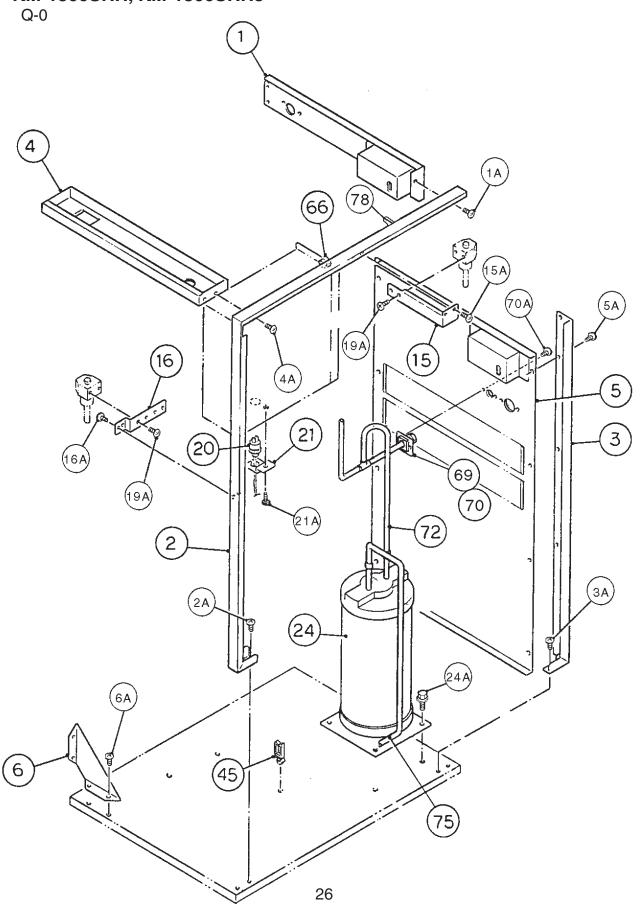


						Requi	red N	umber		
Index		Material or								
No.	Description	Model Number	Part Number	Q-0					ightharpoonup	
G	EVAPORATOR	-	105103A01	1					ightharpoonup	
1	REAR FRAME	GS	439285G04	1					ightharpoonup	
1A	T2 SCREW	4×8	7P31-0408	2					$ \bot $	
2	SIDE FRAME (A)	GS	215375G01	1					$ \bot $	
2A	T2 SCREW	4×8	7P31-0408	3					\Box	
3	SIDE FRAME (B)	GS	215376G01	1						
ЗА	T2 SCREW	4×8	7P31-0408	4						
4	FRONT FRAME	GS	325857-01	1						
4A	T2 SCREW	4×8	7P31-0408	4						
5	REAR PANEL	GS	215378G01	1						
5A	T2 SCREW	4×8	7P31-0408	10						
6	BRACE	GS	325858-01	1						
7	COMPRESSOR	KM-1800SRH CS18-K6E-PVF-279	4A2334-02	1						
		KM-1800SRH3 CS18-K6E-TFS-279	4A2330-02	1						
8	GROMMET	027-0167-00	434922-01	4						
9	SPACER	028-0188-02	434921-01	4						
10	BOLT	8×45	437889-01	4						
11	DRIER	C-053-S	4A2663-01	1						
12	NYLON TIE	-	8911-0301	1						
13	EXPANSION VALVE	HFE-10NHD-1	4A1414-01	3						
14	FRAME SEAL	EPDM	323925-01	4						
14A	TRUSS HEAD SCREW	4×12, SS	7C32-0412	6						
15	HOT GAS VALVE BRACKET	GS	442162-01	1						
15A	T2 SCREW	4×8	7P31-0408	2						
16	LINE VALVE BRACKET	GS	4A1406-01	1						
16A	T2 SCREW	4×8	7P31-0408	2						
17	VALVE BODY	70	440352-01	2						
18	COIL - VALVE	ABS-25-1-HD-2	440353-01	2						
19	BOLT	4×6	440353F01	2						
19A	TRUSS HEAD SCREW	4×8	7C310408	4						
20	PRESSURE SWITCH	ACB-1UB09	433441-07	1						
21	PRESSURE SWITCH BRACKET	GS	434938-01	1						
21A	T2 SCREW	4×8	7P31-0408	1					\neg	
22	COPPER TUBE - ACCESS VALVE	COPPER	4A1497G01	1						
23	ACCESS VALVE	-	457729-01	1					\neg	
24	RECEIVER	RR MN WP450	438209-01	1					\neg	
24A	HEX HEAD BOLT W/WASHER (LF)	5×10	7B0130510	3					\dashv	
25	COPPER TUBE - CAPILLARY	COPPER	445174G01	1					一	
26	STRAINER	-	441569-02	1					\dashv	_
27	CHECK VALVE	YCV5-2	425342-01	1					\dashv	_
28	COPPER TUBE (A) - HIGH SIDE	COPPER	2A0527G02	1					\top	_

						Requ	ired N	lumber			
Index No.	Description	Material or Model Number	Part Number	Q-0							
29	VALVE BODY	24	440351-01	1	\vdash			\vdash			┢
30	COIL - VALVE	ADS-24HD-3	440351-01	1	 	-	-	\vdash		<u> </u>	⊢
31	BOLT	4×6	440354F01	1						 	╁
32	HEADER - S	750489	441038-01	2				1		<u> </u>	⊬
33	COPPER TUBE (A) - EXP.	COPPER	446515-01	1				+			⊬
33	VALVE										
34	COPPER TUBE (B) - EXP. VALVE	COPPER	446516-01	1							
35	COPPER TUBE (C) - EXP. VALVE	COPPER	446517-01	1							
36	COPPER TUBE - LOW SIDE	COPPER	106803G01	1							
37	COPPER TUBE (A) - LOW SIDE	COPPER	326312G01	1							
38	COPPER TUBE (B) - LOW SIDE	COPPER	326313G01	1							
39	COPPER TUBE (C) - LOW SIDE	COPPER	326314G01	1							
40	INSULATION - COMPRESSOR TOP	VNN 2C1 (SOFT)	447118-01	1							
41	INSULATION - COMPRESSOR RIGHT	,	447119-01	1							Г
42	INSULATION - COMPRESSOR CENTER	,	447120-01	1							Г
43	INSULATION - COMPRESSOR LEFT	VNN 2C1 (SOFT)	447121-01	1							Г
44	WIRE SADDLE	VWS4238-C	4A0338-02	3					İ		Г
45	HEAT EXCHANGER	COPPER	106804G01	1							Т
46	COPPER TUBE - HOT GAS	COPPER	4A0804-01	1							一
47	INSULATION TUBE	L=219	7762-1020	1							\vdash
48	INSULATION TUBE	L=264	7762-1020	1							一
49	INSULATION TUBE	L=308	7762-1020	1		 					一
50	HOLDER / EXP. VALVE - 3/8	SS	3A0107-01	3	 		 	\vdash		<u> </u>	一
51	CLAMP	SS	443461-01	3				 		<u> </u>	一
52	INSULATION TUBE	L=40	7762-1020	3				 		<u> </u>	╁
53	CABLE TIE	CV-200	7920-0010	11							╁
54	EXP. VALVE COVER	PE FOAM	3A0944-01	3							╁
55	THERMISTOR	- LI OAW	429006-03	1	\vdash	\vdash	\vdash	+-			\vdash
56	HOLDER - THERMISTOR	COPPER	438247-01	1	\vdash	\vdash	\vdash	\vdash		_	\vdash
57	INSULATION - THERMISTOR	PE FOAM	427441-01	1		 	 	+			\vdash
58	RUBBER INSULATION (A)	EPDM	325864-01	1	\vdash	\vdash	\vdash	\vdash			\vdash
59	RUBBER INSULATION (B)	EPDM	325865-01	1	\vdash		-	\vdash		<u> </u>	\vdash
60	INSULATION HOLDER	SS	325863-01	1	\vdash	-	 	+		<u> </u>	\vdash
60A	T2 SCREW	4×8, SS	7P32-0408	2	\vdash	-	\vdash	\vdash			\vdash
					\vdash	-	\vdash	\vdash			\vdash
61	HEADER COVER (B1)	PE FOAM	325862-01	1	\vdash	-	\vdash	\vdash			\vdash
62	HEADER COVER (B2)	PE FOAM	325862-02	1	-	-		+		<u> </u>	\vdash
63	INSULATION	PE FOAM	436671-02	1				1		<u> </u>	\vdash
64 65	BUSHING INSULATION TUBE	OCB-500 L=105	428394-02 7762-1630	1	 	-	-	1	_		\vdash

Title: B	. Refrigeration Circuit Model:	KM-1800SRH, K	M-1800SRH3								
				Required Number							
Index		Material or									
No.	Description	Model Number		Q-0							
66	TERMINAL GASKET	-	334084-01	1							
67	COUPLING	COPPER	434136G01	1							
68	TUBE HOLDER (L)	GS	438245-01	1							
68A	T2 SCREW	4×8	7P31-0408	2							
69	COUPLING	COPPER	433751G01	1							
70	TUBE HOLDER (S)	GS	438246-01	1							
70A	T2 SCREW	4×8	7P31-0408	2							
71	COPPER TUBE (B) - HIGH SIDE	COPPER	445178G01	1							
72	COPPER TUBE (D) - HIGH SIDE	COPPER	331009G01	1							
73	COPPER TUBE (E) - HIGH SIDE	COPPER	3A0992-01	1							
74	COPPER TUBE (F) - HIGH SIDE	COPPER	3A2336-01	1							
75	HEADER COVER (A1)	PE FOAM	325861-01	1							
76	HEADER COVER (A2)	PE FOAM	325861-02	1							
77	INSULATION TUBE	L=150	7762-3555	1							
78	CLAMP	-	4A2338-01	1							

C. Water Circuit


KM-1800SAH, KM-1800SAH3, KM-1800SWH, KM-1800SWH3, KM-1800SRH, KM-1800SRH3

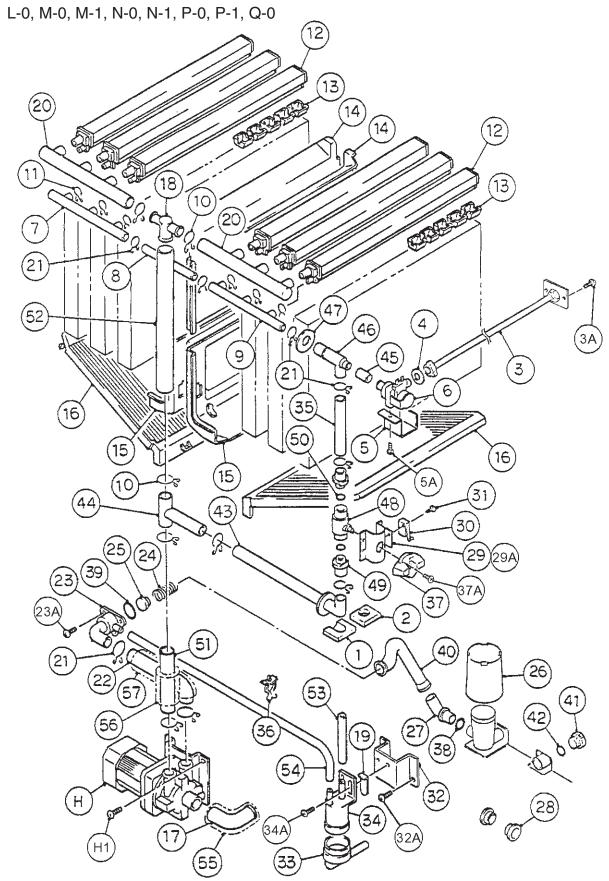

							Requi	red N	umber			
					M-0							
Index		Material or			to							
No.	Description	Model Number			Q-0							Ļ
Н	PUMP MOTOR ASSEMBLY	(S-0730)	215692A01	1	1							Ļ
H1	TRUSS HEAD SCREW	5×8, SS	7C32-0508	2	2							┞
1	CORNER INSULATION (A)	PE FOAM	439376-01	1	1							┡
2	CORNER INSULATION (B)	PE FOAM	439392-01	1	1							L
3	WATER SUPPLY PIPE	COPPER	4A0768G03	1	1							L
3A	T2 SCREW	4×8	7P31-0408	2	2							L
4	RUBBER GASKET	SI.R	413854-03	1	1							Ļ
5	WATER VALVE BRACKET	GS	321443-01	1	1							Ļ
5A	T2 SCREW	4×8	7P31-0408	2	2							Ļ
6	WATER VALVE	J248-106	3U0136-01	1	1							L
7	DISTRIBUTOR HOSE (A)	EPDM	325738-01	1	1							L
8	JOINT PIPE	ABS	439297-01	1	1							
9	DISTRIBUTOR HOSE (B)	EPDM	325738-02	1	1							
10	HOSE CLAMP	SS, 32MM	427443-09	7	7							
11	HOSE CLAMP	SS, 13.5MM	427443-07	6	6							
12	SPRAY TUBE	ABS	437049G01	6	6							Г
13	SPRAY GUIDE (A)	PE	208586-01	18	18							Г
14	SEPARATOR (A)	ABS	215046-01	2	2							Г
15	SEPARATOR (B)	SS	2A0100-01	2	2							Г
16	CUBE GUIDE	ABS	214243-01	2	2							Г
17	HOSE (A)	EPDM	435091-01	1	1							Г
18	DISTRIBUTOR (A)	ABS	439266-01	1	1							Г
19	FLOAT SWITCH STOP	SS	4A0137-01	1	1							Г
20	DISTRIBUTOR HOSE (C)	EPDM	325739-01	2	2							T
21	HOSE CLAMP	SS, 25MM	427443-03	9	9							T
22	HOSE (B)	EPDM	325867-01	1	1							T
23	VALVE HOUSING - DRAIN	ABS	323613-01	1	1							T
23A	T2 SCREW	4×10, SS	7P32-0410	3	3							T
24	SPRING	SS	322110-01	1	1							T
25	VALVE SHEET	EPDM	433705-01	1	1							十
26	OVERFLOW CAP	PE	325866-01	1	1							H
27	JOINT - OVERFLOW	ABS	323923-02	1	1							十
28	BUSHING	-	420470-06	2	2							H
29	VALVE HOLDER	GS	3A1178-01	1	1	\vdash			 			\vdash
29A	TRUSS HEAD SCREW	4×8	7C31-0408	3	3	\vdash			\vdash	_		\vdash
30	MICRO SWITCH	V3L-111-08	4A0365-01	1					 			\vdash
50	I WILLIAM CONTINUES	-	4A0505-01	1	1				 			\vdash
31	TAPPING SCREW	3×14	431415-02	2	2				\vdash			\vdash
				1	1	\vdash			\vdash			\vdash
32	FLOAT SW. BRACKET	SS 4ve ss	3A0449-01		1	\vdash			\vdash			\vdash
32A 33	T2 SCREW CONNECTOR - FLOAT SWITCH	4×8, SS EPDM	7P32-0408 426799-04	1	1							\vdash
34	FLOAT SWITCH	163795	4A0886-01	1	1	\vdash			\vdash			十
34A	TRUSS HEAD SCREW	4×10, SS	4×10, SS	2	2				 			\vdash
35 35	JOINT HOSE	EPDM	439309-01	1	1							\vdash
36	CLAMP	NO.4253	427902-05	1	1							\vdash


Title: C	Water Circuit Model: KM-180 KM-180		SAH3, KM-18	00SW	H, KM	-1800	SWH3	8, KM-	18005	SRH,	
							Requi	red N	umber		
					M-0						
Index		Material or			to						
No.	Description	Model Number	Part Number	L-0	Q-0						Ш
37	HANDLE	JH1352	215383-01	1	1						Ш
37A	T2 SCREW	4×8	7P31-0408	1	1						
38	"O" RING	1AP18	7611-P018	1	1						
39	"O" RING	1AG35	7611-G035	1	1						
40	DRAIN HOSE	EPDM	325869-01	1	1						
41	DRAIN	AC	309246-01	1	1						
42	"O" RING	1AP15	7611-P015	1	1						
43	BYPASS HOSE	EPDM	439237-02	1	1						
44	DISTRIBUTOR (C)	ABS	439238-01	1	1						
45	JOINT HOSE	EPDM	439296-01	1	1						
46	DISTRIBUTOR (B)	ABS	439239-01	1	1						
47	FLANGE	EPDM	439267-02	1	1						
48	BALL VALVE	PVC	439293-01	1	1						
49	MALE ADAPTOR	ABS	325826-01	2	2						
50	"O" RING	1AP20	7611-P020	2	2						
51	VINYL HOSE	L=230	7716-2732	1	1						
52	VINYL HOSE	L=550	7716-2732	1	1						
53	SILICONE HOSE	L=190	773013812	1	1						
54	SILICONE HOSE	L=430	773013896	1	1						
55	INSULATION HOSE	L=120	7762-3555	1	1						
56	INSULATION HOSE	L=130	7762-3555	1	1						
57	INSULATION HOSE	L=1200	7762-3555	1	1						

D. Control Box Assembly KM-1800SAH, KM-1800SAH3 L-0, M-0

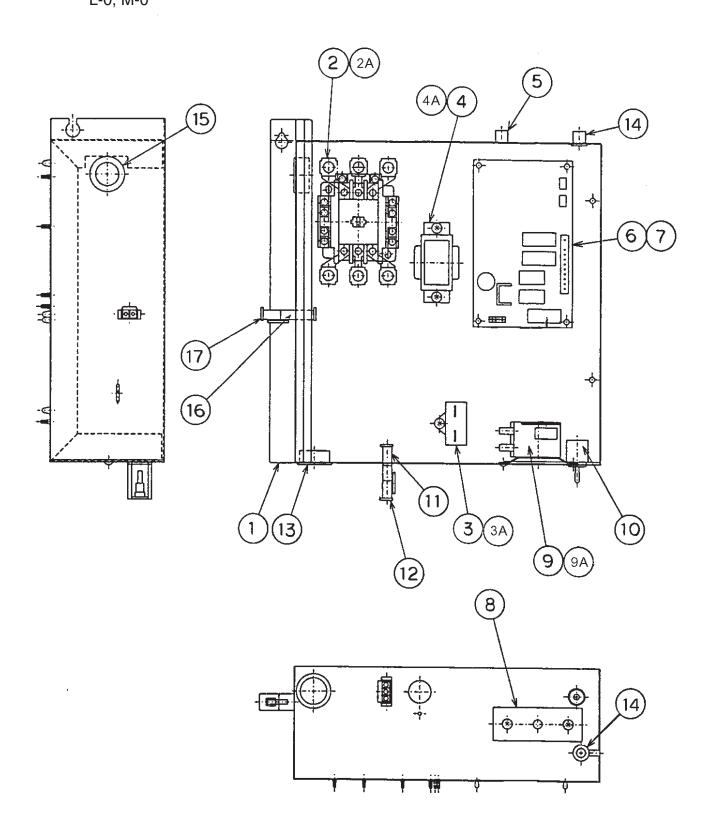

D. Control Box Assembly KM-1800SAH, KM-1800SAH3, KM-1800SWH, KM-1800SWH3, KM-1800SRH, KM-1800SRH3


M-1, N-0, N-1, P-0, P-1, Q-0

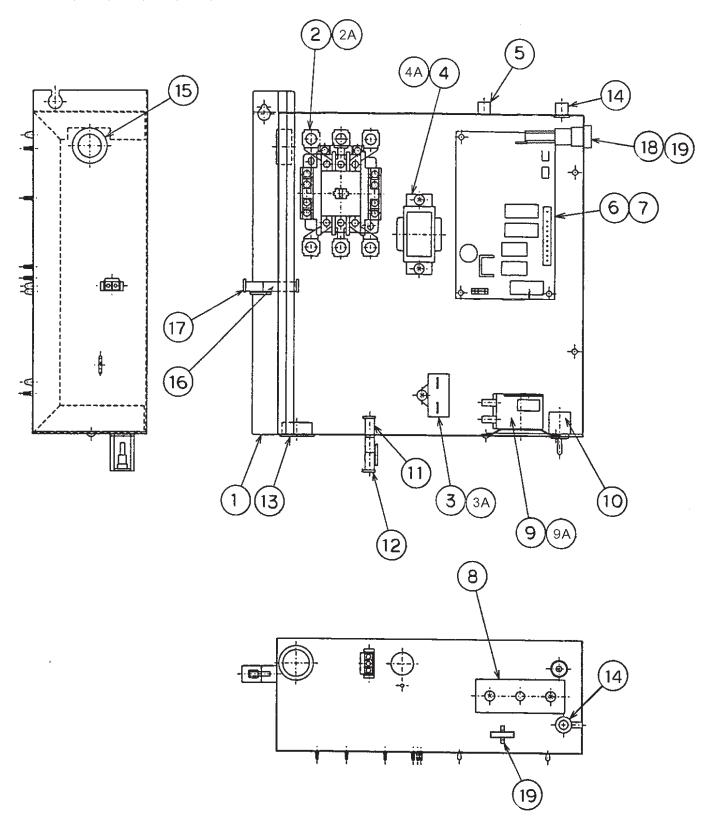

Title: D	. Control Box Assembly Mode	el: KM-1800SAH KM-1800SRH		13, KN	Л-1800	SWH,	KM-	1800S	WH3,	KM-18	300SF	H,
							Requ	ired N	umber			
					M-1							
Index		Material or		L-0	to							
No.	Description	Model Number	!	M-0	Q-0							
1	CONTROL BOX	GS	2A1082G02	1	-							
		GS	2A2524G01		1							
2	MAGNETIC CONTACTOR	A77-309040A- 226	4A0794-01	1	1							
2A	TRUSS HEAD SCREW	4×12	7C31-0412	2	2							
3	CAPACITOR	250V. AC, 10MFD	443192-01	1	1							
ЗА	T2 SCREW	4×10	7P31-0410	1	1							
4	TRANSFORMER	26D285H	3A0172-01	1	1							
4A	T2 SCREW	4×8	7P31-0408	2	2							
5	BUSHING	OCB-875	428394-04	1	1							
6	CONTROLLER BOARD	HOSHIZAKI- 001A	2A1410-01	1	1							
7	BOARD SUPPORT	CBLS37-M	4A0336-03	4	4							
8	CONTROL LABEL	PES FILM	4A1758-01	1	1							
9	THERMOSTAT	A30-3842-00	4A0824-02	1	1							
9A	TRUSS HEAD SCREW	4×6	7C31-0406	2	2							
10	TOGGLE SWITCH	7563K6	443119-01	1	1							
11	3P PLUG HOUSING	3191-03P	412832-06	1	1							
12	3P RECEPTACLE HOUSING	3191-03PR1	412831-06	1	1							
13	BUSHING	SB-1093-15	420470-03	1	1							
14	BUSHING	OCB-500	428394-02	2	2							
15	BUSHING	SB-1093-13	420470-12	1	1							
16	2P PLUG HOUSING	3190-02P (RED)	412832-09	1	1							
17	2P RECEPTACLE HOUSING	3191-02PR1 (RED)	412831-09	1	1							
18	FUSE HOLDER	HTB921	4A0892-01		1							
19	FUSE	AGC-10	4A0893-07		2							


E. Label Location KM-1800SAH, KM-1800SAH3

L-0, M-0

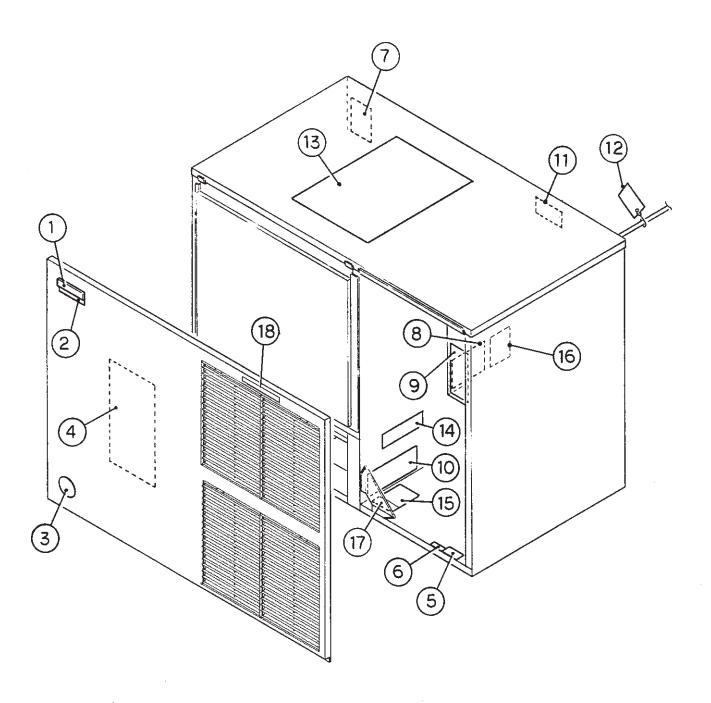


E. Label Location KM-1800SAH, KM-1800SAH3

M-1, N-0, N-1, P-0, P-1

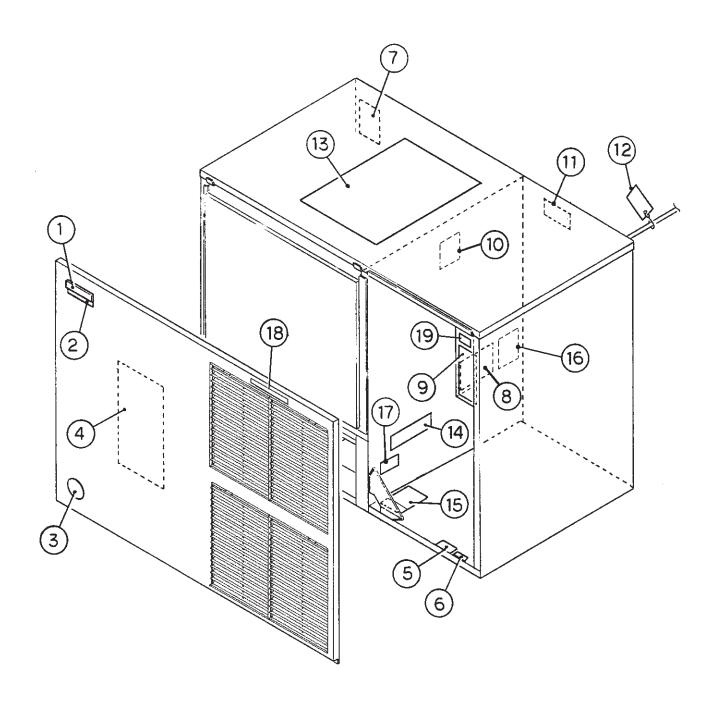


E. Label Location KM-1800SAH, KM-1800SAH3 Q-0

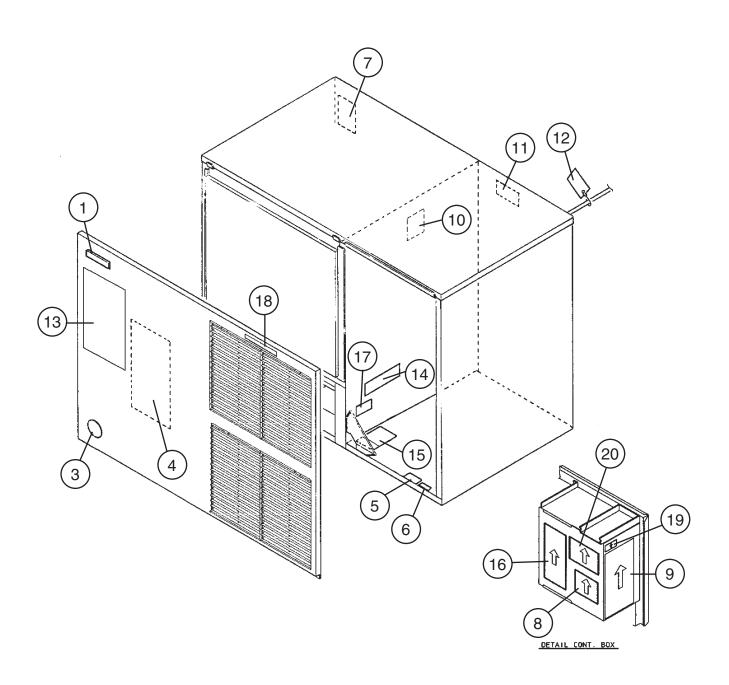


							Requi	red N	umber			
Index No.	Description	Material or Model Number	Part Number	L-0 M-0	M-1	N-0 to P-1	Q-0					
1	EMBLEM	ABS	4A0560-01	1	1	1	1					
2	MODEL NUMBER LABEL	KM-1800SAH	4A2335-01	-		İ						
		PETP FILM	4A2356-17	1	1	-						
		KM-1800SAH3	4A2335-02	-					İ	İ	İ	
		PETP FILM	4A2356-18	1	1	-						
3	LABEL - PENGUIN (R)	PETP FILM	4A0526-01	1	1	1	1					
4	MAINTENANCE LABEL	PVC FILM	3A1770-01	1	1	1	1					
5	CAUTION LABEL (K)	PVC FILM	439150-01	1	1	1	1					
6	LABEL - R404A	PES FILM	4A0960-01	1	1	1	1					
7	NAMEPLATE	KM-1800SAH PES FILM	4A2327-01	1	1	1	1					
		KM-1800SAH3 PES FILM	4A2325-01	1	1	1	1					
8	WIRING LABEL	KM-1800SAH	3A1805-01	1	-							
		PVC FILM	3A2456-01		1	1	1					
		KM-1800SAH3	3A1802-01	1	-							
		PVC FILM	3A2457-01		1	1	1					
9	MANUAL LABEL	PVC FILM	324476-01	1	1	1	1					
10	MANUAL LABEL - BIN CONTROL	PVC FILM	324477-01	1	1	1	1					
11	INSTRUCTION LABEL	PVC FILM	444575-01	1	1	1	1					
12	TAG - WARNING: ELECTRICAL CONNECTION	KM-1800SAH PAPER	428430-01	1	1	1	1					
		KM-1800SAH3 PAPER	438479-01	1	1	1	1					
13	INSTRUCTION SHEET	PAPER	2A2135-01	1	1	1	1					
14	OPERATION LABEL - VALVE	PVC FILM	439541-01	1	1	1	1					
15	RATING LABEL	KM-1800SAH PES FILM	4A2328-01	1	1	1	1					
		KM-1800SAH3 PES FILM	4A2324-01	1	1	1	1					
16	LABEL - CONTROL BOARD	PVC FILM	3A1272-01	1	1	1	1					
17	CAUTION LABEL (F)	PVC FILM	439146-01	1	1	1	1					
18	LABEL – AIR FILTER	PVC FILM	426177-01	1	1	1	1					
19	LABEL – FUSE	-	4A2817-01		1	1	1					
20	LABEL – ALARM	PVC FILM	4A3517-01				1					

E. Label Location KM-1800SWH, KM-1800SWH3 Q-0

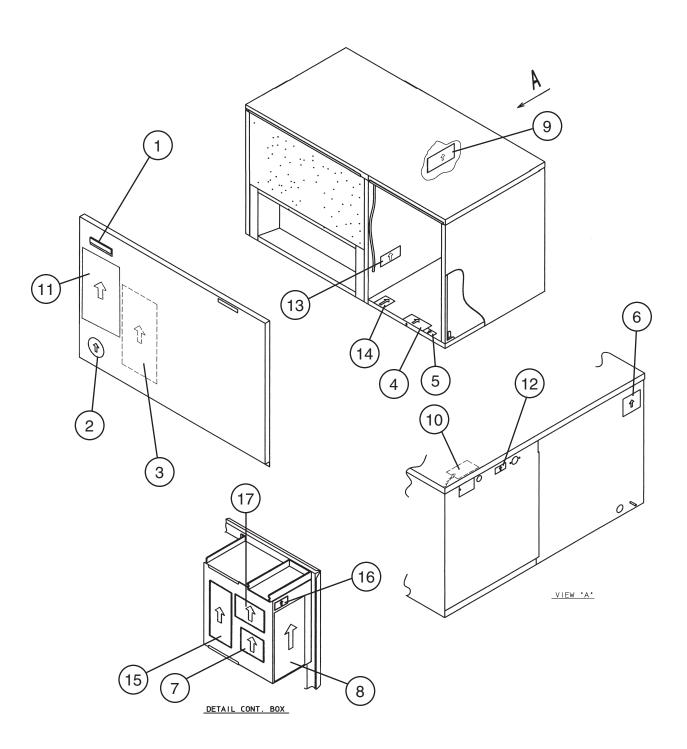

						Requi	red N	umber		
Index		Material or								
No.	Description	Model Number	Part Number	Q-0						
1	EMBLEM	ABS	4A0560-01	1						
2	LABEL - PENGUIN (R)	PETP FILM	4A0526-01	1						
3	MAINTENANCE LABEL	PVC FILM	3A1770-01	1						
4	CAUTION LABEL (K)	PVC FILM	439150-01	1						
5	LABEL - R404A	PES FILM	4A0960-01	1						
6	NAMEPLATE	KM-1800SWH PES FILM	2A2664-05	1						
		KM-1800SWH3 PES FILM	2A2664-06	1						
7	WIRING LABEL	KM-1800SWH PVC FILM	3A3490-01	1						
		KM-1800SWH3 PVC FILM	3A2394-01	1						
8	MANUAL LABEL	PVC FILM	324476-01	1						
9	MANUAL LABEL - BIN CONTROL	PVC FILM	324477-01	1						
10	TAG - WARNING: ELECTRICAL CONNECTION	KM-1800SWH PAPER	428430-01	1						
		KM-1800SWH3 PAPER	438479-01	1						
11	INSTRUCTION SHEET	PAPER	2A3458-01	1						
12	INSTRUCTION LABEL	PVC FILM	444575-01	1						
13	OPERATION LABEL - VALVE	PVC FILM	439541-01	1						
14	RATING LABEL	KM-1800SWH PES FILM	2A2665-05	1						
		KM-1800SWH3 PES FILM	2A2665-06	1						
15	LABEL - CONTROL BOARD	PVC FILM	3A2220-01	1						
16	LABEL – FUSE	-	4A2817-01	1						
17	LABEL – ALARM	PVC FILM	4A3517-01	1						


E. Label Location KM-1800SRH, KM-1800SRH3 Q-0

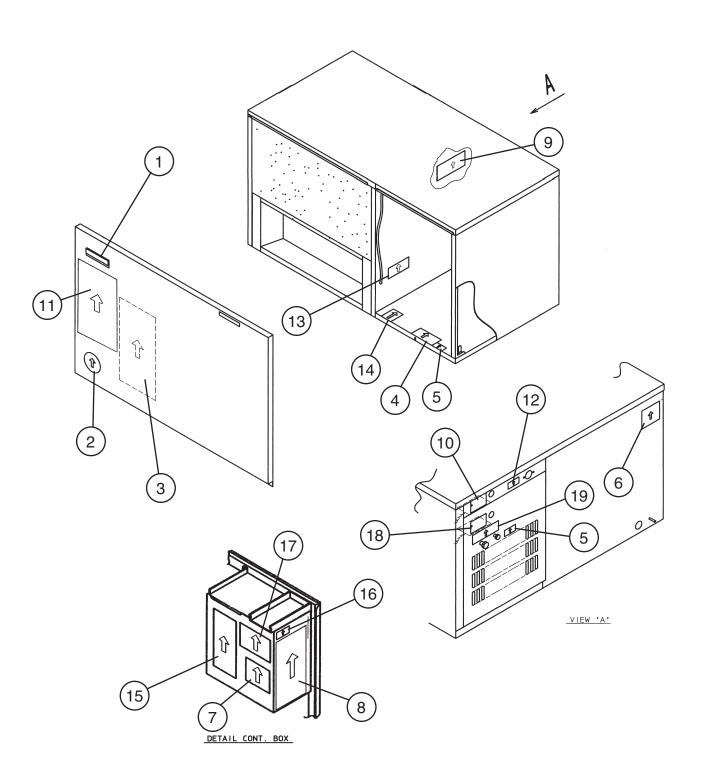

						Requi	red N	umber		
Index		Material or								
No.	Description	Model Number	Part Number	Q-0						
1	EMBLEM	ABS	4A0560-01	1						
2	LABEL - PENGUIN (R)	PETP FILM	4A0526-01	1						
3	MAINTENANCE LABEL	PVC FILM	3A1770-01	1						
4	CAUTION LABEL (K)	PVC FILM	439150-01	1						
5	LABEL - R404A	PES FILM	4A0960-01	1						
6	NAMEPLATE	KM-1800SRH PES FILM	2A2664-03	1						
		KM-1800SRH3 PES FILM	2A2664-04	1						
7	WIRING LABEL	KM-1800SRH PVC FILM	3A3490-01	1						
		KM-1800SRH3 PVC FILM	3A2394-01	1						
8	MANUAL LABEL	PVC FILM	324476-01	1						
9	MANUAL LABEL - BIN CONTROL	PVC FILM	324477-01	1						
10	TAG - WARNING: ELECTRICAL CONNECTION	KM-1800SRH PAPER	428430-01	1						
		KM-1800SRH3 PAPER	438479-01	1						
11	INSTRUCTION SHEET	PAPER	2A3458-01	1						
12	INSTRUCTION LABEL	PVC FILM	444575-01	1						
13	OPERATION LABEL - VALVE	PVC FILM	439541-01	1						
14	RATING LABEL	KM-1800SRH PES FILM	2A2665-03	1						
		KM-1800SRH3 PES FILM	2A2665-04	1						
15	LABEL - CONTROL BOARD	PVC FILM	3A2220-01	1						
16	LABEL – FUSE	-	4A2817-01	1						Г
17	LABEL – ALARM	PVC FILM	4A3517-01	1						
18	TAG – FAN MOTOR LEADS		4A1494-01	1						
19	CAUTION - REMOTE LABEL		4A1491-01	1						Г


F. Capacitor Box Assembly KM-1800SAH, KM-1800SWH, KM-1800SRH

L-0, M-0, M-1, N-0, N-1, P-0, P-1, Q-0

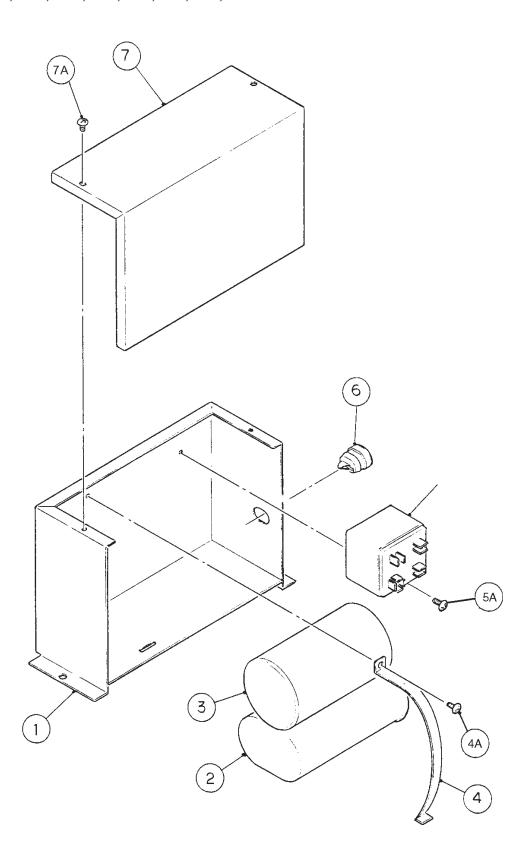

Title: F.	Capacitor Box Assembly Mo	del: KM-1800SA	.Н , КМ-1800S	WH, KI	M-1800	SRH						
				Required Number								
Index No.	Description	Material or Model Number	Part Number	L-00006M to L-00085C	L-00105J	M-0	M-1 to Q-0					
1	CAPACITOR BOX	GS	326124-02	1								
2	CAPACITOR	35MFD, 370V	439943-01	1	-							
		-	3A2005-05		1	1	1					
3	CAPACITOR - STARTING	145-174MFD, 250V	3A0076-01	1	1	1	1					
4	STRAP	GS	434580-04	1	-							
			4A2262-03		1	1	1					
4A	T2 SCREW	4×8	7P31-0408	1	1	1	1					
5	STARTER	3ARR3CT10S5	4A1107-09	1	1	1	1					
5A	T2 SCREW	4×8	7P31-0408	1	1	1	1					
6	BUSHING	SR-34-2	420472-05	1	1	1	1					
7	CAPACITOR BOX COVER	GS	326125-01	1	1	1	1					
7A	T2 SCREW	4×8	7P31-0408	2	2	2	2					


F. Transformer Box Assembly KM-1800SAH3, KM-1800SWH3, KM-1800SRH3 L-0, M-1, N-0, N-1, P-0, P-1, Q-0

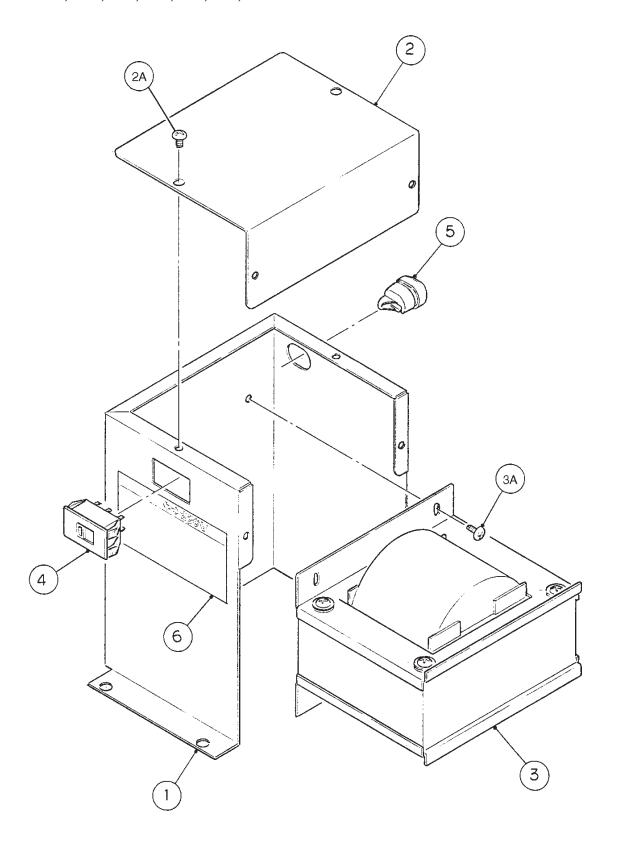

Title: F.	Transformer Box Assembly N	Model: KM-1800	SAH3, KM-180	00SWI	H3, KI	/I-180	SRH	3				
				Required Number								
				L-0								
Index		Material or		to								
No.	Description	Model Number	Part Number	Q-0								
1	TRANSFORMER BOX	-	3A1101-01	1								
2	TRANSFORMER BOX COVER	-	438467-01	1								
2A	T2 SCREW	4×8	7P31-0408	4								
3	TRANSFORMER	BE24543001	4A0817-01	1								
ЗА	TRUSS HEAD SCREW	4×8	7C31-0408	4								
4	SLIDE SWITCH	SE1022-SD- PM-F-R-HK-A	4A1477-01	1								
5	BUSHING	SR-30-1	420472-03	1								
6	MANUAL LABEL - TAP SWITCH	PVC FILM	439423-01	1								

G. Evaporator


KM-1800SAH, KM-1800SAH3, KM-1800SWH, KM-1800SWH3, KM-1800SRH, KM-1800SRH3

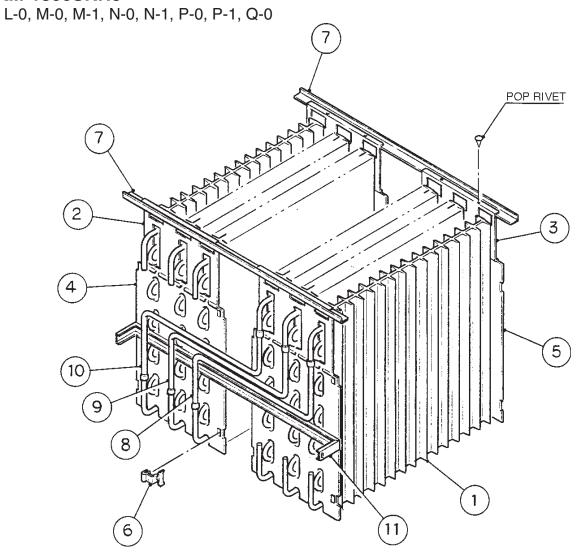

Title: G	Evaporator Model: KM-1800 KM-1800	,	AH3, KM-1800	SWH	, KM-1	800SV	/H3, I	KM-18	800SR	Н,		
				Required Number								
Index No.	Description	Material or Model Number	Part Number	L-0 to Q-0								
1	EVAPORATOR	(S-0641)	103317G02	6								
2	EVAP. BRACKET (A)	SS	323690-01	2			Ì					
3	EVAP. BRACKET (B)	SS	323691-01	2			ĺ	ĺ	ĺ			
4	END PLATE (A)	ABS	325859-01	2			ĺ		ĺ			
5	END PLATE (B)	ABS	325860-01	2			ĺ		ĺ			
6	НООК	PP	324152-01	8			ĺ		ĺ			
7	EVAP. BRACKET	GS	436582-01	2			ĺ	ĺ	ĺ			
8	COPPER TUBE (A) - EVAP	COPPER	439082-01	1			Î	ĺ	ĺ			
9	COPPER TUBE (B) - EVAP	COPPER	439082-02	1			T					
10	COPPER TUBE (C) - EVAP	COPPER	439082-03	1			Ì					
11	EVAP. BRACKET (C)	SS	325868-01	1								

H. Pump Motor Assembly KM-1800SAH, KM-1800SAH3, KM-1800SWH, KM-1800SWH3, KM-1800SRH, KM-1800SRH3

L-0, M-0, M-1, N-0, N-1, P-0, P-1, Q-0

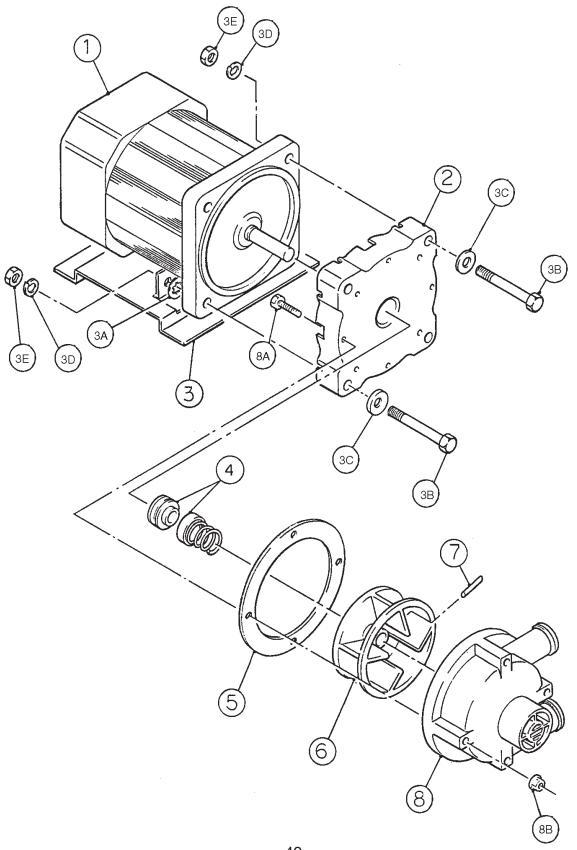


Title: H	. Pump Motor Assembly Moo	lel: KM-1800SA F KM-1800SR F	·	H3, KI	VI-180	0SWH	i, KM-	18005	SWH3,	KM-1	800SF	RH,
				Required Number								
Index	Description	Material or	Do ut Nivershov	L-0 to								
No.	Description	Model Number	<u> </u>	Q-0			<u> </u>	<u> </u>				<u> </u>
1	PUMP MOTOR	+	2U0106-01	1			<u> </u>	<u> </u>	<u> </u>			<u> </u>
2	PUMP FLANGE	PC	215662-01	1								
3	PUMP MOTOR BRACKET	SS	323904-01	1								
3A	TOOTH WASHER	6, SS	7R22-0600	2								
3B	HEXAGON BOLT	6×40, SS	7B02-0640	4								
3C	FLAT WASHER	6, SS	7W22-0600	4								
3D	SPLIT LOCK WASHER	6, SS	7L22-0600	4								
3E	NUT	6, SS	7N12-0600	4								
4	MECHANICAL SEAL	H5-PN, 8MM	428545-01	1								
5	PACKING	EPDM	428547-01	1								
6	IMPELLER	ABS	436584-01	1								
7	PIN	SS	414102-01	1								
8	PUMP HOUSING	ABS	213687-01	1								
8A	HEXAGON BOLT	4×55, SS	7B02-0455	4								
8B	FLANGE NUT	4, SS	7J02-0400	4								

J. Accessories & Packaging

KM-1800SAH, KM-1800SAH3, KM-1800SWH, KM-1800SWH3, KM-1800SRH, KM-1800SRH3

L-0, M-0, M-1, N-0, N-1, P-0, P-1, Q-0

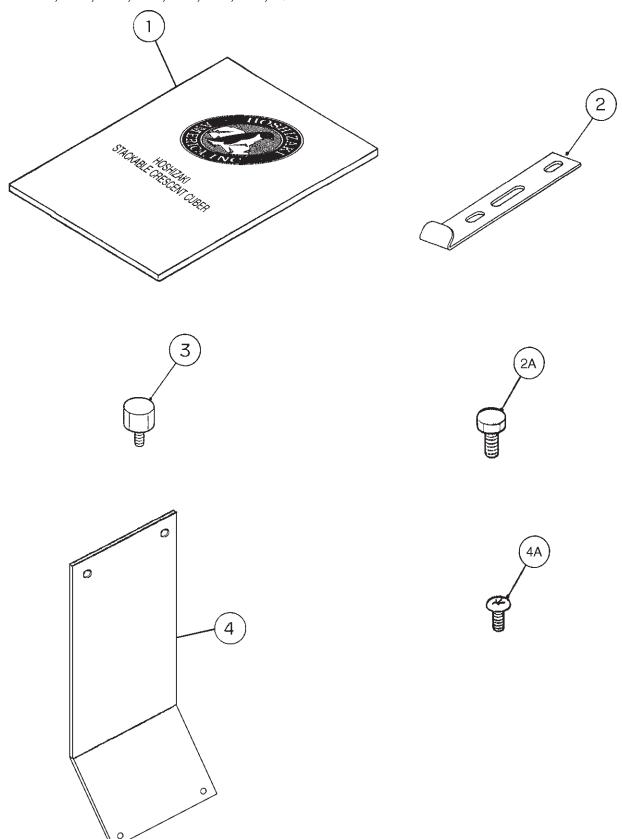

Title: J.	Accessories & Packaging M	odel: KM-1800S KM-1800S		SAH3,	KM-1	800S\	VH, K	M-180	0SWF	13, KN	I-1800	SRH,
				Required Number								
Index No.	Description	Material or Model Number	Part Number	L-0 to P-1	Q-0							
1	INSTRUCTION MANUAL	PAPER	91A1SA10C	1	1							
2	UNIVERSAL BRACE	GS	4A0363-01	2	2							
2A	HEX HEAD BOLT	5×12, SS	7B02-0512	4	4							
3	THUMBSCREW	ABS, SS	415949G01	1	1							
4	THERMOSTAT EXTENSION BRACKET	SS	3A0408-01	1	1							
4A	TRUSS HEAD SCREW	4×10, SS	7C32-0410	2	2							
PACKA (Availab	GING ble only on models currently in p	roduction)	2A0876A09									
1	PALLET	-	2A0865-01	1	1							
2	TRAY	-	2A2173-05	1	1							
3	WOOD BLOCK – B	-	4A0004-02	3	3							
4	CORNER POST	-	3A0788-08	2	2							
5	WOOD BLOCK – C	-	4A0004-03	2	2							
6	MODEL AND SERIAL NO.	-	4A0023-01	1	-							
	LABEL		4A2999-01		1							
7	SIDE PROTECTOR	-	4A2304-01	3	3							
8	CORNER POST	-	3A0788-01	4	4							
9	SIDE PROTECTOR	-	4A2304-02	2	2							