
Hoshizaki America, Inc.

Modular Crescent Cuber

Models KM-320MAH KM-320MWH

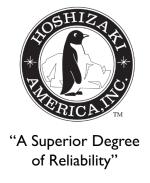

PARTS LIST

www.hoshizaki.com



Number: 71250 Issued: 2-13-2006

Revised: 10-19-2015

CONTENTS

Auxiliary Codes	3
Note About Ordering Parts	
A. Main Assembly & Refrigeration Circuit	
KM-320MAH	
KM-320MWH	
B. Water Circuit	
C. Control Box Assembly	
D. Accessories & Labels	

Auxiliary Codes

KM-320MAH

Q-0	September 2005
R-1	March 2006
S-1	January 2007
T-0	January 2008
U-0	January 2009
U-1	February 2009
U-2	March 2009
V-0	January 2010
V-1	March 2010
V-2	April 2010
V-3	August 2010
A-0	January 2011
B-0	January 2012
C-0	January 2013
C-1	May 2013
C-2	October 2013
D-0	January 2014
D-1	March 2014
D-2	December 2014
E-0	January 2015

KM-320MWH

O-0September 2005 R-1 March 2006 S-1 January 2007 T-0 January 2008 U-0 January 2009 U-1 February 2009 U-2 March 2009 V-1 March 2010 V-2 April 2010 V-3 August 2010 A-0 January 2011 B-0 January 2012 C-0 January 2013 C-2 May 2013 D-0 February 2014 E-0 January 2015

Auxiliary Code Breakdown


The auxiliary code is the first two characters in the serial number. The first character indicates the year. Years progress or regress in alphabetical order. The series runs from "A" through "V" and the letters "I" and "O" are skipped. The second character indicates significant part changes within a year. Base is "0" and this number advances for each change. In cases where there is a letter in parentheses, this designates the month. This is the last character in the serial number. The series runs from "(A)" through "(M)" and the letter "(I)" is skipped. This designation is only included when identifying a parts change within an auxiliary code.

Note About Ordering Parts

Most assemblies cannot be ordered as complete units; parts in the assemblies generally must be ordered separately.

A. Main Assembly & Refrigeration Circuit KM-320MAH


Q-0 to E-0

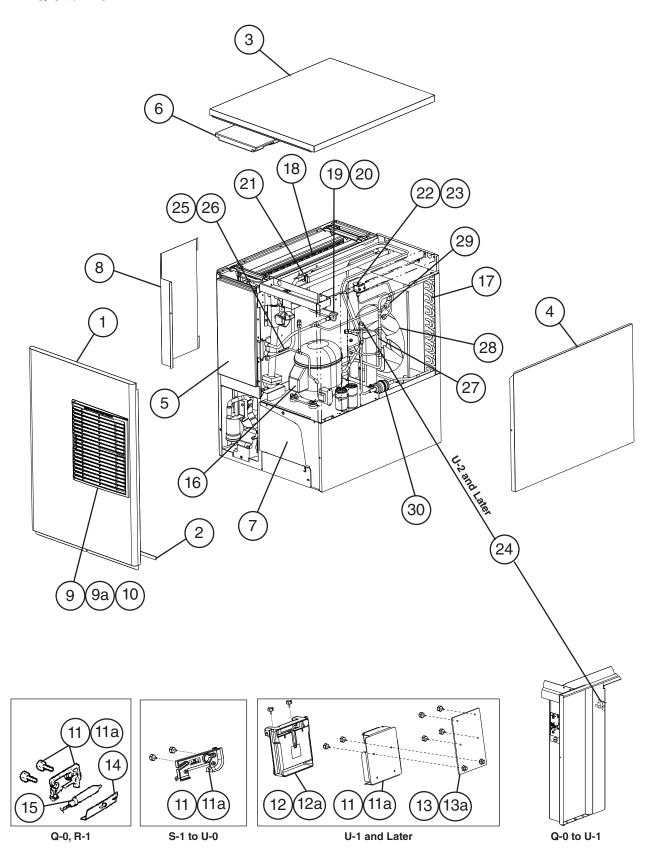

Title: A. Main Assembly & Refrigeration Circuit Model: KM-320MAH												
							Requi	red N	umber			
					S-1		U-2	C-1				
Index		Material or		Q-0	to	l	to	to				
No.	Description	Model Number		R-1	U-0	U-1	C-0	E-0				
Main Assembly												
1	Front Panel		2A2141G01	1	1	1	1	1				
2	Gasket	L=554 mm	4A0808L02	1	1	1	1	1				
3	Top Panel		3A1890A01	1	1	1	1	1				
4	Right Side Panel		2A2117G01	1	1	1	1	1				
5	Front Insulation		215731G01	1	1	1	1	1				
6	Top Insulation		215730G01	1	1	1	1	1				
7	Base Cover		321525G01	1	1	1	1	1		<u> </u>		
8	Control Box Cover		3A2476-01	1	1	1	1	1				
9	Louver		1A0547-01	1	1	1	1	1				\vdash
9a	Push Retainer		4A2414-01	3	3	3	3	3				
10	Air Filter		2A2062G01	1	1	1	1	1				
11	Bulb Holder		328919-01	1	-							
	Markania I Dia Cantal Cuitak		3A3903-01		1	-	4					
	Mechanical Bin Control Switch Mount		3A4463-01 3A6040-01			1	1	-				
11.0		<u> </u>		<u> </u>	2		<u> </u>	1		<u> </u>	<u> </u>	
11a	Thumbscrew		415949G11		2	-		2				
10	Machaniaal Din Control		415949G10			2	2			-	<u> </u>	\vdash
120	Mechanical Bin Control		2A4393G01 415949G10			1	1 2	2		-		
12a 13	Thumbscrews Mechanical Bin Control		4A5046G01	<u> </u>		2	1	1		-	<u> </u>	
13	Extension Bracket							'				
13a	Thumbscrew		415949G10			4	4	4				Щ
14	Deflector		4A1951-01	1	-							
15	Spacer		443545-01	1	-							Щ
		Pofri	geration Circ	ui+								
16	Compressor	nem	4A2456-01	1	1	1	1	1		1	İ	<u> </u>
17	Condenser		2A3476-01	1	1	1	1	1				
18	Evaporator		2A3476-01 2A3526G01		1	1	1	1				
19	Thermostatic Expansion Valve		4A1414-01	1	1	1	1	1		_		$\vdash\vdash\vdash$
20	Thermostatic Expansion Cover	<u> </u>	3A0944-01	1	1	1	1	1		_		$\vdash \vdash \vdash$
21	Thermostatic Expansion Valve		3A0107-01	1	1	1	1	1				
- 00	Holder		0110454 04	4	4	4	4	4				$\vdash \vdash \vdash$
22	Hot Gas Valve Body Valve Coil		3U0151-01	1	1	1	1	1				$\vdash \vdash \vdash$
23	High-Pressure Switch	<u> </u>	3U0151F01 433441-07	1	1	1	1 -	1			<u> </u>	\vdash
24	i ligh-riessure switch		463180-04	-		1	1	1		-		$\vdash\vdash\vdash$
25	Thermistor		429006-03	1	1	1	1	1		-		$\vdash\vdash\vdash$
26	Thermistor Holder		427430-01	1	1	1	1	1		-		
										<u> </u>		
27 28	Fan Motor Fan Blade		4A3158-01 444898-01	1	1	1	1	1				
29	Strainer		441569-01	1	1	1	1	1		-		\vdash
30	Drier		441569-01 4A2666-01	1	1	1	1	1				$\vdash\vdash\vdash$
J 30	Diret		HA2000-UI									


A. Main Assembly & Refrigeration Circuit KM-320MWH

Q-0 to E-0

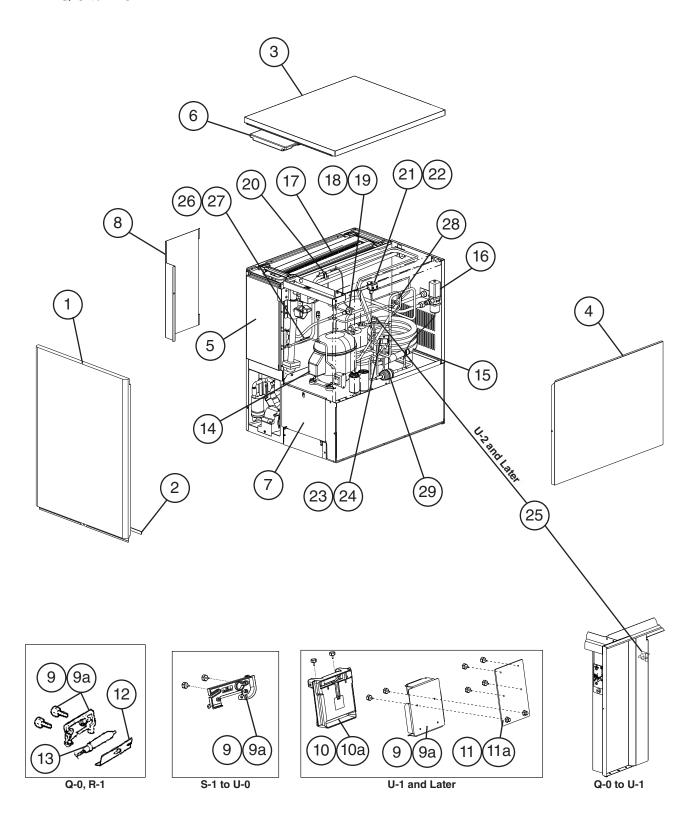

Title: A. Main Assembly & Refrigeration Circuit Model: KM-320MWH												
	, ,	Required Number										
					S-1		U-2		C-2			
Index		Material or		Q-0	to		to		to			
No.	Description	Model Number		R-1	U-0	U-1	C-0	C-1	E-0			
Main Assembly												
1	Front Panel		2A2150G01	1	1	1	1	1	1			
2	Gasket	L=554 mm	4A0808L02	1	1	1	1	1	1			
3	Top Panel		3A1890A01	1	1	1	1	1	1			
4	Right Side Panel		2A2117G01	1	1	1	1	1	1			
5	Front Insulation		215731G01	1	1	1	1	1	1			
6	Top Insulation		215730G01	1	1	1	1	1	1			
7	Base Cover		321525G01	1	1	1	1	1	1			
8	Control Box Cover		3A2476-01	1	1	1	1	1	1			
9	Bulb Holder		328919-01	1	-							
			3A3903-01		1	-						
	Mechanical Bin Control Switch		3A4463-01			1	1	-				
	Mount		3A6040-01					1	1			
9a	Thumbscrew		415949G11		2	-						
			415949G10			2	2	2	2			
10	Mechanical Bin Control		2A4393G01			1	1	1	1			
10a	Thumbscrew		415949G10			2	2	2	2			
11	Mechanical Bin Control Extension Bracket		4A5046G01			1	1	1	1			
11a	Thumbscrew		415949G10			4	4	4	4			
12	Deflector		4A1951-01	1	-							
13	Spacer		443545-01	1	-							
					,							
		Refri	geration Circ	uit								
14	Compressor		4A2456-01	1	1	1	1	1	1			
15	Condenser		2A2359G01	1	1	1	1	1	-			
			3A7321-01						1			
16	Water Regulator		4A0911-06	1	1	1	1	1	1			
17	Evaporator		2A3526G01	1	1	1	1	1	1			
	Thermostatic Expansion Valve		4A1414-01	1	1	1	1	1	1			
19	Thermostatic Expansion Valve Cover		3A0944-01	1	1	1	1	1	1			
20	Thermostatic Expansion Valve Holder		3A0107-01	1	1	1	1	1	1			
21	Hot Gas Valve Body		3U0151-01	1	1	1	1	1	1			
22	Valve Coil		3U0151F01	1	1	1	1	1	1			
23	Liquid Line Valve Body		4A3276-01	1	1	1	1	1	1			
24	Valve Coil		4A3277-01	1	1	1	1	1	1			
25	High-Pressure Switch		433441-05	1	1	1	-					
			463180-05				1	1	1			
26	Thermistor		429006-03	1	1	1	1	1	1			
27	Thermistor Holder		427430-01	1	1	1	1	1	1			
28	Strainer		441569-01	1	1	1	1	1	1			
29	Drier		4A2666-01	1	1	1	1	1	1			
23 24 25 26 27 28	Liquid Line Valve Body Valve Coil High-Pressure Switch Thermistor Thermistor Holder Strainer		4A3276-01 4A3277-01 433441-05 463180-05 429006-03 427430-01 441569-01	1 1 1 1 1	1 1 1 1 1 1	1 1 1 1 1	1 1 1 1 1 1	1 1 1 1 1 1	1 1 1 1 1 1			


B. Water Circuit KM-320M_H

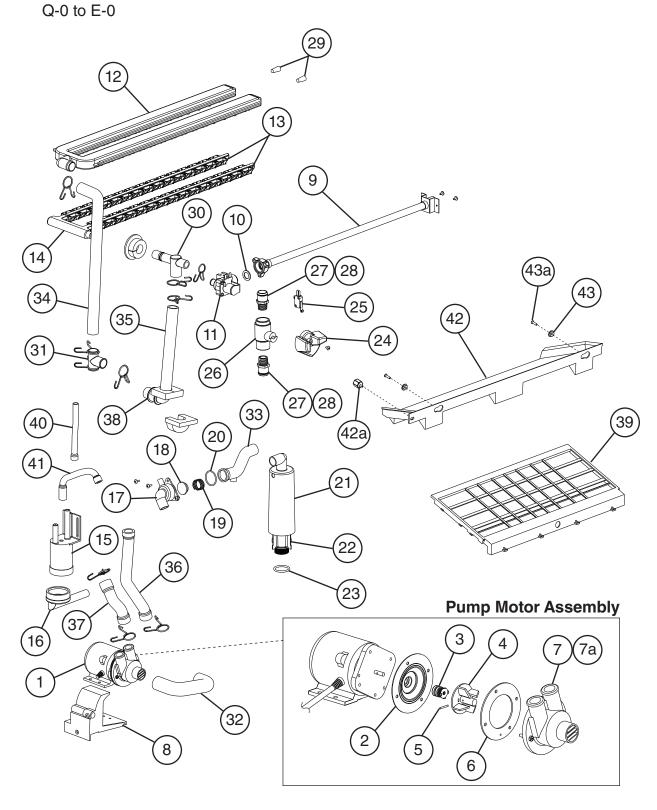

				Required Number								
					R-1	D-1						
Index		Material or			to	to						
No.	Description	Model Number		Q-0	D-0	E-0						
1	Pump Motor Assembly (includes items 2-7a)	PA0613	3A2638A03	1	1	1						
2	Pump Flange		3A2974-01	1	-							
			3A2988-01		1	1						
3	Mechanical Seal		465627-01	1	1	1						
4	Impeller		433522-01	1	1	1						
5	Pin		4A0648-01	1	1	1						
6	Pump Gasket		4A2974-01	1	1	1						
7	Pump Housing		211409-01	1	1	1						
7a	Screw		4A3871-01	4	4	4						
8	Pump Motor Bracket		211408-01	1	1	1						
9	Water Supply Pipe		4A5216G04	1	1	1						
10	Rubber Gasket		413854-03	1	1	1						
11	Inlet Water Valve		3U0150-01	1	1	-						
			3U0111-04			1						
12	Spray Tube		1A0260-02	1	1	1						
13	Spray Guide		208586-01	6	6	6						
14	Water Supply Tube		2A0079-01	1	1	1						
15	Float Switch		4A3624-01	1	1	1						
16	Float Switch Connector		426799-01	1	1	1						
17	Drain Valve Housing		321001-01	1	1	1						
18	Drain Valve Seat		433705-01	1	1	1						Ī
19	Drain Valve Spring		322110-01	1	1	1						
20	Drain Valve O-Ring		7611-G035	1	1	1						
21	Overflow Cap		321002-01	1	1	1						
22	Overflow Pipe		430722-08	1	1	1						T
23	Overflow Pipe O-Ring		4A1234-01	1	1	1						
24	Cleaning Valve Handle		215383-01	1	1	1						
25	Cleaning Valve Microswitch		4A2546-01	1	1	1						
	Cleaning Valve Ball Valve		439293-01	1	1	1						
27	Cleaning Valve Male Adaptor		325826-01	2	2	2						
28	Cleaning Valve O-Ring		7611-P018	2		laced	with th	hread	ı sealar	ıt tape		_
29	Spray Tube Plug		4A0176-01	2	2	2						
30	Tee		4A0177-01	1	1	1						
31	Distributor		432426-01	1	1	1						
32	Suction House		433466-01	1	1	1						T
33	Drain Hose		433468-01	1	1	1						t
34	Rubber Hose		4A1551-03	1	1	1						T
35	Rubber Hose		4A1551-04	1	1	1						
36	Vinyl Hose	L=250 mm	7716-2025	1	1	1		 			ļ	\vdash
37	Vinyl Hose	L=250 mm	7716-2025	1	1	1						
38	Rubber Ring	L-110 IIIIII	439236-01	1	1	1		-	-			\vdash
39	Cube Guide		212088-01	1	1	1		\vdash	 			\vdash
	Silicone Hose	L=140 mm	773013812	1	1	1		 				\vdash
40			17 7 3111.30 17									1

Title: B	Title: B. Water Circuit Model: KM-320M_H											
				Required Number								
					R-1	D-1						
Index		Material or			to	to						
No.	Description	Model Number	Part Number	Q-0	D-0	E-0						
42	Deflector A		3A3500-01	1	1	1						
42a	Thumbscrew		415949G12	1	1	1						
43	Collar		435269-01	2	2	2						
43a	Flat Head T2 Screw	4x16	7P22-0416	2	2	2						
	Hose Clamp	25 mm	427443-03	9	9	9						
	Hose Clamp	18 mm	427443-05	1	1	1						
	Hose Clamp	20 mm	427443-03	1	1	1						


C. Control Box Assembly

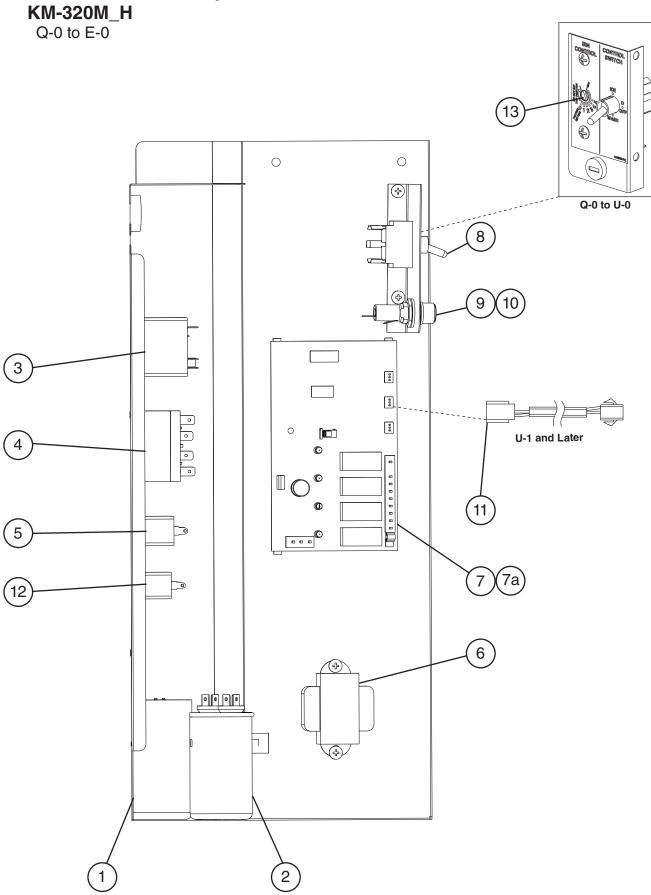

Title: C	C. Control Box Assembly Mo	del: KM-320M_H										
				Required Number								
				Q-0	U-1	V-2						
Index	<u></u>	Material or		to	to	to						
No.	Description	Model Number		U-0	V-1	E-0	<u> </u>	-		-		<u> </u>
1	Start Capacitor	330VAC, 72-86 MFD	3A1414-01	1	1	1						
2	Run Capacitor	440VAC, 20 MFD	3A2005-01	1	1	1						
3	Start Relay		4A1107-14	1	1	1						
4	Magnetic Contactor		428393-01	1	1	-						
	Compressor Relay		4A3140-01			1						
5	Pump Motor Capacitor	5.5 MFD, 250VAC	443192-03	1	1	1						
6	Control Transformer		3A0172-01	1	1	1						
7	Control Board	"E" Control Board	2A1410-01	1	-							
		"G" Control Board	2A3792-01		1	1						
7a	Control Board Support		4A0336-03	4	4	4						
8	Control Switch		443119-01	1	1	1						
9	Fuse Holder		4A5443-01	1	1	1						
10	Fuse	AGC-10A, 250VAC	4A0893-07	1	1	1						
11	Mechanical Bin control Wire Harness		4A2200G04		1	1						
12	Fan Motor Capacitor	KM-320MAH 5 MFD, 250VAC	443192-02	1	1	1						
13	Bin Control Thermostat		4A2879-02	1	-							

D. Accessories & Labels KM-320M_H

Q-0 to E-0

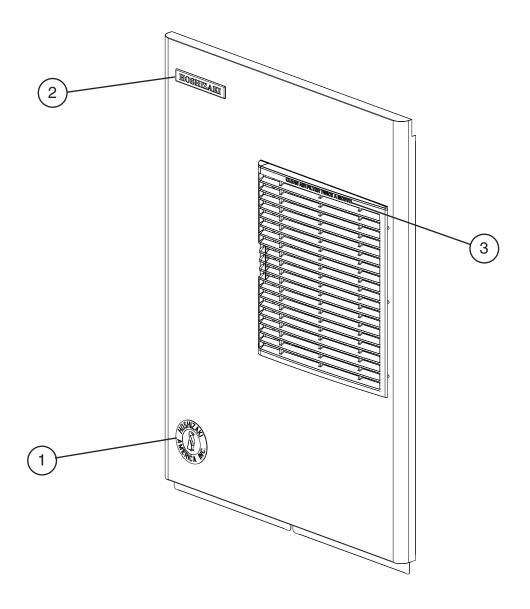

Title: D	Title: D. Accessories & Labels Model: KM-320M_H											
				Required Number								
				Q-0								
				to								
Index		Material or		E-0	E-0							
No.	Description	Model Number	Part Number	(A)	(B)							
1	Penguin Label		4A0526-01	1	1							
2	Hoshizaki Emblem		4A0560-01	1	1							
3	Air Filter Label		426177-01	1	-							
4	Universal Brace		4A0363-01	2	2							
4a	Hex Head Bolt	5×12, SS	7B02-0512	4	4							