

## Parts List

Modular Crescent Cuber

Models KMD-850MAH, MWH, MRH



Number: 71284 Issued: 8/27/2008 Revised: 10-4-2017

### **CONTENTS**

Auxiliary Codes	3
Note About Ordering Parts	
A. Main Assembly & Refrigeration Circuit	
KMD-850MAH	
KMD-850MWH	8
KMD-850MRH	. 10
B. Water Circuit	. 13
C. Control Box Assembly	. 16
D. Accessories & Labels	

### **Auxiliary Codes**

#### KMD-850MAH

- T-0 March 2008 U-1 April 2009
- U-2 July 2009
- V-0 January 2010
- V-1 July 2010
- A-0 January 2011
- B-0 January 2012
- C-0 January 2013
- C-1 August 2013
- C-2 December 2013
- D-1 January 2014
- D-2 July 2014
- E-0 January 2015
- F-0 January 2016
- G-0 January 2017
- G-1 April 2017

#### KMD-850MWH

- T-0 March 2008
- U-1 May 2009
- U-2 October 2009
- V-0 January 2010
- V-1 July 2010
- A-0 February 2011
- B-0 April 2012
- C-0 January 2013
- C-1 March 2013
- C-2 November 2013
- D-1 January 2014
- E-0 January 2015
- F-0 February 2016
- G-1 April 2017

#### KMD-850MRH

- T-0 March 2008
- U-2 September 2009
- V-0 January 2010
- V-1 July 2010
- A-0 February 2011
- A-1 October 2011
- B-0 January 2012
- C-0 January 2013
- C-1 August 2013
- C-2 December 2013
- D-0 January 2014
- D-1 February 2014
- D-2 November 2014
- E-0 January 2015
- F-0 January 2016
- G-1 April 2017


#### **Auxiliary Code Breakdown**

The auxiliary code is the first two characters in the serial number. The first character indicates the year. Years progress or regress in alphabetical order. The series runs from "A" through "V" and the letters "I" and "O" are skipped. The second character indicates significant part changes within a year. Base is "0" and this number advances for each change. In cases where there is a letter in parentheses, this designates the month. This is the last character in the serial number. The series runs from "(A)" through "(M)" and the letter "(I)" is skipped. This designation is only included when identifying a parts change within an auxiliary code.

### **Note About Ordering Parts**


Most assemblies cannot be ordered as complete units; parts in the assemblies generally must be ordered separately.

## A. Main Assembly & Refrigeration Circuit KMD-850MAH

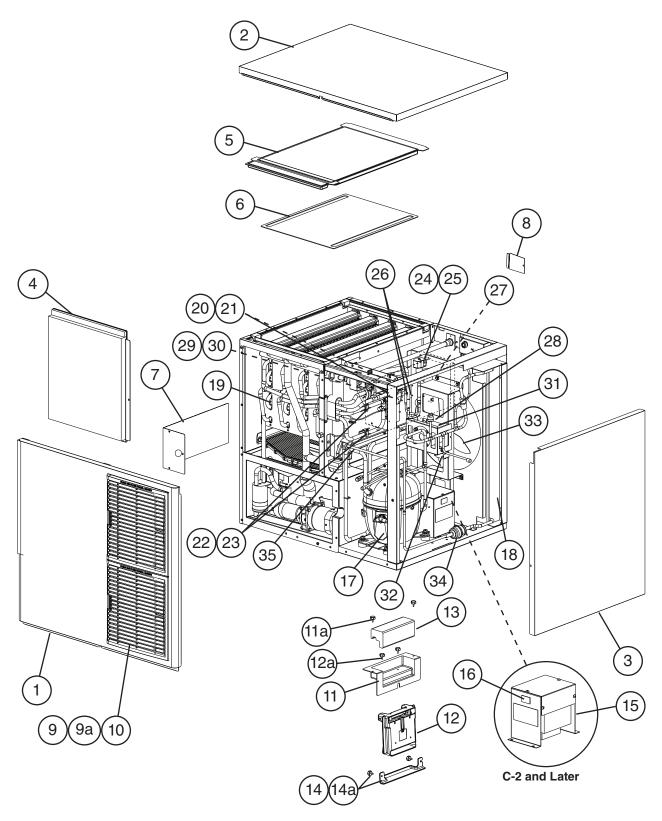


Title: A	Title: A. Main Assembly & Refrigeration Circuit Model: KMD-850MAH											
							Requi	red Nu	umber			
								C-2	E-0			
					U-1	U-2		to	(E)			
Index	Dog ordination	Material or	D- 4 N		to	to		E-0	to			
No.	Description	Model Number	Part Number in Assembly	T-0	C-0	C-0	C-1	(D)	G-1			
1	Front Panel	IVIA	2A2958G01	1	1	1	1	1	1			<u> </u>
2	Top Panel		2A2955G01	1	1	1	1	1	1			<u> </u>
3	Right Side Panel		2A2800G01	1	1	1	1	1	1			_
4	Front Insulation		3A2933G01	1	1	1	1	1	1			_
5	Top Insulation		3A2934G01	1	1	1	1	1	1			
6	Top Cover		3A2922-01	1	1	1	1	1	1			<u>                                       </u>
7	Control Box Cover		3A2371-01	1	1	1	1	1	1			
8	Junction Box Cover		433410-01	1	1	1	1	1	1			
9	Louver		1A0547-01	2	2	2	2	2	2			<u> </u>
9a	Push Retainer		4A2414-01	6	6	6	6	6	6			<u> </u>
10	Air Filter		2A2062G01	2	2	2	2	2	2		<b>-</b>	
11	Switch Cover		3A2642-01	1	1	1	2	2	2			
 11a	Thumbscrew		415949G10	2	2	2	2	2	2			
12	Bin Control		464574-01	1	-							<u>                                       </u>
14	5.17 00111101		2A4393G01	<del>- '-</del>	1	1	1	1	1			
12a	Thumbscrew		415949G10	2	2	2	2	2	2			<u>                                       </u>
13	Insulation-Switch		4A3068-01	1	1	1	1	1	1			<u>                                       </u>
14	Switch Guide		3A2643-01	1	1	1	1	1	1			<u> </u> 
14a	Thumbscrew		415949G10	2	2	2	2	2	2			<u> </u>
14a 15	Main Transformer		4A0817-01					1	1			
16	Voltage Tap Switch		4A1477-01	<u> </u>	<u> </u>		<u> </u>	1	1			<u> </u>
10	Voltage Tap Switch		4A 147 7-01	<u> </u>				'	<u>'</u>			<u> </u>
		Refric	geration Circu	iit								
17	Compressor	<u> </u>	4A4066-01	1	1	1	-					
	'		3A6900-02				1	1	1			
18	Condenser		1A0802-01	1	1	1	1	1	1			
19	Evaporator		2A2781G02	1	1	1	1	1	1			
	Thermostatic Expansion Valve		4A4008-01	2	2	2	2	2	2			
21	Thermostatic Expansion Valve Cover		3A0944-01	2	2	2	2	2	2			
22	Thermostatic Expansion Valve Holder		3A0107-01	2	2	2	2	2	2			
23	Clamp		443461-02	2	2	2	2	2	2			İ
24	Hot Gas Valve Body		4A3978-01	1	1	1	1	1	1			İ
25	Valve Coil		4A3277-01	1	1	1	1	1	1			İ
26	Check Valve		4A1373-01	2	2	2	2	2	2			İ
27	Strainer		441569-02	1	1	1	1	1	1			
28	High-Pressure Switch		433441-07	1	1	-						
			463180-04			1	1	1	1			
29	Thermistor		429006-03	1	1	1	1	1	1			
30	Thermistor Holder		427430-01	1	1	1	1	1	1			
31	Fan Motor		4A3158-01	1	1	1	1	1	1			
32	Fan Capacitor	5MFD, 250VAC	443192-02	1	1	1	1	1	1			
33	Fan Blade		4A4144-01	1	1	1	1	1	-			
			4A0197-01						1			
34	Drier		4A2666-01	1	1	1	1	1	1			
35	Heat Exchanger		2A4094G01	1	1	1	-					<u> </u>
			3A7845G01				1	1	1			

## A. Main Assembly & Refrigeration Circuit KMD-850MWH

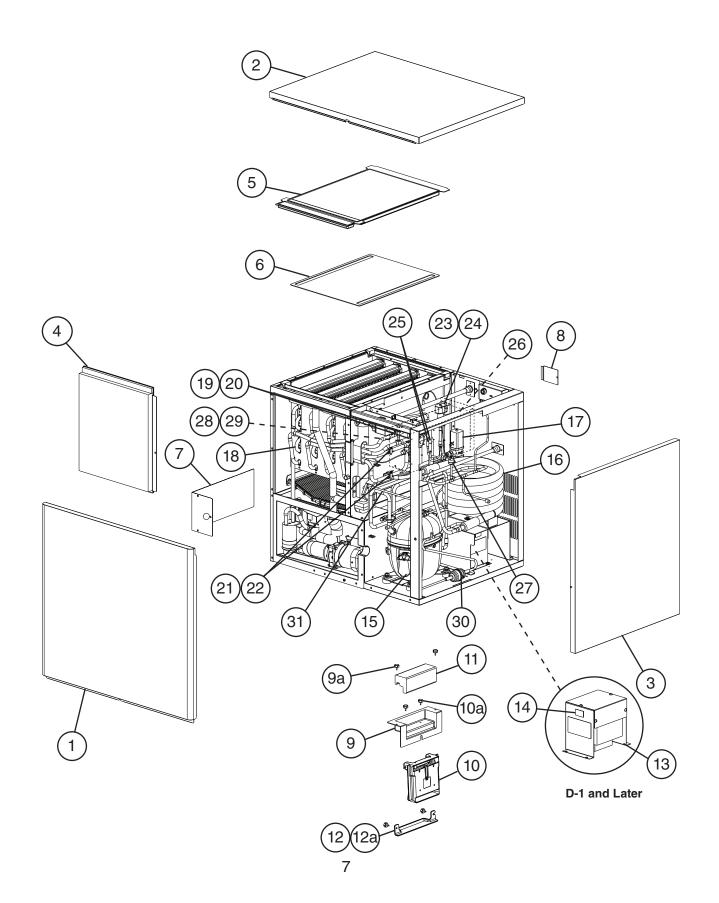

Title: A. Main Assembly & Refrigeration Circuit Model: KMD-850MWH												
	<u> </u>						Requi	red N	umber			
						U-2			D-1			
Index		Material or				to			to			
No.	Description	Model Number	Part Number	T-0	U-1	C-0	C-1	C-2	G-1			
	I	Ma	ain Assembly	i		1	1	i	1	i	i	
1	Front Panel		2A2956G01	1	1	1	1	1	1			
2	Top Panel		2A2959-01	1	1	1	1	1	1			
3	Right Side Panel		2A2800G01	1	1	1	1	1	1			
4	Front Insulation		3A2933G01	1	1	1	1	1	1			
5	Top Insulation		3A2934G01	1	1	1	1	1	1			
6	Top Cover		3A2922-01	1	1	1	1	1	1			
7	Control Box Cover		3A2371-01	1	1	1	1	1	1			
8	Junction Box Cover		433410-01	1	1	1	1	1	1			
9	Switch Cover		3A2642-01	1	1	1	1	1	1			
9a	Thumbscrew		415949G10	2	2	2	2	2	2			
10	Bin Control		464574-01	1	-							
1.5	<u> </u>		2A4393G01		1	1	1	1	1			
10a	Thumbscrew		415949G10	2	2	2	2	2	2			
11	Insulation-Switch		4A3068-01	1	1	1	1	1	1			
12	Switch Guide		3A2643-01	1	1	1	1	1	1			
12a	Thumbscrew		415949G10	2	2	2	1	1	1			
13	Main Transformer		4A0817-01						1			
14	Voltage Tap Switch		4A1477-01						1			
		Dofri	geration Circu	.;+								
15	Compressor	neili	4A4066-01	1	1	1	1	_				
15	Compressor		3A6900-02	<u>'</u>	-	<u>'</u>	<u>'</u>	1	1			
16	Condenser		2A2359G03	1	1	1			<u> </u>			
10	Condenser		3A7323-01	<u>'</u>	<u> </u>	<u>'</u>	1	1	1			
17	Water Regulator		4A0911-07	1	1	1	1	1	1			
18	Evaporator		2A2781G02	1	1	1	1	1	1			
19	Thermostatic Expansion Valve		4A4008-01	2	2	2	2	2	2			
20	Thermostatic Expansion Valve Cover		3A0944-01	2	2	2	2	2	2			
21	Thermostatic Expansion Valve Holder		3A0107-01	2	2	2	2	2	2			
22	Clamp		443461-02	2	2	2	2	2	2			
23	Hot Gas Valve Body		4A3978-01	1	1	1	1	1	1			
24	Valve Coil		4A3277-01	1	1	1	1	1	1	Ĺ	Ĺ	
25	Check Valve		4A1373-01	2	2	2	2	2	2			
26	Strainer		441569-02	1	1	1	1	1	1			
27	High-Pressure Switch		433441-05	1	1	-						
			463180-05			1	1	1	1			
28	Thermistor		429006-03	1	1	1	1	1	1			
29	Thermistor Holder		427430-01	1	1	1	1	1	1			
30	Drier		4A2666-01	1	1	1	1	1	1			
31	Heat Exchanger		2A4094G01	1	1	1	1	-				
			3A7820G01					1	1			

## A. Main Assembly & Refrigeration Circuit KMD-850MRH

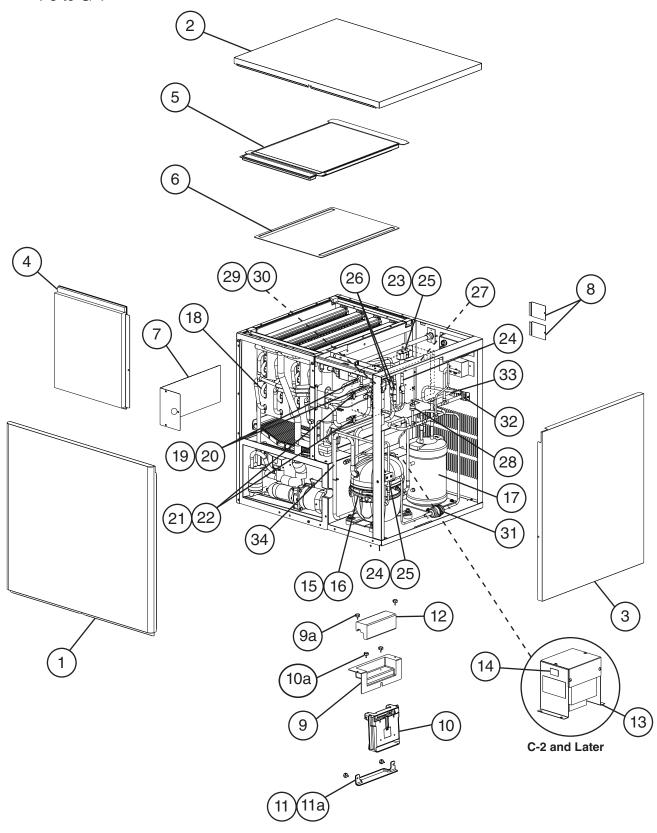

Title: A	. Main Assembly & Refrigeration	n Circuit Mod	el: KMD-850M	RH								
							Requi	red Nu	umber			
						U-2		C-2				
Index		Material or			l l	to		to				
No.	Description	Model Number	Part Number	T-0	U-1	C-0	C-1	G-1				
	T	MA	Ain Assembly									i
1	Front Panel		2A2956G01	1	1	1	1	1				
2	Top Panel		2A2959G01	1	1	1	1	1				
3	Right Side Panel		2A2800G01	1	1	1	1	1				
4	Front Insulation		3A2933G01	1	1	1	1	1				
5	Top Insulation		3A2934G01	1	1	1	1	1				
6	Top Cover		3A2922-01	1	1	1	1	1				
7	Control Box Cover		3A2371-01	1	1	1	1	1				
8	Junction Box Cover		433410-01	2	2	2	2	2				
9	Switch Cover		3A2642-01	1	1	1	1	1				
9a	Thumbscrew		415949G10	2	2	2	2	2				
10	Bin Control		464574-01	1	-							
			2A4393G01		1	1	1	1				
10a	Thumbscrew		415949G10	2	2	2	2	2				
11	Switch Guide		3A2643-01	1	1	1	1	1				
11a	Thumbscrew		415949G10	2	2	2	2	2				
12	Insulation-Switch		4A3068-01	1	1	1	1	1				
13	Main Transformer		4A0817-01					1				
14	Voltage Tap Switch		4A1477-01					1				
		Refri	geration Circu		1			1		1	1	
15	Compressor		4A4066-01	1	1	1	-					
			3A6900-02				1	1				
16	Crankcase Heater		434924-01	1	1	-						
			4A5091-01			1	1	1				
17	Receiver Tank		437652-01	1	1	1	1	1				
18	Evaporator		2A2781G02	1	1	1	1	1				
19	Thermostatic Expansion Valve		4A4008-01	2	2	2	2	2				
20	Thermostatic Expansion Valve Cover		3A0944-01	2	2	2	2	2				
21	Thermostatic Expansion Valve Holder		3A0107-01	2	2	2	2	2				
22	Clamp		443461-02	2	2	2	2	2				
23	Hot Gas Valve Body		4A3978-01	1	1	1	1	1				
24	Liquid Line Valve Body		4A3276-01	1	1	1	1	1				
25	Valve Coil		4A3277-01	2	2	2	2	2				
26	Check Valve		4A2054-01	2	2	2	2	2				
27	Strainer		441569-02	1	1	1	1	1				
28	High-Pressure Switch		433441-07	1	1	-						
			463180-04			1	1	1				
29	Thermistor		429006-03	1	1	1	1	1				
30	Thermistor Holder		427430-01	1	1	1	1	1				
31	Drier		4A2666-01	1	1	1	1	1				
32	Discharge Line Coupling		434136G01	1	1	1	1	1				
33	Liquid Line Coupling		433751G01	1	1	1	1	1				
34	Heat Exchanger		2A4094G01	1	1	1	-					
			3A7845G01				1	1				


#### **B. Water Circuit**

KMD-850MAH, KMD-850MWH, KMD-850MRH T-0 to G-1 (15) 16) 41 42 (37 35 (43) 32 10) 11 29 24 12 30 (31) 34 (28) 23 26 33 (18) 29 27) (20 25 (36) (19) (22 39 (21 (27 40 1 (38 **Pump Motor Assembly** 3b 5 3c 3d 3a 3e 2 6 3 8b (8a)

Title: B	B. Water Circuit Model: KMD-	850MAH, KMD-8	50MWH, KMD	-850N	IRH							
		,	, :2				Requi	ired N	umber			
				T-0	A-0	D-2						
Index		Material or		to	to	to						
No.	Description	Model Number	Part Number	V-1	D-1	F-0	G-1				<u> </u>	
1	Pump Motor Assembly (includes items 1 through 9)		2A2848A01	1	1	1	1					
2	Pump Motor		2U0106-01	1	1	1	-					
			3A7682-01				1					
3	Pump Flange		215662-01	1	1	1	1					
3a	Hex Bolt		7B02-0640	4	4	4	4	İ	İ		İ	
3b	Tooth Washer		7R22-0600	2	2	2	2	İ	İ			
3c	Flat Washer		7W22-0600	4	4	4	4	İ	İ			
3d	Split Lock Washer		7L22-0600	4	4	4	4					
3e	Hex Nut		7N12-0600	4	4	4	4					
4	Mechanical Seal		4A3820-01	1	1	1	1					
5	Packing		428547-01	1	1	1	1	İ	İ			
6	Impeller		428548-01	1	1	1	1					
7	Pin		4A0648-01	1	1	1	1	İ	İ			
8	Pump Housing		2A2762-01	1	1	1	1					
8a	Hex Bolt	4×30, SS	7B02-0430	4	4	4	4					
8b	Hex Flange Nut		7J02-0400	4	4	4	4					
9	Pump Motor Bracket		323904-01	1	1	1	1				<u> </u>	
10	Water Supply Pipe		4A0768G08	1	1	1	1					
11	Rubber Gasket		413854-03	1	1	1	1					
12	Inlet Water Valve	KMD-850MAH	3U0111-02	1	1	-	<u> </u>	<u> </u>	<u> </u>	<u> </u>	<u>                                       </u>	<u> </u>
	I met traier vaive		4A5251-04	 	<u> </u>	1	1	<u> </u>	<u> </u>		<u>                                       </u>	
		KMD-850MWH		1	1	1	1					<u>                                       </u>
		KMD-850MRH										
13	Water Valve Hose		3A2648-01	1	1	1	1					
14	Left Spray Tube		2A2369-01	1	1	1	1					
15	Right Spray Tube		2A2369-02	1	1	1	1					
16	Spray Guide		2A4282-03	4	4	4	4					
17	Spray Tube Plug		3A2645-01	4	4	4	4					
18	Float Switch		4A3624-01	1	1	1	1					
19	Float Switch Connector		426799-03	1	1	1	1					
20	Float Switch Hose		3A2647-01	1	1	1	1					
21	Drain Valve		4A5447-01	1	1	1	1					
22	Drain Hose		4A3002-01	1	1	1	1					
23	Overflow Cap		321002-01	1	1	1	1					
24	Overflow Drain Hose		4A3003-01	1	1	1	1					
25	Over Flow O-Ring		4A1234-01	1	1	1	1					
26	Overflow Pipe		430722-10	1	1	1	1					
27	Suction Hose		4A3001-01	1	1	1	1					
28	Microswitch		4A2546-01	1	1	1	1					
29	Male Adapter		325826-01	2	2	2	2					
30	O-Ring		7611-P018	2		Repla	aced w	ith Th	read S	Sealan	t Type	
31	Ball Valve		439293-01	1	1	1	1					
32	Distributor (Tee)		432426-01	2	2	2	2					
33	Silicone Hose	L=200 mm	773013896	1	1	1	1					
34	Vinyl Hose	L=358 mm	7716-2025	1	1	1	1					
35	Vinyl Hose	L=63 mm	7716-2025	2	2	2	2					


Title: B	B. Water Circuit Model: KMD-8	350MAH, KMD-8	50MWH, KMD	-850M	IRH							
							Requi	ired N	umber			
Index No.	Description	Material or Model Number	Part Number	T-0 to V-1	A-0 to D-1	D-2 to F-0	G-1					
36	Bypass Hose	Woder Number	439237-03	1	1	1	1	<u>                                       </u>		<u>                                       </u>	<u> </u>	<u>                                       </u>
37	Vinyl Hose	L=47 mm	7716-1519	1	1	1	1 1	<u>                                       </u>		<u>                                       </u>	<u> </u>	<u>                                       </u>
38	Pump Motor Drain Hose		4A3044-01	1	1	1	1					
39	Drain Plug		309246-01	1	1	1	1					
40	Drain O-Ring		7611-P015	1	1	1	1			İ		
41	Left Water Supply Tube		2A2370-02	1	1	1	1		İ			
42	Right Water Supply Tube		2A2370-01	1	1	1	1					
43	Cube Guide A		1A0842-01	1	1	1	1					
44	Cube Guide B		1A0781-01	1	1	1	1					
44a	Thumbscrew		415949G10	1	1	1	1					
45	Discharge Hose		3A2646-01	1	1	1	1					
		Н	ose Clamps									
	Hose Clamp	25 mm	427443-03	9	9	9	9					
	Hose Clamp	18 mm	427443-05	2	2	2	2					
	Hose Clamp	20 mm	427443-06	3	3	3	3					
	Hose Clamp	27 mm	427443-08	1	1	1	1					
	Hose Clamp	20-30 mm	4A2017-02	1	1	1	1					
	Hose Clamp	15-17 mm	4A2017-07	1	1	1	1					

# C. Control Box Assembly KMD-850MAH, KMD-850MWH, KMD-850MRH

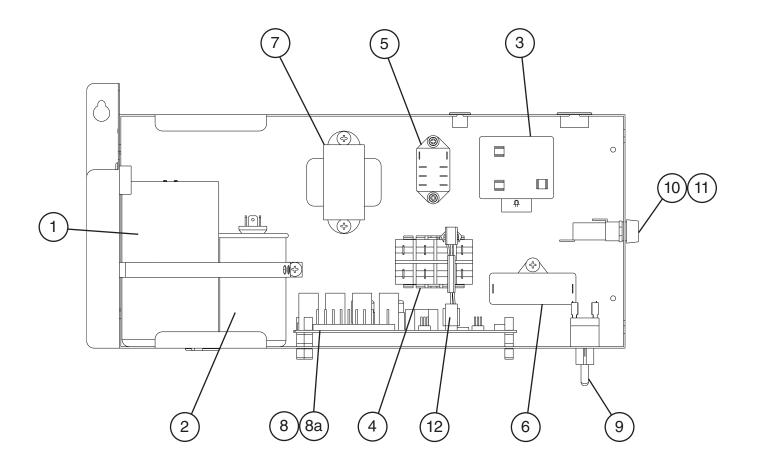

Title: C	. Control Box Assembly N	lodel: KMD-850MA	H, KMD-850M	WH, K	MD-8	50MR						
							Requ	ired N	umber			
				T-0		C-2						
Index	<u></u>	Material or		to		to						
No.	Description	Model Number	Part Number	C-0	C-1	G-1			<u> </u>			<u> </u>
1	Start Capacitor	KMD-850MAH KMD-850MRH	3A0076-01	1	-							
		145-174MFD,										
		250VAC										
		KMD-850MAH	3A0076-22		1	1			1			
		KMD-850MRH										
		108-130MFD,										
		330VAC						_	-			_
		<b>KMD-850MWH</b> 145-174MFD,	3A0076-01	1	1	-						
		250VAC										
		KMD-850MWH	3A0076-22			1						$\vdash$
		108-130MFD,	0710070 22									
		330VAC										
2	Run Capacitor	KMD-850MAH	3A2005-03	1	-							
		KMD-850MRH										
		30MFD, 370VAC										
		KMD-850MAH	3A2005-14		1	1			<del>                                     </del>			┢
		KMD-850MRH	5A2003-14		'	'						
		30MFD,										
		440VAC										
		KMD-850MWH	3A2005-03	1	1	-						
		30MFD,										
		370VAC							-			⊢
		KMD-850MWH	3A2005-14			1						
		30MFD, 440VAC										
3	Start Relay	KMD-850MAH	4A1107-09	1	-							
		KMD-850MRH										
		3ARR3CT10S5							<u> </u>			
		KMD-850MAH	4A1107-07		1	1						
		KMD-850MRH 3ARR3KC6V5										
		KMD-850MWH	4A1107-09	1	1	_		$\vdash$	$\vdash$			
		3ARR3CT10S5	17 (1707 00	'								
		KMD-850MWH	4A1107-07			1						
		3ARR3KC6V5							<u> </u>			<u> </u>
4	Compressor Relay	KMD-850MAH	4A3140-01	1	1	1						
		KMD-850MWH	445000.04	4		4		$\vdash$	-	_		$\vdash$
	Comico Delev	KMD-850MRH	4A5096-01	1	1	1		$\vdash$	-			$\vdash$
5	Service Relay	120VAC	406132-07	1	1	1		-	-			<u> </u>
6	Pump Capacitor	10MFD, 250VAC	443192-01	1	1	1						
7	Control Transformer	200 1/10	3A0172-01	1	1	1		$\vdash$	$\vdash$	<del></del>	<u> </u>	$\vdash$
8	Control Board		2A3792-01	1	1	1		$\vdash$	$\vdash$	<del></del>		$\vdash$
8a	Control Board Support	+	4A0336-03	4	4	4		$\vdash$	+	<del></del>	<del>                                     </del>	$\vdash$
9	Toggle Switch		443119-01	1	1	1		$\vdash$	$\vdash$		<u> </u>	$\vdash$
10	Fuse Holder	+	4A5443-01	1	1	1		$\vdash$	$\vdash$			$\vdash$
11	Fuse	AGC-10A,	4A0893-07	1	1	1		$\vdash$	$\vdash$			$\vdash$
	1 U3C	250VAC										
12	Wire Harness		4A2200G04	1	1	1						

### D. Accessories & Labels KMD-850MAH, KMD-850MWH, KMD-850MRH

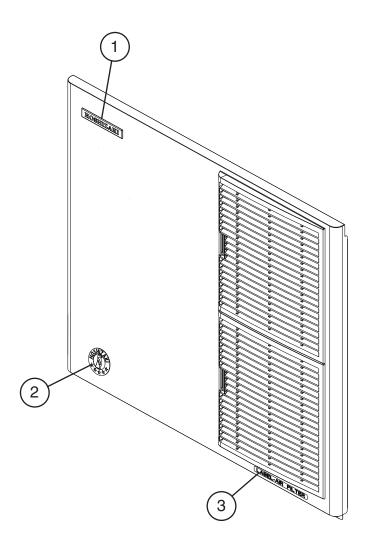

Title: D	. Accessories & Labels Mo	del: KMD-850MA	H, KMD-850M	WH, K	MD-8	50MRI	Н				
				Required Number							
				T-0	D-2						
Index		Material or		to	to						
No.	Description	Model Number	Part Number	D-1	G-1						
1	Emblem		4A0560-01	1	1						
2	Penguin Label		4A0526-01	1	1						
3	Air Filter Label		426177-01	1	-						
4	Universal Brace		4A0363-01	2	2						
4a	Hex Bolt	5×12, SS	7B02-0512	2	2						