NO.	71149
ISSUED:	AUG. 30, 1999
BEVISED:	APRII 4 2001



HOSHIZAKI MODULAR CRESCENT CUBER

MODELS
KML-450MAF
KML-450MWF
KML-450MAH
KML-450MWH

PARTS LIST

KML-450MAF	J-0 K-0 L-0	Jan., 1999 Dec., 1999 Dec., 2000
KML-450MWF	J-0 K-0 L-0	Jan., 1999 Dec., 1999 Dec., 2000
KML-450MAH	L-0 L-1	March, 2001 March, 2001
KML-450MWH	L-0	March, 2001

MATERIAL ABBREVIATIONS

ALUMINUM

AL = Aluminum

COPPER

CU = Copper

PLASTIC

ABS = Acrylonitrile -butadiene - styrene

AC = Polyacetal

EVA = Ethylene vinyl acetate
PA = Polyamide = Nylon
PC = Polycarbonate
PE = Polyethylene
PES = Polyester

PETP = Polyethylene terephthalate = Tetlon

PP = Polypropylene PS = Polystyrene

PIFE = Polytetrafluoroethylene = Teflon

PUR = Polyurethane PVC = Polyvinyl chloride

RUBBER

VN = Vinyl Nitrile EPDM = EP rubber

NBR = Nitrile butadiene rubber

NR = Natural rubber

NP = Neoprene

SI.R = Silicone rubber

SYR = Synthetic rubber

EPH = Epichlorohydrin

STEEL

GS = Galvanized steel
SS = Stainless steel
PS = Plated steel
PAS = Primed steel

AUXILIARY CODE

Ex.1 $\underline{\underline{K-0}}$ Parts are the same as in the preceding year.

"K" is the tenth in alphabetical order with "I" skipped. So, "K" indicates "2000".

(**Note**) - = Part deleted.

x = Part deleted and replaced by interchangeable "o" part.


o = New part for "x" in the same auxiliary code.


Ex.2 <u>L-0</u> "L" is the next in alphabetical order. So, "L" indicates "2001".

Ex.3

L-1


Each time a part is replaced by a non-interchangeable part during a year, this number advances.

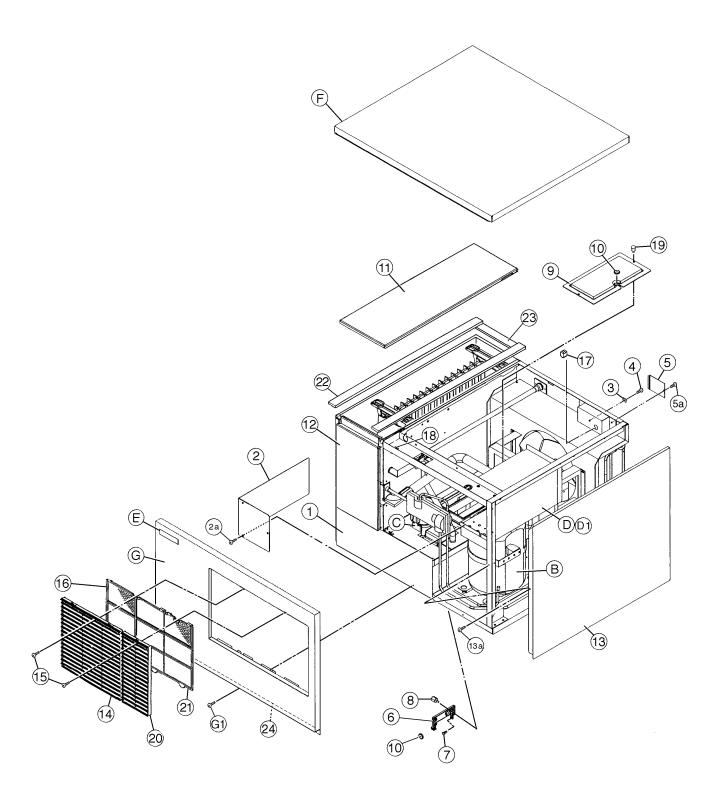

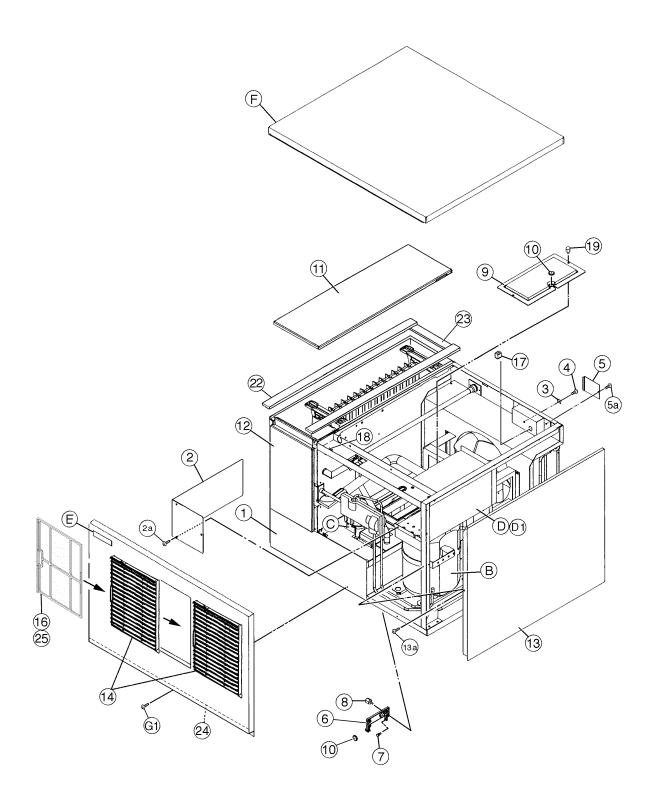


	MODEL: KML-450MAF, KML-4	450MAH TITLE:	A. ICE CUE	BER A	ASSE	MBLY	1	
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL	PART NUMBER	REQUIRED NUMB				R
		NUMBER		MAF	1	MAH	1	1
				J-0	L-0	L-0	L-1	
				K-0				
В	REFRIGERATION CIRCUIT	-	1A0412A01	1	1	1	1	
С	WATER CIRCUIT	-	1A0438A01	1	1	1	1	
D	CONT. BOX ASSEMBLY	-	2A1519A01	1	1			
		-	2A2154A01			1	1	
D1	T2 SCREW	4X8	7P31-0408	3	3	3	3	
Е	LABEL LOCATION	-	3A1339A01	1	1			
		-	3A1922A01			1	1	
F	TOP PANEL ASSEMBLY	-	3A0674A01	1	1			
		-	3A1862A01			1	1	
G	FRONT PANEL	-	3A1273A01	1	1			
		-	3A1859A01			1	1	
G1	TRUSS HEAD SCREW	4X8, SS	7C32-0408	1	1	1	1	
1	EVAP. CASE	HS-1014	2A1449G01	1	1			
		-	2A2113G01			1	1	
2	CONT. BOX COVER	GS	3A0594-01	1	1			
		GS	3A1828-01			1	1	
2a	T2 SCREW	4X8	7P31-0408	3	3	3	3	
3	SQUARE WASHER	BRASS	433537-02	1	1	1	1	
4	SCREW - GROUNDING	BRASS	433304-02	1	1	1	1	
5	JUNCTION BOX COVER	GS	433410-01	1	1	1	1	
5a	T2 SCREW	4X8	7P31-0408	1	1	1	1	
6	THERMOSTAT EXTENSION BRACKET	SS	4A1722-01	1	1	1	1	
7	SPACER	PE	443545-01	1	1	1	1	
8	THUMBSCREW	SS, ABS	415949G03	2	2	2	2	
9	BIN CONT. COVER	GS	3A0664G01	1	1	1	1	
10	CAPILLARY RING	EP RUBBER	425307-01	2	2	2	2	
11	TOP INSULATION	PP	215730G01	1	1	1	1	
12	FRONT INSULATION	PP	2A0664G01	1	1	1	1	

	MODEL: KML-450MAF, KML-4	50MAH TITLE:	A. ICE CUE	BER A	ASSE	MBL	′	
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	R	REQUI	RED N	UMBE	R
				MAF		МАН		
				J-0	L-0	L-0	L-1	
				K-0				
13	SIDE PANEL (R)	SS	2A1456G01	1	1			
		SS	2A2111G01			1	1	
13a	T2 SCREW	4X8, SS	7P32-0408	1	1	1	1	
14	LOUVER (B)	ABS	103121-05	1	1			
		-	1A0548-01			2	2	
15	TAPPING SCREW (BLACK)	STEEL, 4X8	433954-01	2	2	-		
16	AIR FILTER (B)	ABS	208283G03	1	1			
		-	2A2063G01			2	2	
17	BUSHING	SR-34-2	420472-05	1	1	1	1	
18	WIRE SADDLE	VWS4238-C	4A0338-02	2	2	2	2	
19	THUMBSCREW	SS, ABS	415949G04	2	2	2	2	
20	LOUVER (C)	ABS	103122-03	1	1	-		
21	AIR FILTER (C)	ABS	208284G01	1	1	-		
22	GASKET	L=655	4A0808L02	2	2	2	2	
23	GASKET	L=190	4A0808L02	1	1	1	1	
24	GASKET	L=762	4A0808L02		1	1	1	
25	PUSH RETAINER	-	4A2414-01			6	6	
 								

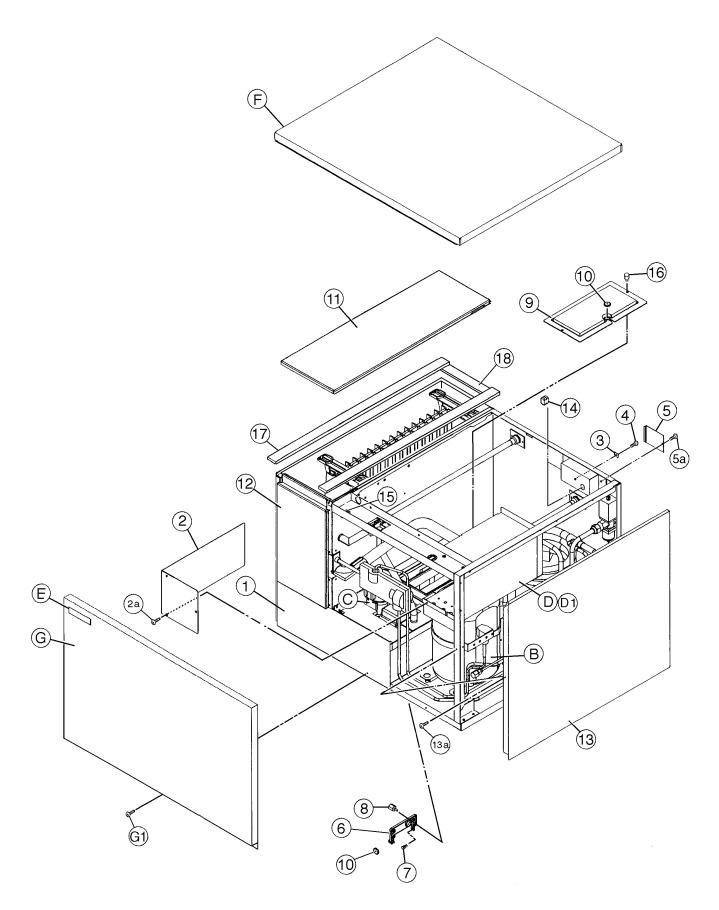

INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQUIRED NUME			
B R C W D C C C C C C C C C C C C C C C C C				MWF		MWH	
				J-0 K-0	L-0	L-0	
В	REFRIGERATION CIRCUIT	-	1A0413A02	1	1	1	
С	WATER CIRCUIT	-	1A0438A01	1	1	1	
D	CONT. BOX ASSEMBLY	-	2A1519A02	1	1		
		-	2A2154A02			1	
D1	T2 SCREW	4X8	7P31-0408	3	3	3	
Е	LABEL LOCATION	-	3A1341A01	1	1		
		-	3A1923A01			1	
F	TOP PANEL ASSY	-	3A0674A01	1	1		
		-	3A1862A01			1	
G	FRONT PANEL	-	3A1273A02	1	1		
		-	3A1859A02			1	
G1	TRUSS HEAD SCREW	4X8, SS	7C32-0408	2	2	2	
1	EVAP. CASE	HS-1014	2A1449G01	1	1		
		-	2A2113G01			1	
2	CONT. BOX COVER	GS	3A0594-01	1	1		
		GS	3A1828-01			1	
2a	T2 SCREW	4X8	7C31-0408	3	3	3	
3	SQUARE WASHER	BRASS	433537-02	1	1	1	
4	SCREW - GROUNDING	BRASS	433304-02	1	1	1	
5	JUNCTION BOX COVER	GS	433410-01	1	1	1	
5a	T2 SCREW	4X8	7P31-0408	1	1	1	
6	THERMOSTAT EXTENSION BRACKET	SS	4A1722-01	1	1	1	
7	SPACER	PE	443545-01	1	1	1	
8	THUMBSCREW	SS, ABS	415949G03	2	2	2	
9	BIN CONT COVER	GS	3A0664G01	1	1	1	
10	CAPILLARY RING	EP RUBBER	425307-01	2	2	2	
11	TOP INSULATION	PP	215730G01	1	1	1	
12	FRONT INSULATION	PP	2A0664G01	1	1	1	

INDEX NO.	DESCRIPTION	MATERIAL OR MODEL	PART NUMBER	F	IMBER			
		NUMBER		MWF		MWH		
				J-0 K-0	L-0	L-0		
13	SIDE PANEL (R)	SS	2A1456G01	1	1	1		
		SS	2A2111G01			1		
13a	T2 SCREW	4X8, SS	7P32-0408	1	1	1		
14	BUSHING	SR-30-1	420472-03	1	1	1		
15	WIRE SADDLE	VWS4238-C	4A0338-02	2	2	2		
16	THUMBSCREW	SS, ABS	415949G04	2	2	2		
17	GASKET	L=655	4A0808L02	2	2	2		
18	GASKET	L=190	4A0808L02	1	1	1		

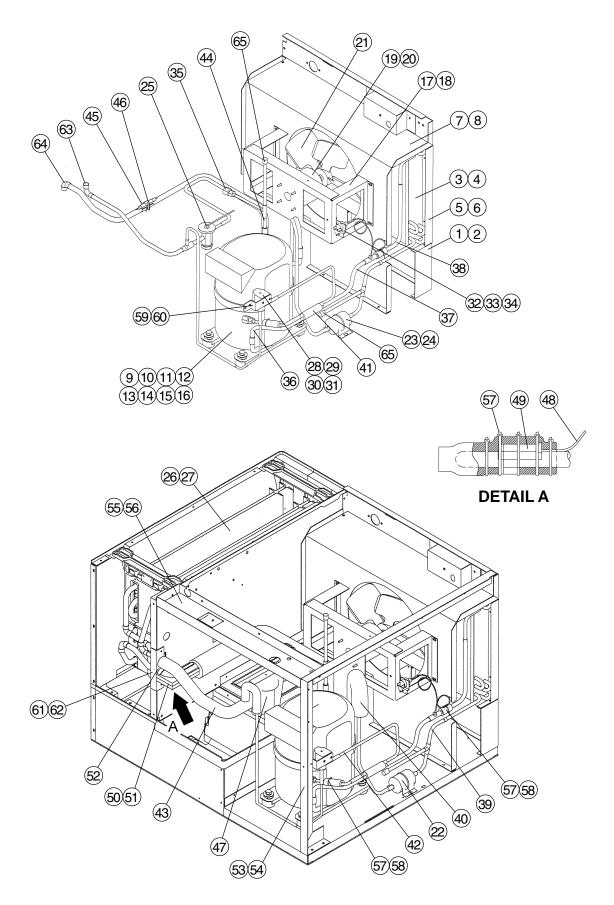


	MODEL: KML-450MAF, KML-	450MAH TITLE: B.	. REFRIGE	RATI	ON C	IRCU	IT	
NO.	DESCRIPTION	MATERIAL OR MODEL	PART NUMBER	F	EQUII	RED N	UMBE	R
		NUMBER		MAF		MAH		
				J-0 K-0	L-0	L-0	L-1	
1	COND. SUPPORT	GS	3A0589-01	1	1	1	1	
2	T2 SCREW	4X8	7P31-0408	5	5	5	5	
3	CONDENSER	S-0799	2A0640-01	1	1	1	1	
4	T2 SCREW	4X8	7P31-0408	3	3	3	3	
5	BARRIER	GS	4A0932-01	1	1	1	1	
6	T2 SCREW	4X8	7P31-0408	2	2	2	2	
7	SHROUD	GS	3A0597G01	1	1	1	1	
8	T2 SCREW	4X8	7P31-0408	5	5	5	5	
9	COMPRESSOR	RS55C2E-CAA-219	4A1843-01	1	1	1	1	
10	TERMINAL COVER	COMP. ACCESSORY	4A1843F01	1	1	1	1	
11	SPRING CLIP	COMP. ACCESSORY	4A1843F02	1	1	1	1	
12	PROTECTOR	COMP. ACCESSORY	4A1877-01	1	1	1	1	
13	PROTECTOR HOLDER	COMP. ACCESSORY	4A1843F04	1	1	1	1	
14	BOLT	8X45	437889-01	4	4	4	4	
15	SPACER	027-0072-02	434404-01	1	1	1	1	
16	GROMMET	527-0039-04	434403-01	4	4	4	4	
17	FAN MOTOR BRACKET	GS	2A0181-01	1	1	1	1	
18	HEX HEAD BOLT W/WASHER (LF)	5X12	7B0130512	4	4	4	4	
19	FAN MOTOR	U90B1 7190-1031	440911-01	1	1	1	1	
20	SELF LOCKING NUT	NO. 8-32	7N21I0832	4	4	4	4	
21	FAN BLADE	AD10CW32	444898-01	1	1	1	1	
22	DRIER	CW-0325-S	4A1413-01	1	1	1	1	
23	DRIER BRACKET	GS	4A0807-01	1	1	1	1	
24	T2 SCREW	4X8	7P31-0408	2	2	2	2	
25	EXP. VALVE	AN 34 SW65	4A1870-01	1	1	1	1	
26	EVAPORATOR ASSY	-	2A0717G01	1	1	1	1	
27	T2 SCREW	4X16	7P31-0416	4	4	4	4	
28	VALVE BODY	70	440352-01	1	1	1	1	
29	COIL-VALVE	ABS-25-1-HD-2	440353-01	1	1	1	1	

НА

INDEX NO.	DESCRIPTION	MATERIAL OR MODEL	PART NUMBER	F	REQUII	REQUIRED NUMBE			
		NUMBER		MAF		МАН			
				J-0	L-0	L-0	L-1		
				K-0					
30	BOLT	-	440353F01	1	1	1	1		
31	TRUSS HEAD SCREW	4X8	7C31-0408	2	2	2	2		
32	PRESSURE SWITCH	ACB-1UB09	433441-07	1	1	1	1		
33	PRESSURE SWITCH BRACKET	GS	434938-01	1	1	1	1		
34	T2 SCREW	4X8	7P31-0408	1	1	1	1		
35	ACCESS VALVE	FV180D001	446715-01	x2				L	
		-	457729-01	o2	2	2	2		
36	COPPER TUBE (A) - HIGH SIDE	COPPER	4A1846-01	1	1	1	1		
37	COPPER TUBE (B) - HIGH SIDE	COPPER	3A1317-01	1	1	1	1		
38	COPPER TUBE (C) - HIGH SIDE	COPPER	3A1316G01	1	1	1	1		
39	COPPER TUBE (D) - HIGH SIDE	COPPER	3A1311G01	1	1	1	1		
40	HEAT EXCHANGER	COPPER	2A1498G01	1	1	1	1		
41	STRAINER	-	4A0397-01	1	1	1	1		
42	COPPER TUBE (A) - HOT GAS	COPPER	4A1878-01	1	1	1	1		
43	COPPER TUBE (B) - HOT GAS	COPPER	2A1505G01	1	1	1	1		
44	COPPER TUBE (A) – ACCESS VALVE	COPPER	3A1323G01	1	1	1	1		
45	HOLDER / EXP. VALVE – 1/2	SS	3A0112-01	1	1	1	1		
46	CLAMP	SS	443461-02	1	1	1	1		
47	EXPANSION VALVE COVER	PE FOAM	4A1168-01	1	1	1	1		
48	THERMISTOR	-	429006-03	1	1	1	1		
49	HOLDER - THERMISTOR	COPPER	427430-01	1	1	1	1		
50	INSULATION – THERMISTOR (A)	PE FOAM	439368-01	1	1	1	1		
51	INSULATION – THERMISTOR (B)	PE FOAM	439368-02	1	1	1	1		
52	INSULATED RUBBER TUBE	EPDM	4A1008G01	1	1	1	1		
53	FRAME (A)	GS	2A0645-01	1	1	1	1		
54	T2 SCREW	4X8	7P31-0408	4	4	4	4		
55	FRAME (B)	GS	3A0595-01	1	1	1	1		
56	T2 SCREW	4X8	7P31-0408	4	4	4	4		
57	CABLE TIE	CV-200	7920-0010	14	14	14	14		


	MODEL: KML-450MAF, KML-450	MAH TITLE: B	. REFRIGE	RATI	ON C	IRCU	IT	
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL	PART NUMBER	R	REQUII	RED N	UMBE	R
		NUMBER		MAF		МАН		
				J-0 K-0	L-0	L-0	L-1	
58	INSULATION TUBE	L=30	7762-1020	2	2	2	2	
59	LINE VALVE BRACKET	GS	4A1406-01	1	1	1	1	
60	T2 SCREW	4X8	7P31-0408	2	2	2	2	
61	INSULATION HOLDER	SS	3A1084-01	1	1	1	1	
62	T2 SCREW	4X8	7P31-0408	2	2	2	2	
63	ELBOW	COPPER	4A1059-01	1	1	1	1	
64	ELBOW	COPPER	417395-03	1	1	1	1	
65	ENDCAP	-	4A1413F01	2	2	2	2	

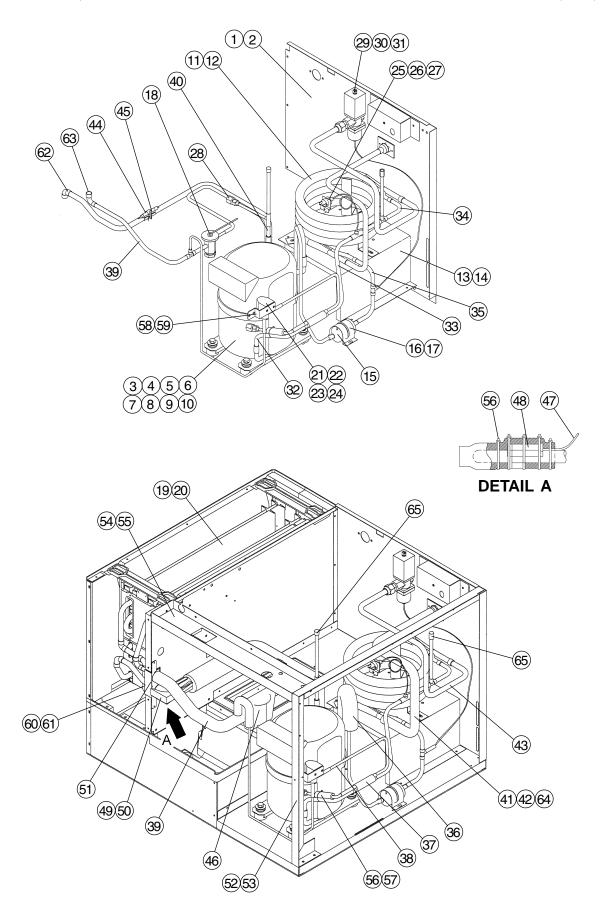

	MODEL: KML-450MWF, KML-450	MWH TITLE: B	. REFRIGE	RAT	ION C	CIRCL	JIT	
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL	PART NUMBER	R	REQUIF	RED N	UMBEI	R
		NUMBER		MWF	ı	MWH	1	
				J-0	L-0	L-0	L-1	
				K-0				
1	REAR PANEL (B)	GS	3A0630G03	1	1	1	1	
2	T2 SCREW	4X8	7P31-0408	9	9	9	9	
3	COMPRESSOR	RS55C2E-CAA-219	4A1843-01	1	1	1	1	
4	TERMINAL COVER	COMP. ACCESSORY	4A1843F01	1	1	1	1	
5	SPRING CLIP	COMP. ACCESSORY	4A1843F02	1	1	1	1	
6	PROTECTOR	COMP. ACCESSORY	4A1877-01	1	1	1	1	
7	PROTECTOR HOLDER	COMP. ACCESSORY	41843F04	1	1	1	1	
8	BOLT	8X45	437889-01	4	4	4	4	
9	SPACER	027-0072-02	434404-01	4	4	4	4	
10	GROMMET	527-0039-04	434403-01	4	4	4	4	
11	CONDENSER	H-1 ¼-I	2A1429-01	1	1	1	1	
12	HEX HEAD BOLT W/WASHER (LF)	4X12	7B0230412	3	3	3	3	
13	COND. SUPPORT	GS	2A1470-01	1	1	1	1	
14	T2 SCREW	4X8	7P31-0408	4	4	4	4	
15	DRIER	CW-0325-S	4A1413-01	1	1	1	1	
16	DRIER BRACKET	GS	4A0807-01	1	1	1	1	
17	T2 SCREW	4X8	7P31-0408	2	2	2	2	
18	EXP. VALVE	AN 34 SW65	4A1870-01	1	1	1	1	
19	EVAPORATOR ASSY	-	2A0717G01	1	1	1	1	
20	T2 SCREW	SS, 4X16	7P32-0416	4	4	4	4	
21	VALVE BODY	70	440352-01	1	1	1	1	
22	COIL VALVE	ABS-25-1-HD-2	440353-01	1	1	1	1	
23	BOLT	-	440353F01	1	1	1	1	
24	TRUSS HEAD SCREW	4X8	7C31-0408	2	2	2	2	
25	PRESSURE SWITCH	ACB-1UB04	433441-05	1	1	1	1	
26	PRESSURE SWITCH BRACKET	GS	434938-01	1	1	1	1	
27	T2 SCREW	4X8	7P31-0408	1	1	1	1	


	MODEL: KML-450MWF, KML-45	50MWH TITLE: I	B. REFRIGE	RAT	ION (CIRCL	JIT	
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL	PART NUMBER	F	REQUII	RED N	UMBE	R
		NUMBER		MWF		MWH	T	
				J-0	L-0	L-0	L-1	
				K-0				
28	ACCESS VALVE	FV18OD001	446715-01	x2				
		-	457729-01	02	2	2	2	
29	WATER REGULATOR	V46DA-3	4A0911-03	1	1	1	1	
30	TRUSS HEAD SCREW	4X6	7C31-0406	2	2	2	2	
31	MALE CONNECTOR	BRASS	4A1087-01	1	1	1	1	
32	COPPER TUBE (A)-HIGH SIDE	COPPER	4A1846-01	1	1	1	1	
33	COPPER TUBE (B)-HIGH SIDE	COPPER	4A1859-01	1	1	1	1	
34	COPPER TUBE (C)-HIGH SIDE	COPPER	3A1282G01	1	1	1	1	
35	COPPER TUBE (D)-HIGH SIDE	COPPER	3A1288G01	1	1	1	1	
36	HEAT EXCHANGER	COPPER	2A1498G01	1	1	1	1	
37	STRAINER	-	4A0397-01	1	1	1	1	
38	COPPER TUBE (A)-HOT GAS	COPPER	4A1878-01	1	1	1	1	
39	COPPER TUBE (B)-HOT GAS	COPPER	2A1502G01	1	1	1	1	
40	COPPER TUBE (A)-ACCESS VALVE	COPPER	3A1323G01	1	1	1	1	
41	COPPER TUBE (A)	COPPER	3A1519G01	1	1	1	1	
42	T2 SCREW	4X8	7P31-0408	2	2	2	2	
43	COPPER TUBE (B)	COPPER	3A1453G01	1	1	1	1	
44	HOLDER/EXP VALVE-1/2	SS	3A0112-01	1	1	1	1	
45	CLAMP	SS	443461-01	1	1	1	1	
46	EXPANSION VALVE COVER	PE FOAM	4A1168-01	1	1	1	1	
47	THERMISTOR	-	429006-03	1	1	1	1	
48	HOLDER-THERMISTOR	COPPER	427430-01	1	1	1	1	
49	INSULATION-THERMISTOR (A)	PE FOAM	439368-01	1	1	1	1	
50	INSULATION-THERMISTOR (B)	PE FOAM	439368-02	1	1	1	1	
51	INSULATED RUBBER TUBE	EPDM	4A1008G01	1	1	1	1	
52	FRAME (A)	GS	2A0645-01	1	1	1	1	
53	T2 SCREW	4X8	7P31-0408	4	4	4	4	
54	FRAME (B)	GS	3A0595-01	1	1	1	1	
55	T2 SCREW	4X8	7P31-0408	4	4	4	4	


	MODEL: KML-450MWF, KML-4	50MWH TITLE: E	B. REFRIGE	RAT	ION (CIRCL	JIT	
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL	PART NUMBER	F	EQUII	RED N	UMBE	R
		NUMBER		MWF	ı	MWH		
				J-0 K-0	L-0	L-0	L-1	
56	CABLE TIE	CV-200	7920-010	14	14	14	14	
57	INSULATION TUBE	L=30	7762-1020	2	2	2	2	
58	LINE VALVE BRACKET	GS	4A1406-01	1	1	1	1	
59	T2 SCREW	4X8	7P31-0408	2	2	2	2	
60	INSULATION HOLDER	SS	3A1084-01	1	1	1	1	
61	T2 SCREW	4X8	7P31-0408	2	2	2	2	
62	ELBOW	COPPER	4A1059-01	1	1	1	1	
63	ELBOW	COPPER	417395-03	1	1	1	1	
64	INSULATION TUBE	L=670	7762-1323	1	1	1	1	
65	ENDCAP	-	4A1413F01	2	2	2	2	

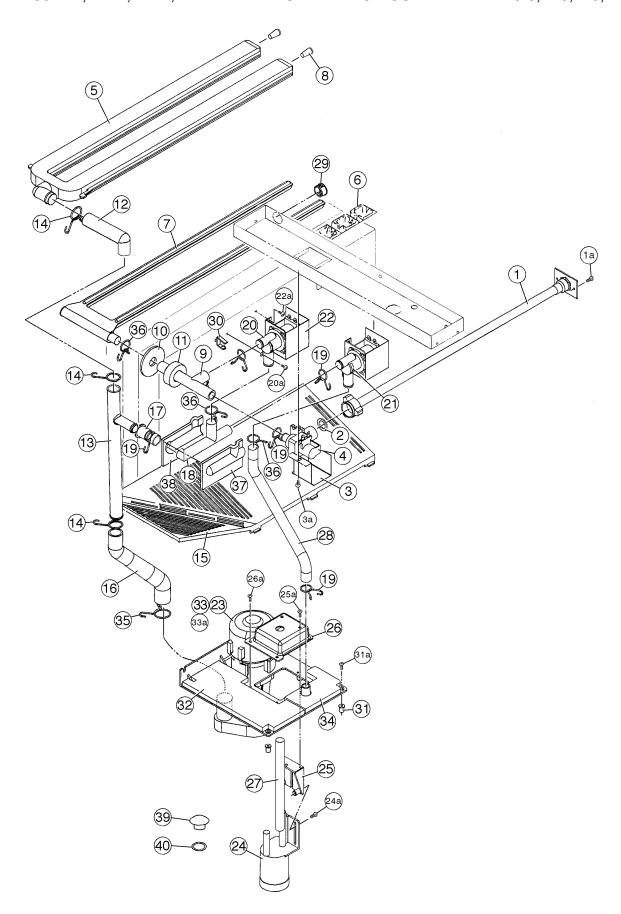



	MODEL: KML-450MAF, MWF	, MAH, MWH	TITLE: C. WA	ATER	CIRC	CUIT		
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL	PART NUMBER	REQUIRED NUMBER				
		NUMBER		M_F		M_H		
				J-0	L-0	L-0	L-1	
				K-0				
1	WATER SUPPLY PIPE	COPPER	4A0768G04	1	1	1	1	
1a	T2 SCREW	4X8	7P31-0408	2	2	2	2	
2	RUBBER GASKET	NR	413854-03	1	1	1	1	
3	WATER VALVE BRACKET	GS	321443-01	1	1	1	1	
3a	T2 SCREW	4X8	7P31-0408	1	1	1	1	
4	WATER VALVE	J248-072	3U0111-04	1	1	1	1	
5	SPRAY TUBE	PE	1A0260-02	1	1	1	1	
6	SPRAY GUIDE (A)	PE	208586-01	6	6	6	6	
7	WATER SUPPLY TUBE	PE	2A0079-01	1	1	1	1	
8	PLUG	EPDM	4A0176-01	2	2	2	2	
9	WATER SUPPLY TEE	SANTOPRENE	4A1006-01	1	1	1	1	
10	FLANGE	EPDM	439267-01	1	1	1	1	
11	INSULATION (E)	PE FOAM	4A0392-01	1	1	1	1	
12	ELBOW	SANTOPRENE	4A0393-01	1	1	1	1	
13	CONNECTING PIPE	PE	3A1335-01	1	1	1	1	
14	HOSE CLAMP	SS, 25 mm	427443-03	3	3	3	3	
15	CUBE GUIDE (A)	ABS	2A0660-01	1	1	1	1	
16	PUMP HOSE	EPDM	4A1007-01	1	1	1	1	
17	RUBBER RING	EPDM	4A1004-01	1	1	1	1	
18	BYPASS HOSE	SANTOPRENE	4A1005-01	1	1	1	1	
19	HOSE CLAMP	SS, 18 mm	427443-05	5	5	5	5	
20	SOLENOID VALVE	207CB-GS1873	439322-01	2	2	2	2	
20a	T2 SCREW	4X8	7P31-0408	4	4	4	4	
21	ARROW LABEL	PES	4A0096-01	1	1	1	1	
22	SOLENOID COVER	GS	4A0996-01	2	2	2	2	
22a	T2 SCREW	4X8	7P31-0408	4	4	4	4	
23	PUMP	-	2A0749-01	1	1	1	1	

	MODEL: KML-450MAF, MV	VF, MAH, MWH	TITLE: C. WA	ATER	CIR	CUIT		
INDEX DESCRIPTION NO. 24 FLOAT SWITCH 24a T2 SCREW		MATERIAL OR MODEL	PART NUMBER	R	EQUII	RED N	UMBEF	₹
		NUMBER		M_F		M_H		
				J-0	L-0	L-0	L-1	
				K-0				
24	FLOAT SWITCH	-	4A0886-01	1	1	1	1	
24a	T2 SCREW	4X8, SS	7P32-0408	2	2	2	2	
25	FLOAT SWITCH BRACKET	ABS	327757-01	1	1	1	1	
25a	T2 SCREW	4X12, SS	7P32-0412	2	2	2	2	
26	FLOAT SWITCH COVER	ABS	3A0665-01	1	1	1	1	
26a	T2 SCREW	4X12, SS	7P32-0412	2	2	2	2	_
27	VINYL HOSE	L=150	7716-1216	1	1	1	1	
28	SILICONE HOSE	L=295	7730-1519	1	x1			
	VINYL HOSE	L=295	7716-1519		o1	1	1	
29	BUSHING	OCB-875	428394-04	1	1	1	1	
30	WIRE SADDLE	VWS4238-C	4A0338-02	8	8	8	8	
31	WELL NUT	347011	4A1070-01	2	2	2	2	
31a	TRUSS HEAD SCREW	4X16, SS	7C32-0416	4	4	4	4	
32	INSULATION (A) – PUMP BRACKET	PE FOAM	4A1052-01	1	1	1	1	
33	TOOTH WASHER	ZINC, M4	7R21-0400	1	1	1	1	
33a	TRUSS HEAD SCREW	4X16	7C31-0416	1	1	1	1	
34	INSULATION (B) – PUMP BRACKET	PE FOAM	4A1053-01	1	1	1	1	
35	HOSE CLAMP	SS, 27 mm	427443-08	1	1	1	1	
36	HOSE CLAMP	SS. 20 mm	427443-06	3	3	3	3	
37	INSULATION (A1) – BYPASS HOSE	NP	4A1259-01	1	1	1	1	
38	INSULATION (A2) – BYPASS HOSE	NP	4A1260-01	1	1	1	1	
39	DRAIN	POLYACETAL	309246-01	1	1	1	1	
40	O-RING	1AP15	7611-P015	1	1	1	1	

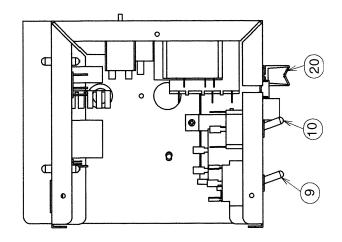

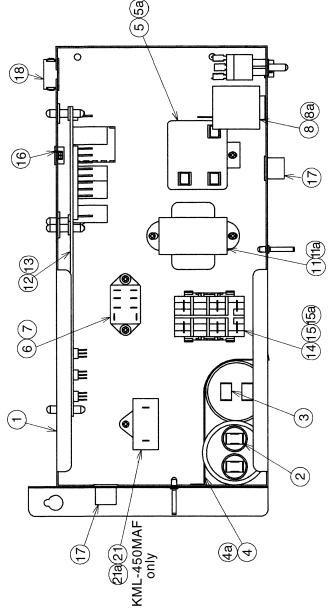


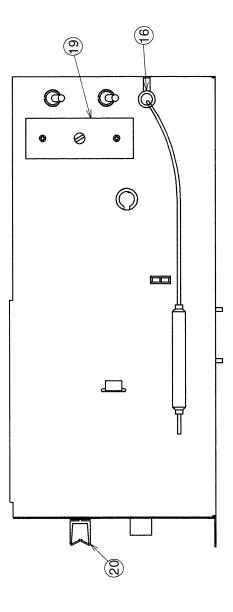


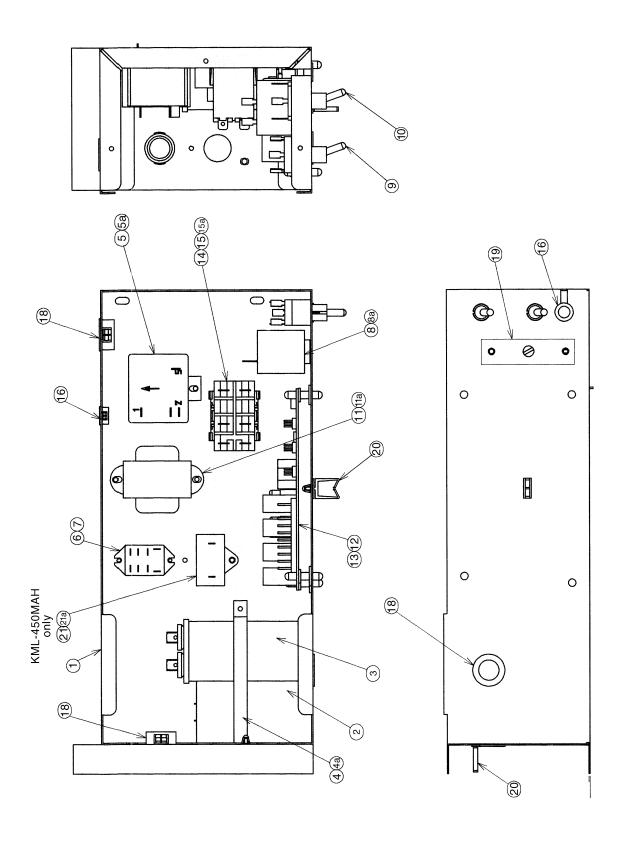



	MODEL: KML-450MAF, KML-450	MAH TITLE: D.	CONTROL	вох	ASS	ЕМВ	LY	
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL	PART NUMBER	B	EQUII	RED N	UMBE	R
		NUMBER		MAF		МАН		
				J-0	L-0	L-0	L-1	
				K-0				
1	CONTROL BOX	GS	3A0602G01	1	1			
		GS	3A1824G01			1	1	
2	CAPACITOR	25μf 370 VAC	439943-02	1	1	1	1	
3	CAPACITOR - STARTING	189-227μf 330V	3A0076-12	1	1	1	1	
4	STRAP	GS	434580-08	1	1	1	1	
4a	T2 SCREW	4X8	7P31-0408	1	1	1	1	
5	STARTER	3ARR3CT24S5	4A0875-01	1	x1			
		-	4A1107-13		01	1	1	
5a	T2 SCREW	4X8	7P31-0408	1	1	1	1	
6	RELAY	LY2F 120 VAC	406132-07	1	1	1	1	
7	TAPPING SCREW	3X8	431415-01	2	2	2	2	
8	THERMOSTAT	A30-3815-00	4A0824-01	1	1	1	1	
8a	TRUSS HEAD SCREW	4X8	7C31-0408	1	1	1	1	
9	TOGGLE SWITCH	7563K6	443119-01	1	1	1	1	
10	TOGGLE SWITCH	8966K211	4A0985-01	1	1	1	1	
11	TRANSFORMER	26D285H	3A0172-01	1	1	1	1	
11a	T2 SCREW	4X8	7P31-0408	2	2	2	2	
12	CONTROLLER BOARD	HOS001A	2A1410-01	1	1	1	1	
13	BOARD SUPPORT	CBLS37-M	4A0336-03	4	4	4	4	
14	MAGNETIC CONTACTOR	VC20	428393-01	1	1	1	1	
15	BRACKET	BW 9154	428393F01	1	1	1	1	
15a	T2 SCREW	4X8	7P31-0408	2	2	2	2	
16	BUSHING	OCB-500	428394-02	2	2	2	2	
17	BUSHING	OCB-625	428394-03	2	2	_		
18	BUSHING	OCB-875	428394-04	1	1	3	3	
19	CONTROL LABEL	PES FILM	4A1758-01	1	1	1	1	
20	WIRE SADDLE	VWS4238-C	4A0338-02	2	2	2	2	
21	CAPACITOR	5μf 250 VAC	443192-02	1	1	1	1	
21a	T2 SCREW	4X8	7P31-0408	1	1	1	1	

INDEX NO.	DESCRIPTION	MATERIAL OR MODEL	PART NUMBER	REQUIRED NUMBER				
		NUMBER		MWF	1	MWH		
				J-0 K-0	L-0	L-0		
1	CONTROL BOX	GS	3A0602G01	1	1			
		GS	3A1824G01			1		
2	CAPACITOR	25μf 370 VAC	439943-02	1	1	1		
3	CAPACITOR - STARTING	189-227μf 330V	3A0076-12	1	1	1		
4	STRAP	GS	434580-08	1	1	1		
4a	T2 SCREW	4X8	7P31-0408	1	1	1		
5	STARTER	3ARR3CT24S5	4A0875-01	1	x1			
		-	4A1107-13		01	1		
5a	T2 SCREW	4X8	7P31-0408	1	1	1		
6	RELAY	LY2F 120 VAC	406132-07	1	1	1		
7	TAPPING SCREW	3X8	431415-01	2	2	2		
8	THERMOSTAT	A30-3815-00	4A0824-01	1	1	1		
8a	TRUSS HEAD SCREW	4X8	7C31-0408	2	2	2		
9	TOGGLE SWITCH	7563K6	443119-01	1	1	1		
10	TOGGLE SWITCH	8966K211	4A0985-01	1	1	1		
11	TRANSFORMER	26D285H	3A0172-01	1	1	1		
11a	T2 SCREW	4X8	7P31-0408	2	2	2		
12	CONTROLLER BOARD	HOS001A	2A1410-01	1	1	1		
13	BOARD SUPPORT	CBLS37-M	4A0336-03	4	4	4		
14	MAGNETIC CONTACTOR	VC20	428393-01	1	1	1		
15	BRACKET	BW 9154	428393F01	1	1	1		
15a	T2 SCREW	4X8	7P31-0408	2	2	2		
16	BUSHING	OCB-500	428394-02	2	2	2		
17	BUSHING	OCB-625	428394-03	2	2	-		
18	BUSHING	OCB-875	428394-04	1		3		
19	CONTROL LABEL	PES FILM	4A1758-01	1	1	1		
20	WIRE SADDLE	VWS4238-C	4A0338-02	2	2	2		

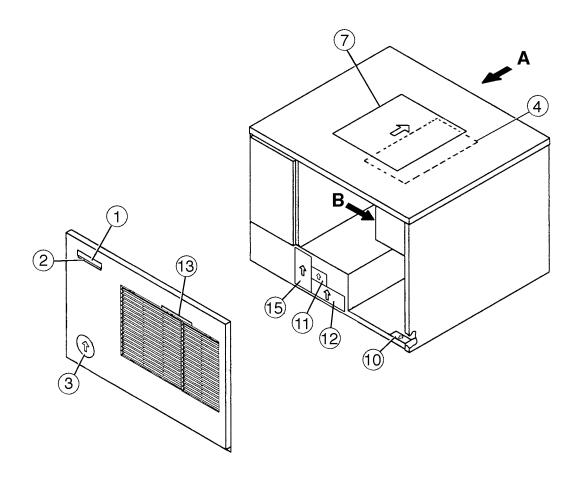


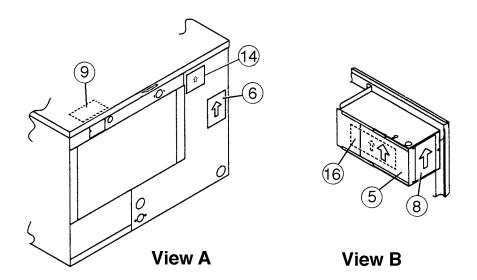


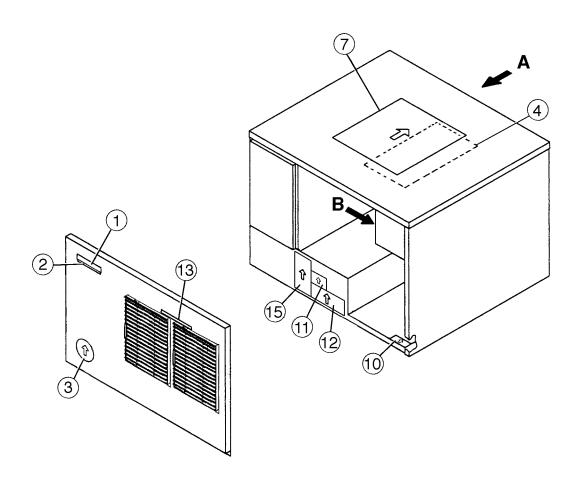


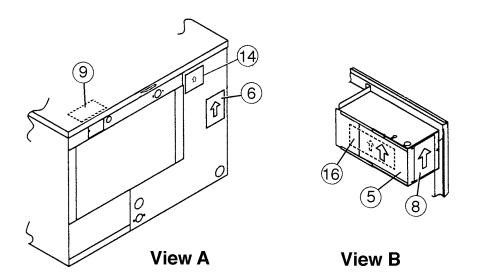

INDEX NO.	DESCRIPTION	MATERIAL OR MODEL	PART NUMBER	REQUIRED NUMBER					
		NUMBER		MAF		MAH			
				J-0	L-0	L-0	L-1		
				K-0					
1	EMBLEM	PETP FILM	4A0560-01	1	1	1	1		
2	MODEL NUMBER LABEL	PETP FILM	4A1233-47	1	1				
		PETP FILM	4A2356-56			1	1		
3	LABEL - PENGUIN - HA (R)	PETP FILM	4A0526-01	1	1				
4	MAINTENANCE LABEL	PVC FILM	3A0878-01	1	1				
		PVC FILM	3A1873-01			1	1		
5	WIRING LABEL	PVC FILM	3A1324-01	1	1	1	1		
6	NAMEPLATE	PES FILM	4A1900-01	1	1				
		PES FILM	4A2432-01			1	1		
7	INSTRUCTION SHEET	PAPER	2A1253-01	1	1				
		PAPER	2A2156-01			1	1		
8	MANUAL LABEL	PVC FILM	4A1090-01	1	1	1	1		
9	TAG - WARNING: ELECTRICAL	PAPER	435005-01	1	1	1	1		
	CONNECTION								
10	LABEL – R404A	PES FILM	4A0960-01	1	1	1	1		
11	CAUTION LABEL (F)	PVC FILM	439146-01	1	1	1	1		
12	CAUTION LABEL (K)	PVC FILM	439150-01	1	1	1	1		
13	LABEL - AIR FILTER	PETP FILM	426177-01	1	1	1	1		
14	INSTRUCTION LABEL	PVC FILM	444575-01	1	1	1	1		
15	RATING LABEL	PES FILM	4A1901-01	1	1				
		PES FILM	4A2433-01			1	1		
16	LABEL- CONTROL BOARD	PVC FILM	3A1272-01	1	1	1	1		

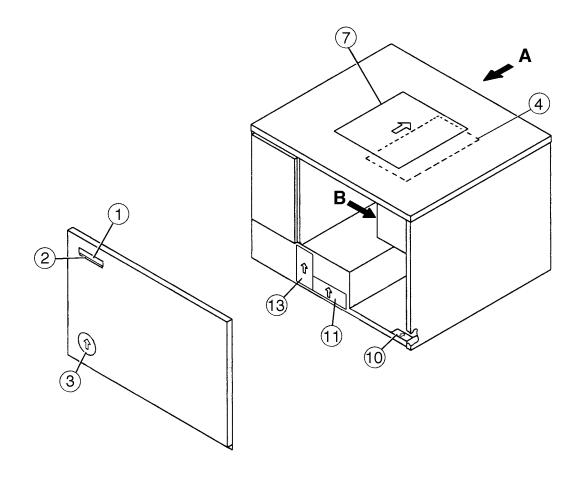


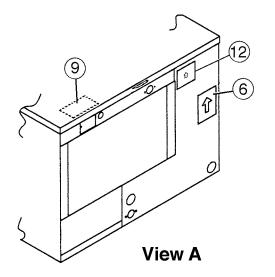

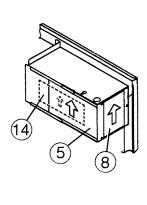



View B

	MODEL: KML-450MWF, KN	IL-450MWH TI	TLE: E. LABI	EL LC	CAT	ION		
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL	PART NUMBER	F	REQUII	RED N	UMBE	R
		NUMBER		MWF	1	MWH		ı
				J-0 K-0	L-0	L-0		
1	EMBLEM	PETP FILM	4A0560-01	1	1	1		
2	MODEL NUMBER LABEL	PETP FILM	4A1233-48	1	1			
		PETP FILM	4A2356-57			1		
3	LABEL - PENGUIN - HA (R)	PETP FILM	4A0526-01	1	1	1		
4	MAINTENANCE LABEL	PVC FILM	3A0878-01	1	1			
		PVC FILM	3A1873-01			1		
5	WIRING LABEL	PVC FILM	3A1324-01	1	1	1		
6	NAMEPLATE	PES FILM	4A1902-01	1	1			
		PES FILM	4A2434-01			1		
7	INSTRUCTION SHEET	PAPER	2A1253-01	1	1			
		PAPER	2A2156-01			1		
8	MANUAL LABEL	PVC FILM	4A1090-01	1	1	1		
9	TAG - WARNING: ELECTRICAL	PAPER	435005-01	1	1	1		
	CONNECTION							
10	LABEL – R404A	PES FILM	4A0960-01	1	1	1		
11	CAUTION LABEL (K)	PVC FILM	439150-01	1	1	1		
12	INSTRUCTION LABEL	PVC FILM	444575-01	1	1	1		
13	RATING LABEL	PES FILM	4A1903-01	1	1			
		PES FILM	4A2435-01			1		
14	LABEL-CONTROL BOARD	PES FILM	3A1272-01	1	1	1		

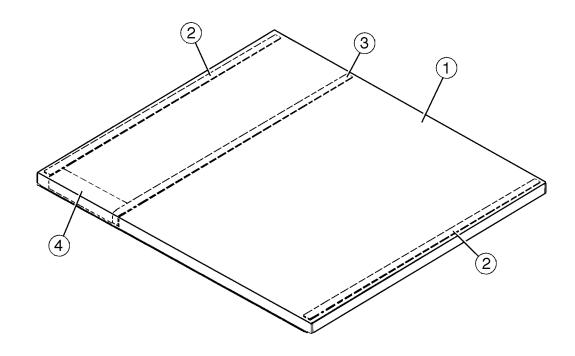



	MODEL: KML-450MAF, MWF, MA	AH, MWH TITLE	: F. TOP P	ANEL	- ASS	EMB	LY	
NDEX NO.	DESCRIPTION	MATERIAL OR MODEL	PART NUMBER	F	REQUI	RED N	UMBE	R
		NUMBER		M_F	Т	M_H	Т	
				J-0 K-0	L-0	L-0	L-1	
1	TOP PANEL	SS	213543-01	1	1			
		SS	2A2110-01			1	1	
2	GASKET	PVC	427014-04	2	2	2	2	
3	GASKET (A)	NORMOUNT V710	324859-03	1	1	1	1	
4	INSULATION	PE FOAM	438012-01	1	1	1	1	

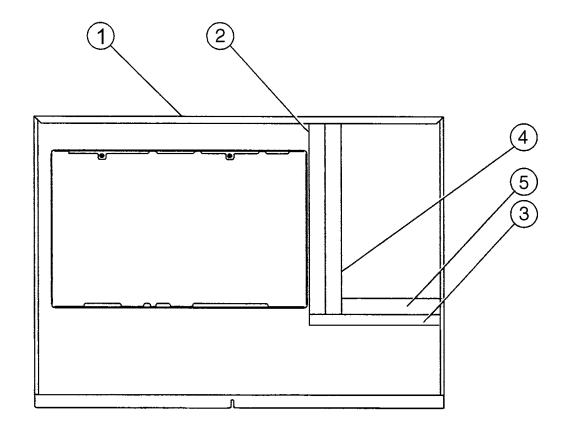

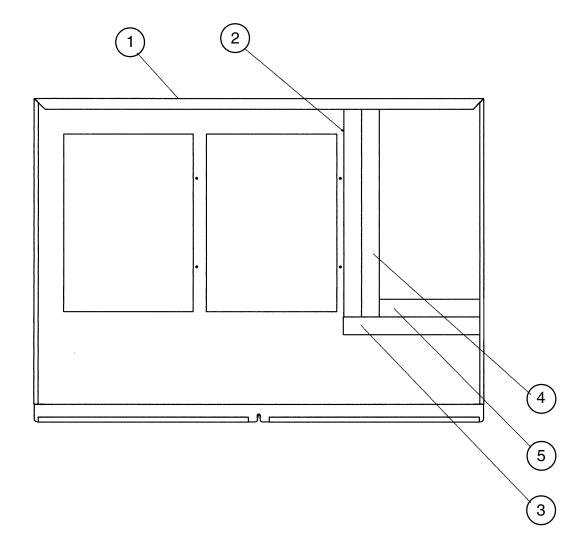


INDEX NO.	DESCRIPTION	MATERIAL OR MODEL	PART NUMBER	R	EQUI	RED N	UMBE	R
		NUMBER		MAF		MAH		
				J-0	L-0	L-0	L-1	
				K-0				
1	FRONT PANEL (A)	SS	2A1455-01	1	1			
		SS	2A2107-01			1	1	
2	FOAM SEAL	L=370	4A0661L01	1	1	1	1	
3	FOAM SEAL	L=250	4A0661L01	1	1	1	1	
4	FOAM SEAL	L=370	4A1163L01	1	1	1	1	
5	FOAM SEAL	L=190	4A1163L01	1	1	1	1	
	<u> </u>							
								\vdash
								+

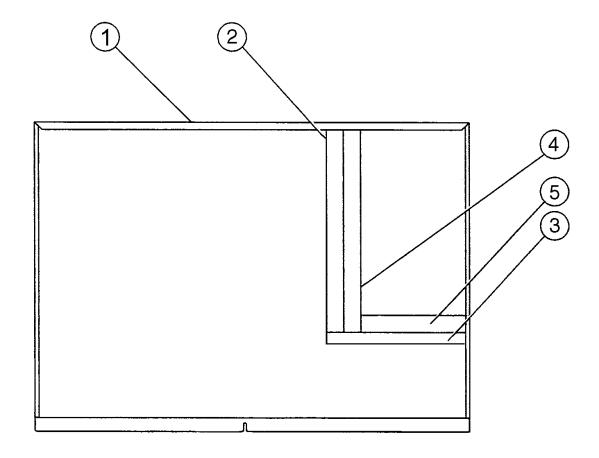

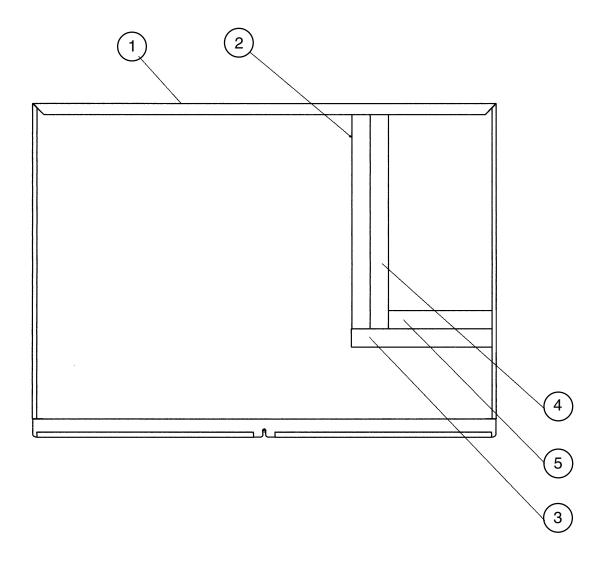

	MODEL: KML-450MWF, KML-4	50MWH TITLE: G	. FRONT PA	ANEL	ASS	EMBL	Υ_	
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL	PART NUMBER	REQUIRED NUMBE				
		NUMBER		MWF		MWH		
				J-0 K-0	L-0	L-0		
1	FRONT PANEL (A)	SS	2A1454-01	1	1			
	, ,	SS	2A2107-02			1		
2	FOAM SEAL	L=370	4A0661L01	1	1	1		
3	FOAM SEAL	L=250	4A0661L01	1	1	1		
4	FOAM SEAL	L=370	4A1163L01	1	1	1		
5	FOAM SEAL	L=190	4A1163L01	1	1	1		

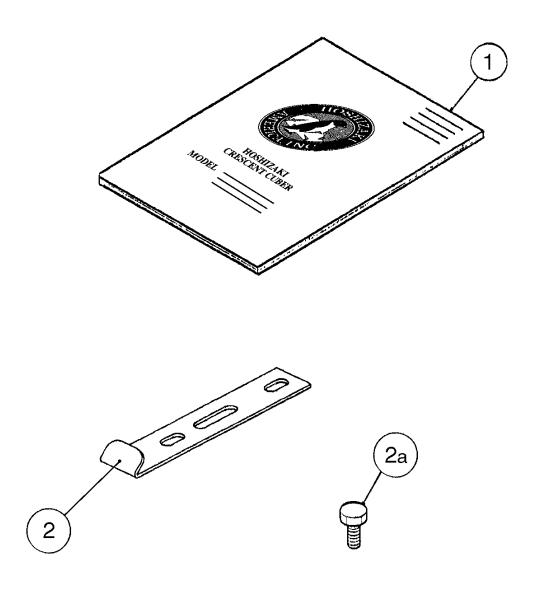

	MODEL: KML-450MAF, MWF	, MAH, MWH	TITLE: H. A	CCES	SOR	IES		
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL	PART NUMBER	R	REQUII	RED N	UMBE	R
		NUMBER		M_F		M_H		
				J-0 K-0	L-0	L-0	L-1	
1	INSTRUCTION MANUAL	PAPER	91A1BC10A	1	1			
		PAPER	91A1BE10A			1	1	
2	UNIVERSAL BRACE	GS	4A0363-01	2	2	2	2	
2a	HEX HEAD BOLT	SS, 5X12	7B02-0512	2	2	2	2	