
Hoshizaki America, Inc.

Modular Crescent Cuber Serenity Series

Model KMS-750MLH

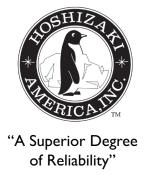

PARTS LIST

www.hoshizaki.com



Number: 71270 Issued: 4-19-2007

CONTENTS

Note About Ordering Parts	Auxiliary Codes	3
A. Ice Cuber Assembly 5 B. Refrigeration Circuit 7 C. Water Circuit 11 D. Control Box Assembly 15 E. Switch Box Assembly 17 F. Bin Switch Unit 18 G. Label Location 19 H. Pump Motor Assembly 20	Note About Ordering Parts	3
B. Refrigeration Circuit	Material Abbreviations	4
C. Water Circuit	A. Ice Cuber Assembly	5
C. Water Circuit	B. Refrigeration Circuit	7
E. Switch Box Assembly		
F. Bin Switch Unit	D. Control Box Assembly	15
G. Label Location	E. Switch Box Assembly	17
H. Pump Motor Assembly	F. Bin Switch Unit	18
· · · · · · · · · · · · · · · · · · ·	G. Label Location	19
J. Accessories and Packaging21	H. Pump Motor Assembly	20
	J. Accessories and Packaging	21

Auxiliary Codes

KMS-750MLH S-0 April 2007

Auxiliary Code Breakdown

K-0

Designates the year. "K" indicates the year 2000. Years progress or regress in alphabetical order.

"J" is 1999, "L" is 2001, "M" is 2002, and so on. The letters "I" and "O" were skipped.

Designates significant part changes within the same year for this model. Base is 0 and this number advances for each change.

Example: P-1
"P" indicates 2004.
"1" indicates the first significant part change for 2004.

Note About Ordering Parts

Most assemblies cannot be ordered as complete units; parts in the assemblies generally must be ordered separately.

Material Abbreviations

ALUMINUM

AL = Aluminum

COPPER

CU = Copper

PLASTIC

ABS = Acrylonitrile -butadiene - styrene

AC = Polyacetal

EVA = Ethylene vinyl acetate
PA = Polyamide = Nylon
PC = Polycarbonate
PE = Polyethylene
PES = Polyester

PETP = Polyethylene terephthalate = Tetlon

PP = Polypropylene PS = Polystyrene

PTFE = Polytetrafluoroethylene = Teflon

PUR = Polyurethane PVC = Polyvinyl chloride

RUBBER

VN = Vinyl Nitrile EPDM = EP rubber


NBR = Nitrile butadiene rubber

NR = Natural rubber
NP = Neoprene
SI.R = Silicone rubber
SY.R = Synthetic rubber
EPH = Epichlorohydrin

STEEL


GS = Galvanized steel
SS = Stainless steel
PS = Plated steel
PAS = Primed steel

A. Ice Cuber Assembly KMS-750MLH

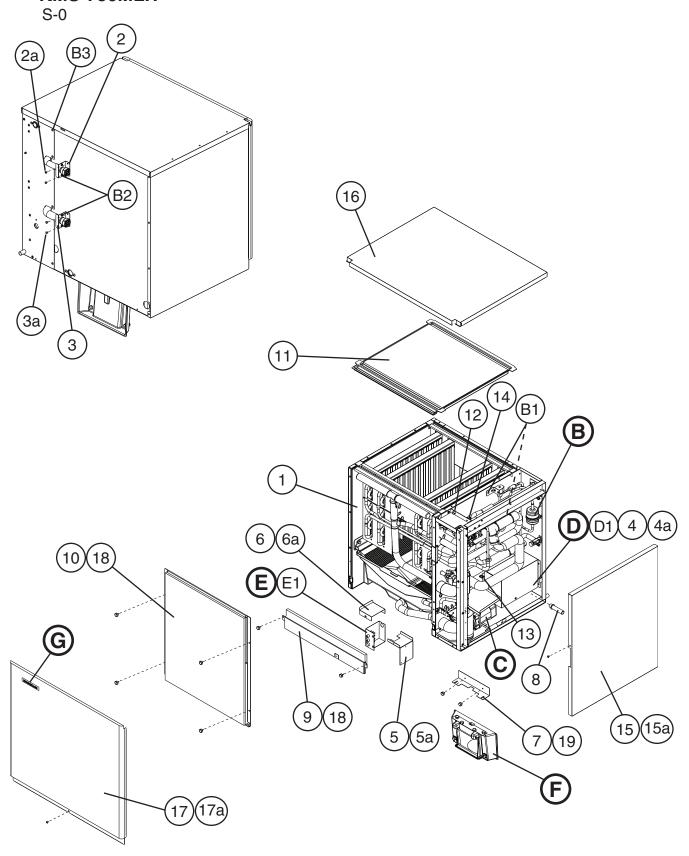



							Requ	ired N	umber	,	
Index No.	Description	Material or Model Number	Part Number	S-0							
В	Refrigeration Circuit	-	1A1359A01	1							
B1	T2 Screw	4×8, SS	7P32-0408	4							一
B2	Truss Head Screw	4×8, SS	7C32-0408	4							一
B3	T2 Screw	4×8, SS	7P32-0408	6							一
С	Water Circuit	-	1A1357A01	1							厂
D	Control Box Assembly	-	3A3247A01	1							厂
D1	T2 Screw	4×8, SS	7P32-0408	4							厂
E	Switch Box Assembly	-	4A3540A01	1							厂
E1	T2 Screw	4×8, SS	7P32-0408	2	i –						\Box
F	Bin Switch Unit (bin control)	-	3A3249A01	1							\vdash
G	Label Location	-	2A4217A01	1	İ	İ	İ				
1	Evaporator Case	-	1A0971G01	1							П
2	Bracket / Coupling	GS	4A3891-02	1							
2a	T2 Screw	4×8, SS	7P32-0408	2							
3	Bracket / Coupling	GS	4A3891-02	1							厂
3a	T2 Screw	4×8, SS	7P32-0408	2							厂
4	Control Box Cover	GS	3A3248-01	1							厂
4a	T2 Screw	4×8, SS	7P32-0408	1							厂
5	Switch Box - Bracket	GS	3A3304-01	1							Г
5a	Truss Head Screw	4×8, SS	7C32-0408	2							Г
6	Switch Box - Cover	GS	4A3623-01	1							Г
6a	T2 Screw	4×8, SS	7P32-0408	1							Г
7	Switch Bracket (bin control)	SS	4A3541-01	1							Г
8	Pipe (B) - Evaporator Case	-	4A3525-01	1							Г
9	Front Frame	-	4A3542G01	1							
10	Front Insulation	-	3A3250G01	1							Г
11	Top Insulation	-	3A3251G01	1							Г
12	Bushing	OCB-625	428394-03	1					İ		
13	Wire Saddle	-	4A0338-02	5					İ		Г
14	Wire Saddle	-	4A0338-01	3					Ì		П
15	Side Panel (R)	SS	2A3225G01	1							Г
15a	Truss Head Screw	4×8, SS	7C32-0408	1							
16	Top Panel	SS	2A3226-01	1							Г
17	Front Panel	SS	2A3236-01	1							Г
17a	Truss Head Screw	4×12, SS	7C32-0412	1							Г
18	Thumbscrew	ABS, SS	415949G10	6	İ						Г
19	Thumbscrew	ABS, SS	415949G08	2					†		Т

B. Refrigeration Circuit 1/2 KMS-750MLH S-0

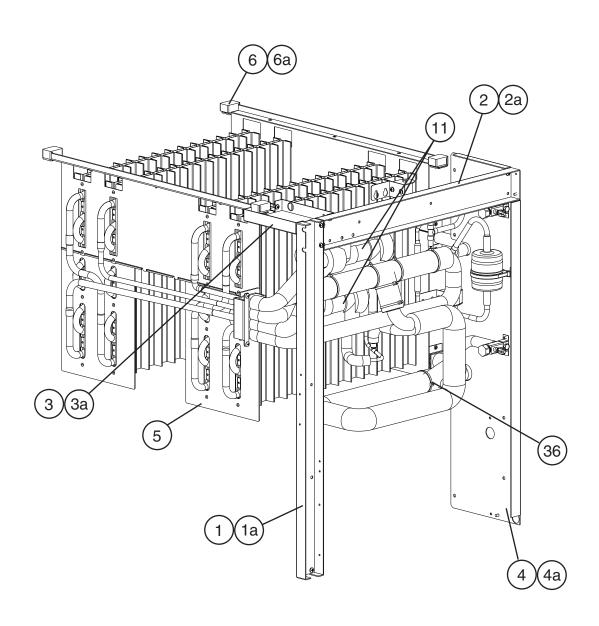

B. Refrigeration Circuit 2/2 KMS-750MLH S-0

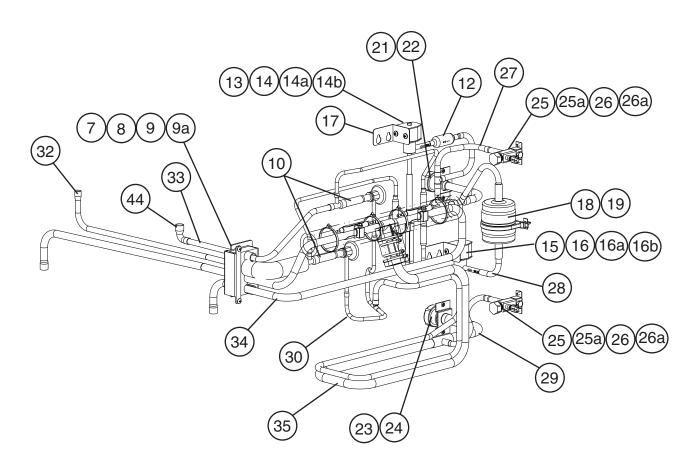

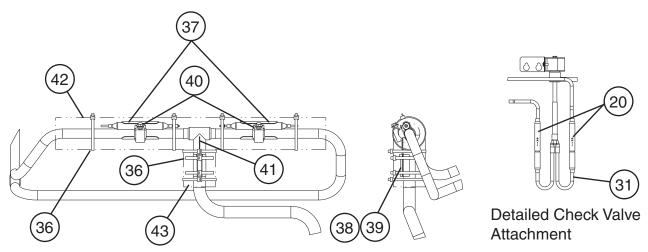


Detailed Thermistor and TXV Bulb Attachment

					,	Requ	red N	umber	1	_
Index No.	Description	Material or Model Number	Part Number	S-0						
1	Side Frame (A)	GS	2A3230-01	1						
1a	Truss Head Screw	4×8, SS	7C32-0408	4						
2	Side Frame (B)	GS	3A3256-01	1						
2a	Truss Head Screw	4×8, SS	7C32-0408	2						Г
3	Front Frame	GS	3A3257-01	1						
3a	Truss Head Screw	4×8, SS	7C32-0408	4						
4	Rear Panel	GS; See A. Ice Cuber Assem- bly, item B3 for additional mounting screws	2A3231-01	1						
4a	Truss Head Screw	4×8, SS	7C32-0408	1						
5	Evaporator	-	2A4196G01	1				\vdash		\vdash
6	Frame Seal	EPDM	323925-01	4						\vdash
 6а	Truss Head Screw	4×8, SS	7C32-0408	4						
7	Rubber Tube (A)	-	323974-01	1						H
8	Insulation	1-	436597-01	1						
9	Insulation Holder	SS	3A0979-01	1						\vdash
9a	T2 Screw	4×8, SS	7P32-0408	2						\vdash
10	Expansion Valve	-	4A1414-01	2						_
11	Expansion Valve Cover	1-	3A0944-01	2						\vdash
12	Strainer	1_	441569-02	1						H
13	Valve Body - Hot Gas	1-	4A3978-01	1						Н
14	Coil - Valve	1-	4A3277-01	1						
14a	Bolt	1-	4A3277F01	1				 		
14b	Truss Head Screw	4×8, SS	7C32-0408	2						Т
15	Valve Body - Line	-	4A3276-01	1						\vdash
16	Coil - Valve	-	4A3277-01	1						\vdash
16a	Bolt	-	4A3277F01	1						\vdash
16b	Truss Head Screw	4×8, SS	7C32-0408	2						Т
17	Bracket / Coil	GS; See A. Ice Cuber Assem- bly, item B1 for mounting screws		2						
18	Drier	-	4A2663-01	1						
19	Nylon Tie	PLWP3H-TL	8911-0301	1						
20	Check Valve	-	4A1373-01	2						
21	Coupling (male)	5782-8-10	434072-01	1						
22	Tube Holder - L (liquid line)	GS; See A. Ice Cuber Assem- bly, item B2 for mounting screws		1						

Title: B	. Refrigeration Circuit Model:	KMS-750MLH	<u> </u>							
					 	Requi	red N	umber		
Index No.	Description	Material or Model Number	Part Number	S-0						
23	Coupling (male)	5782-10-11	4A3826-01	1						
24	Tube Holder - L (suction line)	GS; See A. Ice Cuber Assem- bly, item B2 for mounting screws	438245-02	1						
25	Service Valve	-	4A3420-01	2						
25a	Hex Head Tapping Screw	1/4×20×1/2	7B03l1412	2						
26	Bracket - Service Valve	GS	4A3892-01	2						
26a	T2 Screw	4×8, SS	7P32-0408	4						
27	Copper Tube (A)	-	3A3258G01	1						
28	Copper Tube (B)	-	4A3555-01	1						
29	Copper Tube (C)	-	3A3299G01	1						
30	Copper Tube (D)	-	3A3259G01	1						
31	Copper Tube (E)	-	4A3556G01	1						
32	Copper Tube (F)	-	3A4421G01	1						
33	Copper Tube (G)	-	3A4422G01	1						
34	Copper Tube (J)	-	3A3262G01	1						
35	Heat Exchanger	-	3A3263G01	1						
36	Cable Tie	-	8911-0200	10						
37	Holder - Expansion Valve	-	3A0107-01	2						
38	Holder Thermistor	COPPER	438247-01	1						
39	Insulation - Thermistor	-	427441-01	1						
40	Hose Clamp	No. 6806	443461-02	2						
41	Thermistor	-	429006-05	1						
42	Insulation Tubing	L=365	7762-2943	1						
43	Insulation Tubing	L=70	7762-2943	1						
44	Elbow	-	4A1059-01	1						

C. Water Circuit 1/2 KMS-750MLH S-0

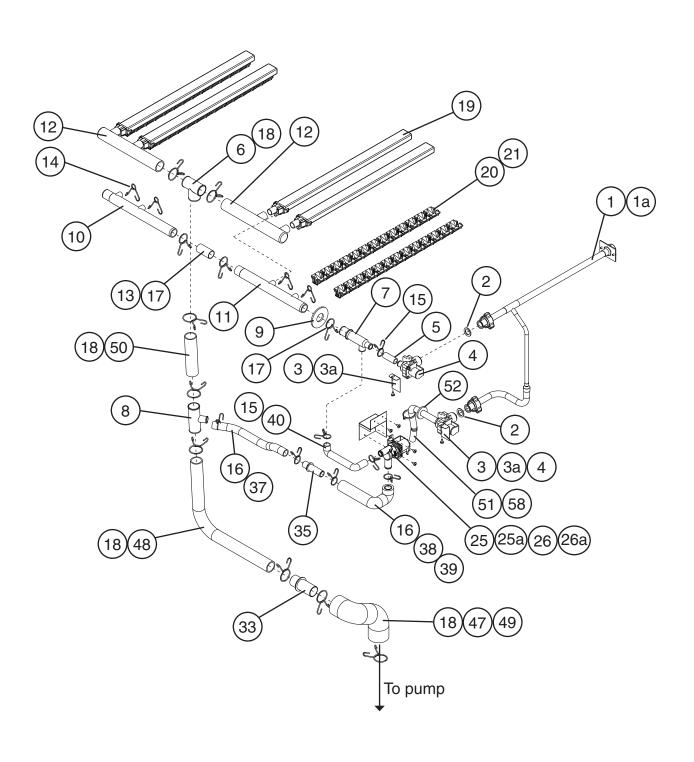

C. Water Circuit 2/2 KMS-750MLH


S-0 46) 45 (56)(56a)(56b)(63 56)56a)56b)(63) 43 (28 (55) 54 To Discharge (36) 23 Hose (A) 16 (64 **(H)**(H1) 32 62 29 (59a) 59 (61a) (61) 65 24 (57)(57a) (60) 12

	. Water Circuit Model: KMS-7	JOINETT	i								
						Requi	red N	umber I	T	ı	
Index		Material or									
No.	Description	Model Number	Part Number	S-0							
H	Pump Motor Assembly	HS-0205	2A3237A02	1							\vdash
H1	Truss Head Screw	5×8, SS	7C32-0508	2							\vdash
	1	100, 00	. 002 0000								
1	Water Supply Pipe	-	3A3273G01	1							П
1a	T2 Screw	4×8, SS	7P32-0408	2							Г
2	Rubber Gasket	-	413854-03	2							
3	Water Valve Bracket	GS	3A3274-01	2							
3a	Truss Head Screw	4×8, SS	7C32-0408	2							П
4	Water Valve (harvest & fill)	J248-032	3U0111-02	2							П
5	Vinyl Hose	L=40	7716-1216	1							П
6	Distributor (A)	-	4A3528-01	1			Î			Î	
7	Distributor (B)	-	3A3239-01	1			Î			Ì	
8	Distributor (C)	-	4A3530-01	1							
9	Flange	-	439267-02	1							П
10	Distributor Hose (A)	-	3A4409-01	1							
11	Distributor Hose (B)	-	3A4409-02	1							П
12	Distributor Hose (C)	-	3A4410-01	2							П
13	Joint Pipe	-	439297-02	1							
14	Hose Clamp	13.5 mm, SS	427443-07	4							
15	Hose Clamp	18 mm, SS	427443-05	5							
16	Hose Clamp	20 mm, SS	427443-06	6							Г
17	Hose Clamp	25 mm, SS	427443-03	3							Г
18	Hose Clamp	32 mm, SS	427443-09	8							П
19	Spray Tube	1-	437049G04	4							П
20	Spray Guide (A)	5 cups	208586-01	8							П
21	Spray Guide (D)	3 cups	208586-04	4							П
22	Pump - Drain Pan	SS	3A3275G01	1							П
22a	Truss Head Screw	4×8, SS	7C32-0408	2							П
23	Vinyl Hose	L=50	7716-1519	2							П
24	Drain Pipe	SS	4A3568G01	1							
25	Water Valve (wash & drain)	-	4A3722-01	2							
25a	Truss Head Screw	4×8, SS	7C32-0408	4							
26	Drain Valve Bracket (A)	GS	4A3569-01	1							
26a	Truss Head Screw	4×8, SS	7C32-0408	2							
27	Drain Valve Bracket (B)	GS	4A3570-01	1							
27a	Truss Head Screw	4×8, SS	7C32-0408	2							
28	Tank	-	1A1146G01	1							
29	Suction Hose (A)	-	3A3234-01	1							
30	Suction Hose (B)	-	4A3534-01	1							
31	Insulation Tubing	L=125	7762-3555	1							
32	Pipe (A) - Evaporator Case	-	4A3524-01	1							
33	Pipe (C) - Evaporator Case	-	4A3526-01	1							
34	Pipe (D) - Evaporator Case	-	4A3527-01	1							
35	Pipe (E) - Evaporator Case	-	4A3765-01	1							
36	Insulation Tubing	L=60	7762-2040	1							

						Reaui	red N	umber		
						110 90.		1		
Index No.	Description	Material or Model Number	Part Number	S-0						
37	Vinyl Hose	L=320	7716-1519	1						
38	Hose - Inlet	-	3A3496-01	1						
39	Insulation Tubing	L=200	7762-2030	1						
40	Hose - Outlet	-	3A3497-01	1						
41	Vinyl Hose	L=45	7716-1519	1						
42	Drain Hose (to overflow cap)	-	4A3536-01	1						
43	Overflow Cap	-	2A3215-01	1						
44	Vinyl Hose	L=80	7716-1216	1						
45	Cube Guide	-	1A0966-01	2					Î	
46	Separator - Tank	-	2A3220-01	1				İ		
47	Discharge Hose (A)	-	4A3532-01	1				İ		
48	Discharge Hose (B)	-	4A3533-01	1				İ		
49	Insulation Tubing	L=230	7762-3555	1						
50	Vinyl Hose	L=124	7716-2732	1						
51	Inlet Hose	-	4A3535-01	1						
52	Flange	-	4A3573-01	1						
53	Drain Hose	-	4A3537-01	1						
54	PVC Pipe	-	433509-03	1						
55	Drain Hose	-	434808-01	1						
56	Side Seperator	-	3A3235-01	2						
56a	Collar	ABS	435269-01	4						
56b	Flat Head T2 Screw	4×12, SS	7P22-0412	4						
57	Motor Cover	GS	4A3586-01	1						
57a	Truss Head Screw	4×8, SS	7C32-0408	2						
58	Cable Tie	-	8911-0200	1						
59	Float Switch	-	468264-01	1						
59a	Truss Head Screw	4×8, SS	7C32-0408	2						
60	Connector - Float Switch	-	3A4169-01	1						
61	Pipe Stopper	GS	4A3767-01	1						
61a	T2 Screw	4×8, SS	7P32-0408	1						
62	Hose - Float	-	4A3766-01	1						
63	Thumbscrew	-	415949G10	2						
64	Hose Clamp	27 mm, SS	427443-08	1						
65	Pipe (F) - Evaporator Case	-	4A4294-01	1						

D. Control Box Assembly KMS-750MLH

S-0

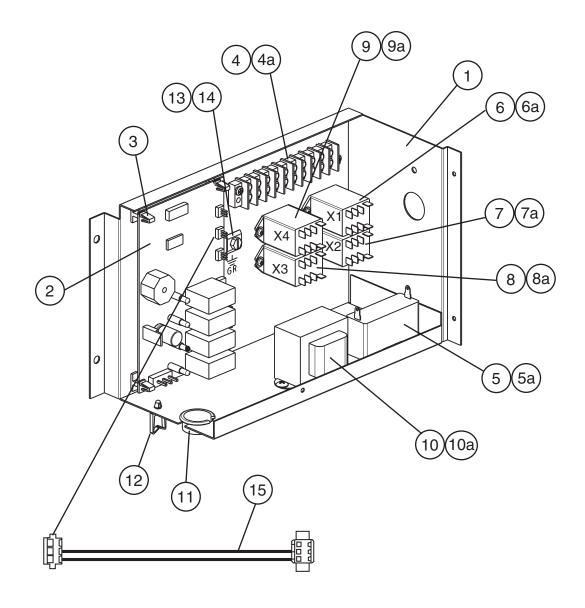


Title: D	. Control Box Assembly Mode	: KMS-750MLH	l							
						Requi	red N	umber		
Index No.	Description	Material or Model Number	Part Number	S-0						
1	Control Box	GS	2A3234-01	1						
2	Control Board	-	2A3792-01	1						
3	Board Support	CBLS37-M	4A0336-03	4						
4	Terminal Block	-	4A4201-01	1						
4a	Pan Head Screw	4×12 SS	7C12-0412	2						
5	Capacitor (pump)	10.0MFD, 250V	443192-01	1						
5a	T2 Screw	4×10 SS	7P32-0410	1						

Title: D.	. Control Box Assembly Mode	I: KMS-750MLH								
						Requi	red N	umber		
Index No.	Description	Material or Model Number	Part Number	S-0						
6	Relay - X1 Harvest Water Valve	LY2F AC120V	406132-07	1						
6a	Tapping Screw	3×8	431415-01	2						
7	Relay - X2 Pump Out - Pump Motor & Drain Water Valve	LY2F AC120V	406132-07	1						
7a	Tapping Screw	3×8	431415-01	2						
8	Relay - X3 Drain Water Valve Cut-out	LY2F AC120V	406132-07	1						
8a	Tapping Screw	3×8	431415-01	2						
9	Relay - X4 Pump Out - Drain Water Valve Cut-in	LY2F AC120V	406132-07	1						
9a	Tapping Screw	3×8	431415-01	2						
10	Transformer	-	3A0172-01	1						
10a	T2 Screw	4×8 SS	7P32-0408	2						
11	Bushing	OCB-1000	428394-05	1						
12	Wire Saddle	-	4A0338-02	1						
13	Square Washer	BRASS	433537-02	1						
14	Screw - Grounding	5×8	433304-02	1						
15	Wire Harness (bin control)	L=90	4A2200G04	1						


E. Switch Box Assembly KMS-750MLH

S-0

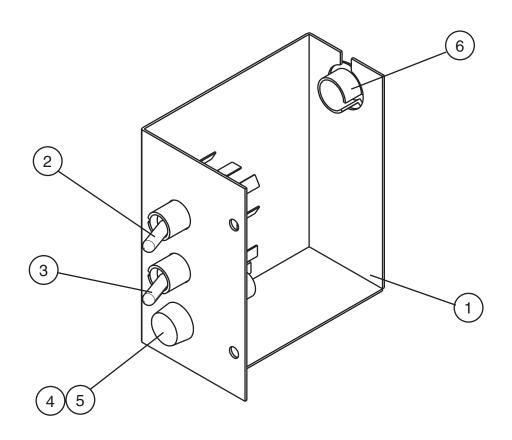


Title: E.	Switch Box Assembly Model	: KMS-750MLH								
						Requi	red Nı	umber		
Index		Material or								
No.	Description	Model Number	Part Number	S-0						
1	Switch Box	GS	3A3277-01	1						
2	Toggle Switch (control)	-	443119-01	1						
3	Toggle Switch (service)	-	4A0985-01	1						
4	Fuse Holder	HTB82I 1/4 × 1-1/4	4A3449-01	1						
5	Fuse	AGC-10 250V 10A	4A0893-07	2						
6	Bushing	OCB-750	428394-01	1						

F. Bin Switch Unit KMS-750MLH S-0

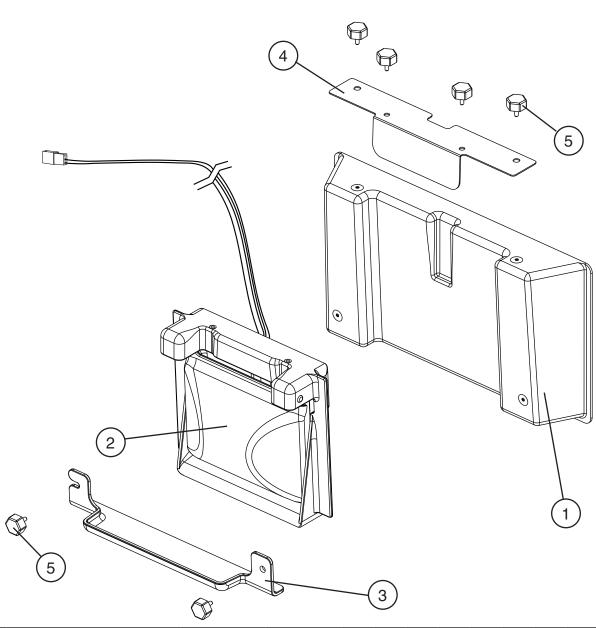


Title: F.	Bin Switch Unit Model: KMS-7	750MLH								
						Requi	red N	umber		
Index		Material or								
No.	Description	Model Number		S-0						
1	Mount - Bin Switch	-	3A3278G01	1						
2	Bin Control	-	464574-01	1						
3	Switch Guide	-	3A2643-01	1						
4	Switch Cover	SS	4A3580-01	1						
5	Thumbscrew - Black	-	415949G08	6						

G. Label Location KMS-750MLH

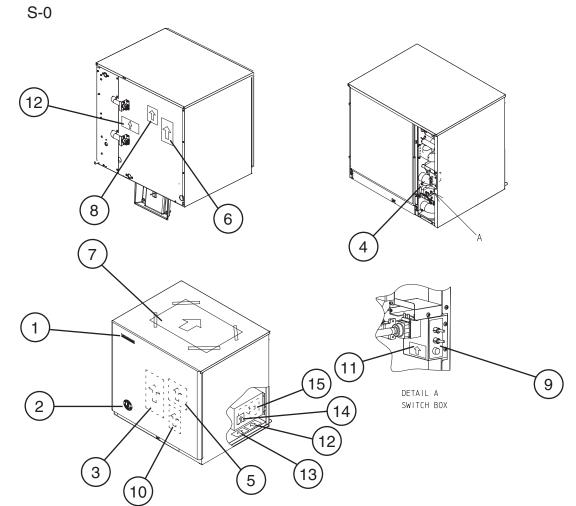

Title: G	Label Location Model: KMS-	750MLH	,							
						Requi	red N	umber		
Index No.	Description	Material or Model Number	Part Number	S-0						
1	Emblem	-	4A0560-01	1						
2	Label - Penguin - HA (R)	-	4A0526-01	1						
3	Maintenance Label	-	2A3296-01	1						
4	Caution Label (K)	-	439150-01	1						
5	Wiring Label	-	2A4197-01	1						
6	Nameplate	-	2A3298-02	1						
7	Instruction Sheet	-	2A3299-01	1						
8	Instruction Label	-	444575-01	1						
9	Manual Label	-	3A3331-01	1						
10	Rating Label	-	2A3300-02	1						
11	Label - Fuse	-	4A2817-01	1						
12	Label - 404A	-	4A0960-01	2						
13	Caution Label	-	4A4209-01	1						
14	Label - Alarm	-	4A3517-01	1						
15	Label - Control Board	-	3A3444-01	1						


H. Pump Motor Assembly KMS-750MLH S-0

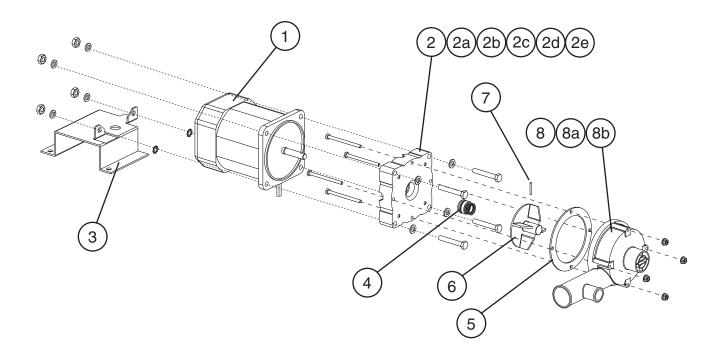

Title: H	. Pump Motor Assembly Mode	el: KMS-750MLF	1							
						Requi	red N	umber		
Index No.	Description	Material or Model Number	Part Number	S-0						
1	Pump Motor	M91A60SP201	2U0106-01	1						
2	Pump Flange	-	215662-01	1						
2a	Hex Bolt	6×40, SS	7B02-0640	4						
2b	Flat Washer	M6, SS	7W22-0600	4						
2c	Tooth Washer	M6, SS	7R22-0600	2						
2d	Split Lock Washer	M6, SS	7L22-0600	4						
2e	Hex Nut	M6, SS	7N12-0600	4						
3	Pump Motor Bracket	SS	3A3252-01	1						
4	Mechanical Seal	-	4A3820-01	1						
5	Packing	NSF	428547-01	1						
6	Impeller	ABS	428548-01	1						
7	Pin	-	4A0648-01	1						
8	Pump Housing	-	2A3214-01	1						
8a	Hex Bolt	4×55, SS	7B02-0455	4						
8b	Hex Flange Nut	4, SS	7J02-0400	4						

J. Accessories and Packaging KMS-750MLH

S-0

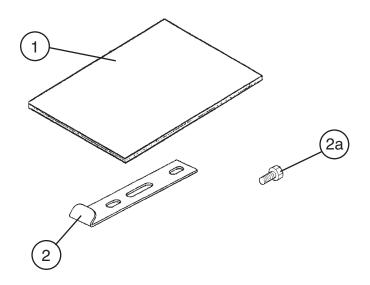

Title: J.	Accessories and Packaging	Model: KMS-750	OMLH									
		Material or Model Number	Part Number	Required Number								
Index No.	Description			S-0								
1	Instruction Manual	-	91A1YC10A	1								
2	Universal Brace	GS	4A0363-01	1								
2a	Hex Bolt	5×12 SS	7B02-0512	1								
Packaging			2A4083A01									
1	Pallet	-	2A3684-04	1								
2	Tray Assembly - Bottom	-	1A1223G04	1								
3	Corner Post	-	3A4040-06	3								
4	Tray Assembly - Top	-	1A1222G04	1								
5	Carton	-	2A3862-41	1								
6	Plastic Support	-	2A3865-09	4								
7	Corner Post	-	3A4040-07	1								
8	Post Support	-	4A4211-01	1				Ì		Ì		